


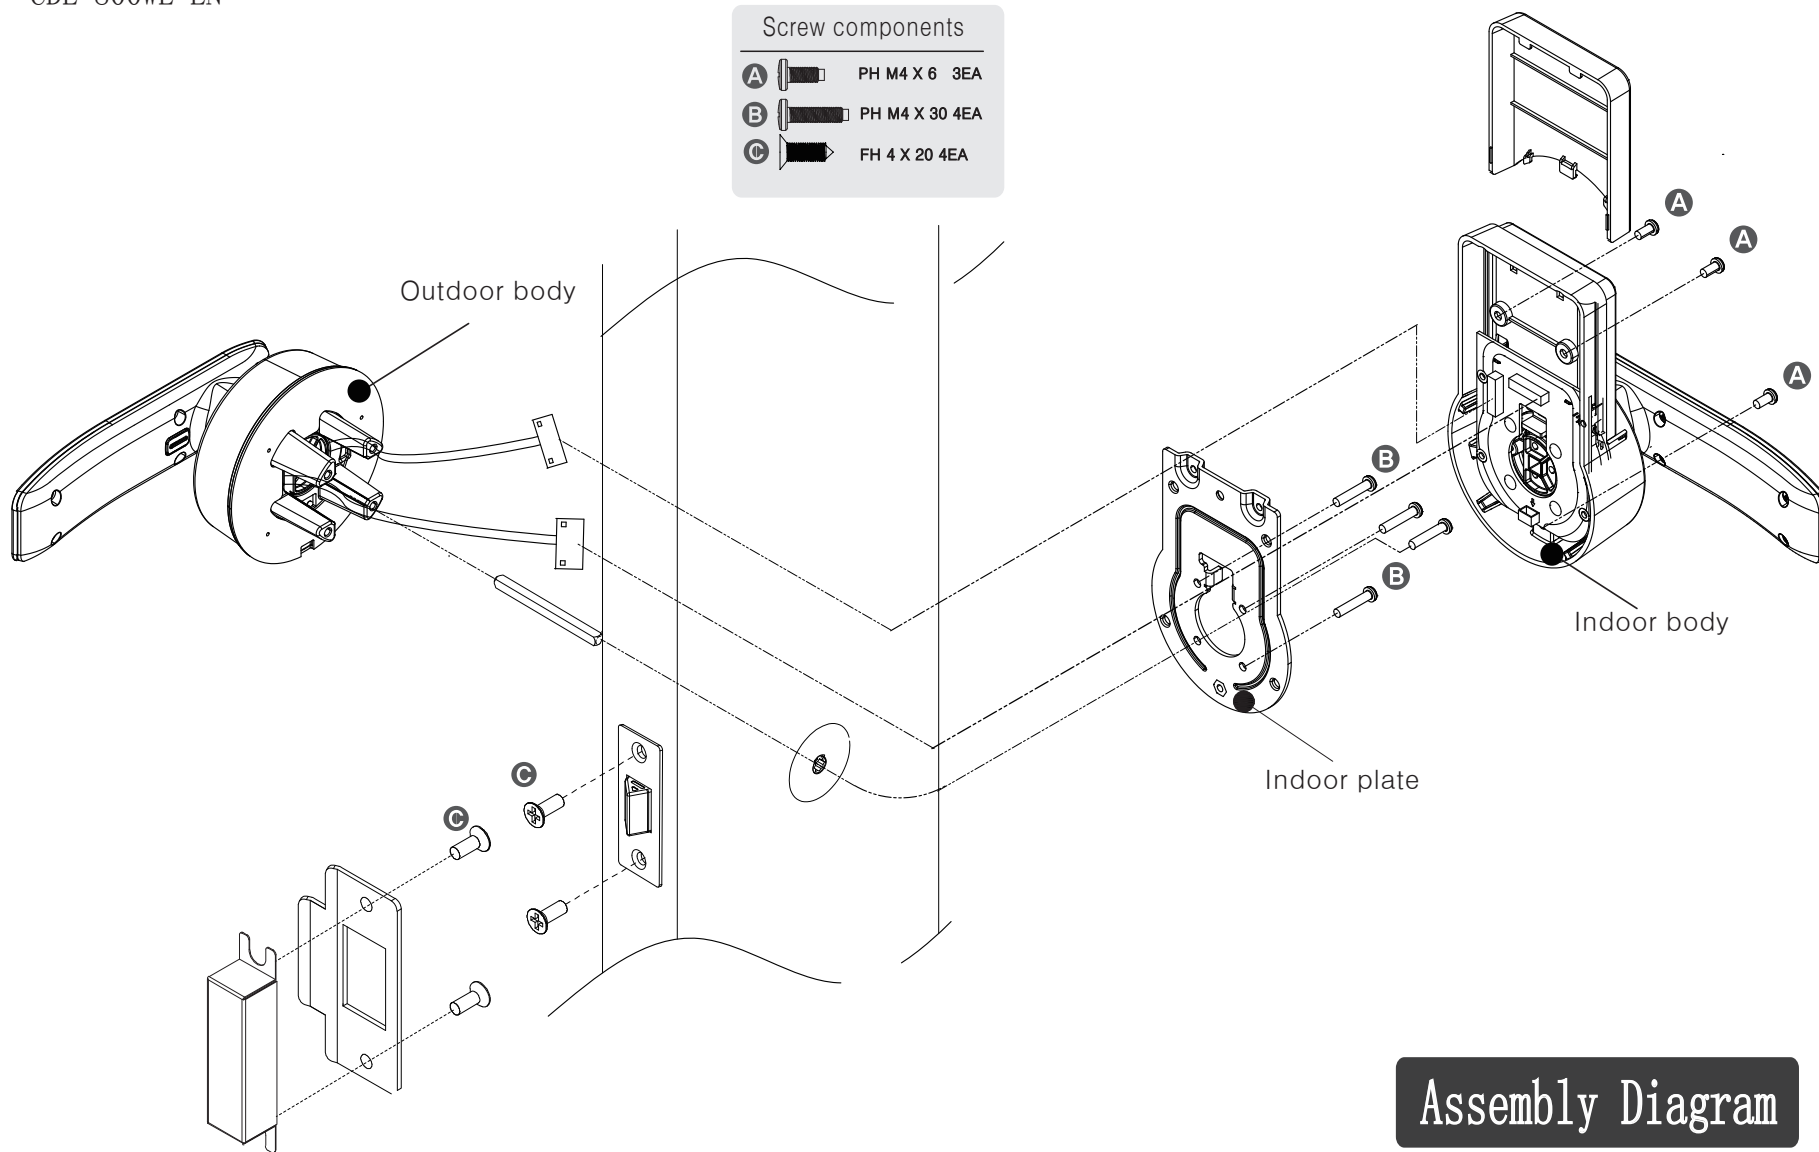



CDL-800WL EN

Screw components


- | | | |
|---|---|----------------|
| A |  | PH M4 X 6 3EA |
| B |  | PH M4 X 30 4EA |
| C |  | FH 4 X 20 4EA |




Assembly Diagram

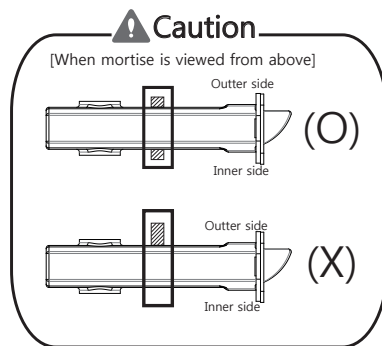


1. Install Mortise

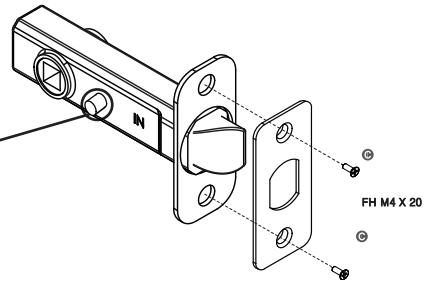


2. Install handle shaft

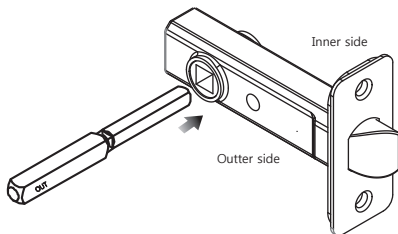


3. Position indoor and outdoor body

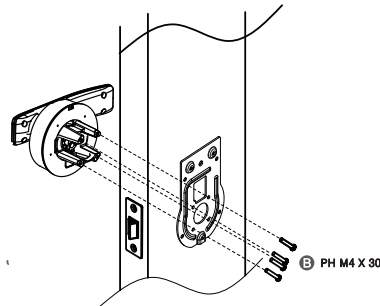


4. . Connect cable

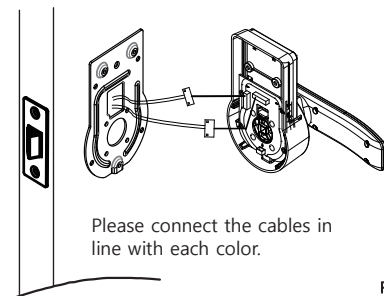

5. Connect indoor and outdoor body

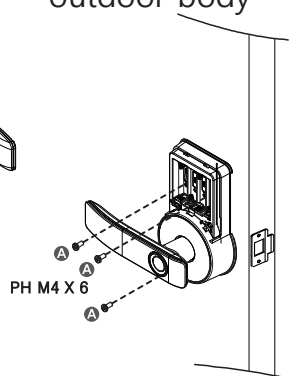

6. Install Stricker

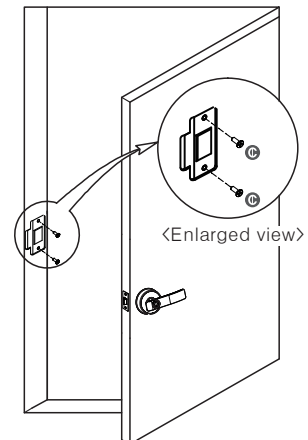

Check point

- 1) Check whether to lock automatically.
– If the door is not normally locked, please check auto-lock setting.
- 2) Check if Automatic/Manual lock works properly.
- 3) After registering the fingerprint/smartkey, confirm that the door is open with the fingerprint/smartkey registered.
- 4) Explain sufficiently to customers about registration of Fingerprint/smart key, password change.
- 5) Check if the door with the password registered is open.
– The password must be registered directly by customer.
- 6) Explain the internal double lock.
- 7) Explain battery replacement timing and emergency power supply.
- 8) Surely, deliver the warranty certificate and instruction manual that you have written exactly to customer.

※Setting of direction of handle

- ①[Registration] button in inner side
- ②[Start] button in outer side
- ③[Registration] button in inner side

* Please press button in the order below if the number plate is shown inside out after installation.

Caution | Please insert batteries with the door open at installation.