

CDL-210P/210R

USER MANUAL

Durable Door lock without worry about A/S

Durable body of metal

Auto lock/rewind/double lock function

Use of 3D touch and imaginary function to secure password

Password/Smart key/Fingerprint can be registered multiple

Multi-level volume control / Selectable silence function

Light button that is visible even in dark places

Emergency power function (9V square battery)

High-voltage protection/Fire protection/Anti-hack system

Intuitive registration UI

COMMAX Co., Ltd.

Thank you for purchasing COMMAX products.

Before you use, please read this manual and use

correctly. COMMAX is not responsible for any safety

accident due to abnormal operation of the products.

Due to non-key door lock, it may cause destruction of digital door lock when it is in trouble.

Warning for Safety


These warnings are to secure user's safety and prevent the possible loss of property. Please read carefully below to use the product in a correct manner.

- * Do not disassemble, repair or modify the device by any unauthorized person.
- * This product is for indoor, we do not guarantee any operation at other environment.
- * Please use the product after reading User's Manual.
- * Do not press the buttons with any tools(Ex. Awl, Pins...)
- * Change your access code from time to time for your safety.
- * Do not impact on the device.
- * Be careful that leakage or rupture may occur when inserting a battery in wrong direction.
- * Be careful that water should not seep into the device.
- * When replacing a battery, change all the batteries with new alkaline batteries.
- * Please wipe the product with soft, dry towels.
- * Please keep product warranty card for A/S.
- * Do not use this product with other purposes except digital door lock function.



Products specifications and components


Sort		Specifications
Installation condition	General fire door door	Thickness 40mm ~ 80mm
Opening method	Password	4~12 digits (Up to 4 can be registered)
	Smart Key	It can register within 30
	Fingerprint	It can register within 100
	Wallpad Interlock	Optional(CDL-447)
Rated voltage	DC 6V	LR6 1.5V Aasized alkaline batteries 8
Emergency power	DC 9V	Alkaline batteries 8 (Separate purchase)
Type of product	Fire-proof, Temperature-sensitive, Key, Primary keylock / D-F-T-K-M	
Size of product	Size	80 X 382 X 71 (mm)
	Weight	3.5 KG(Actual product standard)
Operation guarantee temperature		- 40℃ ~ 70℃
High temperature detection	Temperaature-sensitive	60℃ ± 10℃
Material	Outbody	AL,ZN,ABS,PC
	Inbody	AL,ZN,ABS,PC

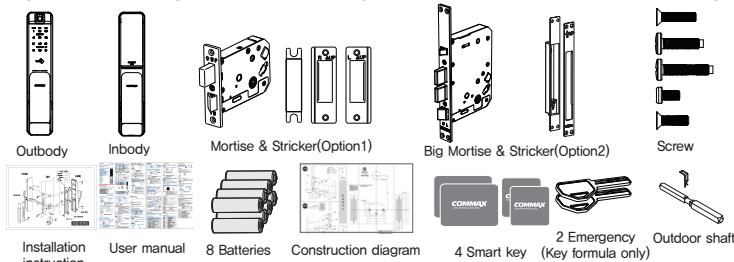

*The components of the product may change depending on the installation environment.


Outdoor Names and Functions

No	Name	Specifications
1	Name board	Enter the number when registering or changing password.
2	Battery warning light	Turns on with an audible alarm at low voltage.
3	Smart key input unit	It is the place where smart keys are recognized to open the door. You can open the door by registering the smart key or touching the registered smart key.
4	Emergency hole	Key formula only
5	Outdoor handle	It is Used to open or close doors from outdoors.
6	Emergency power terminal	In case the battery is completely discharged, you can use 9V battery then, the power will be on.
7	Fingerprint input unit	You can register your fingerprint, open the door by using the fingerprint registered.

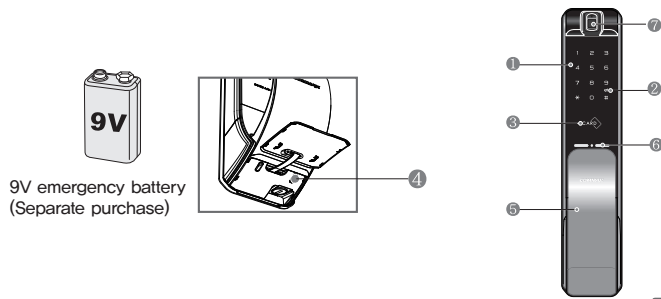


Indoor Names and Functions

No	Name	Specifications
1	Battery cover	This cover protects the batteries and the registration button.
2	Interlocking pack	Receive (CDL-447, optional)
3	Registration button	It is used to register or change password or smart key
4	Mortise	It is attached to the side of the door and closes or locks the door.
5	Dead bolt (Square locking type)	It locks the door by locking it on the door frame.
6	Latch bolt	It serves to keep the door shaken
7	Alkaline AA battery	It is a power source that operates the door lock.
8	Double lock button	It can be used to lock the door so that it can not be opened outside, such as during nighttime hours that require attention.
9	Indoor handle	It is used to open or close the door indoors.

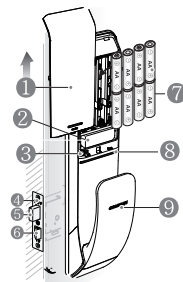

MORTISE TYPE

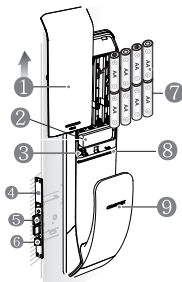


BIGMORTISE TYPE

How to register fingerprint

1. Press [registration] button

Beep
Open the battery cover and press [registration] button

2. Press [1] button in the number plate of outdoor side

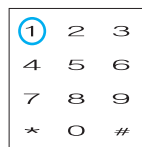

3. Contact fingerprint to be registered to fingerprint input unit



After contacting the fingerprint to the fingerprint input part four times, register the registration by pressing the [register] button on the room body.

Reference

1. Up to 100 fingerprints can be registered.
2. If registration is not in progress for 20 seconds, registration will be canceled.


How to register and change password

Be sure to register your password with the door open.


1. Press [registration] button

2. Press [2] button in the number plate of outdoor side

Beep
Open the battery cover and press [registration] button

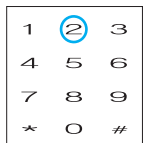

3. Enter new password

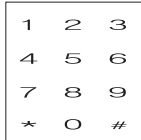

After entering the new password(4~12 digits), press * button and the confirmation tone sounds and registration is completed. Press the * button once more to end registration.

Reference

1. When adding the password, repeat the above item 3 before the number plate lamp turns off.
2. Up to 4 password can be registered

Cautions

1. If you register a new password, the existing password will be automatically deleted.
2. Do not use consecutive numbers when registering your password.


How to register Smart key

When registering or re-registering a smart key, you must register all the smart keys you have at once. Also registered smart keys are door lock only. It may not work when used with other products.


1. Press [registration] button

2. Press [3] button in the number plate of outdoor side

Beep
Open the battery cover and press [registration] button

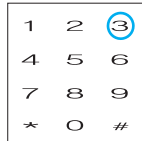

3. Contact smart key to smart key input unit

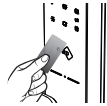

If you touch the smart key to be registered one by one, you will hear a confirmation sound every time you touch it. Registration is completed by clicking the [Registration] button on the indoor side body.

Reference

1. When adding the password, please repeat the above item 3 before the [License plate lamp] turns off.
2. Up to 30 smart keys can be registered.

Cautions


1. When registering a new smart key, the existing smart key is automatically deleted.

How to register the linker (optional)


1. Press [registration] button

Beep
Open the battery cover and press [registration] button

2. Press [4] button in the number plate of outdoor side

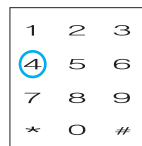

 3. Press the [Register] or [OP / CL] button on the linker



After pressing the front door button of the wall pad(video phone), press the [Registration] or [OP / CL] button of the interlocker when the standby mode is canceled.

Reference

1. You can register up to 5 interlocks.
2. Repeat step 3 when registering the linker.

How to delete fingerprint, smart key, linker

1. Press [registration] button

Beep
Open the battery cover and press [registration] button

2. Press number in the number plate

- Delete Smart key : No 7 button
- Delete the interlock : No 8 button
- Delete fingerprint : No 9 button

3. Press #button




Press and hold the [#] button for 5 seconds to delete the registered fingerprint, smart key or interlock.

How to set auto lock, manual lock


Make sure to turn off the Mortise Square Lock on the indoor body.

1. Enter password

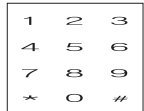


Touch the outdoor license plate to turn on the LED and enter the registered password.

2. Press [#] button

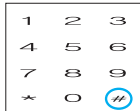

Press the [#] button twice in succession


3. Press [4] or [7] button and press registration button

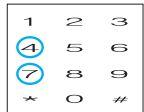

Auto lock setting: Press the [4] button and press the register button to set the auto lock function after a confirmation tone sounds.
Manual lock setting: After pressing the [7] button and pressing the register button, the manual lock function is set after a tone is heard.


How to set and dismiss 3D touch

1. Enter password

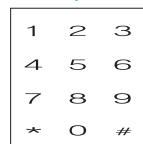

Touch the outdoor license plate to turn on the LED and enter the registered password.

2. Press the [#] button twice in succession, then press the 0 button.

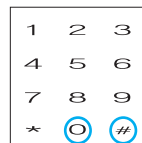

3. Press [Registration] button

Beep
Open the battery cover and press the [Registration] button.

When you press the [Registration] button on the outdoor side body, the 3D touch function is turned on or off.

- Set tone: Piriricic
- Off sound: Piric

Reference

1. It is a function to strengthen the security of password and it is a function to set a virtual number instead of the original number when the password is registered and authenticated for more than 1 second.
Ex) When 1 is long pressed: It is recognized as a virtual number other than 1.
2. Combined with the imaginary function of this product, password security is further strengthened.
3. You can set each number and you can check that the lamp blinks when you press for more than 1 second.
4. 3D touch mode is turned off at the factory.


Cautions

1. When the 3D touch mode is released, the password is reset to "1234".
2. In case of master registration / deletion, fire / accident, etc., it is recognized as normal number mode.

Open the door in outdoor


Method 1 Open the door by password

1. Enter password

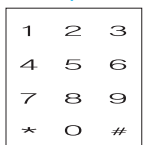

Touch the outdoor license plate to turn on the LED and enter the registered password.


2. Press [*] button

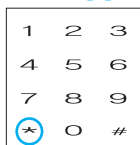

When you press the [*] button, you will hear a confirmation tone and then open when you open the door.


Method 2 Open door with smart key

1. Contact smart key to smart key input unit

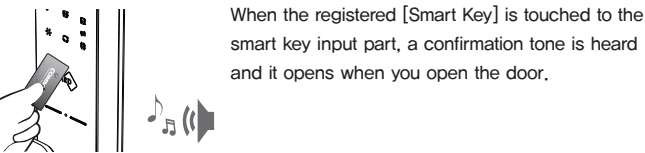

Method 3 Open door by interlocking(Optional)

1. Press the [OP/CL] button on the interlock

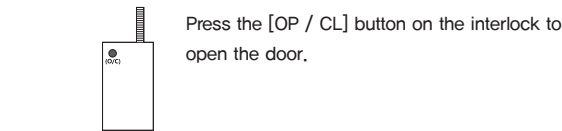

Door locking in indoor and outdoor

Set lock	Indoor	Outdoor
Auto lock	Automatically locked after 2 seconds after	Locked automatically after 2 seconds after door closes
Manual lock	Press the [double lock] button on the indoor side body	Touch the number plate during 2 seconds

Reference


- When you press [double lock] button in manual lock mode, you will hear a "beep" buzzer sound when the door is locked and inform you that the door is lockedv.

Internal double lock setting

It is a function that can not open a door with a password or a smart key outside the door.


Setting

- While the door is locked, press and hold the [double lock] button for 3 seconds

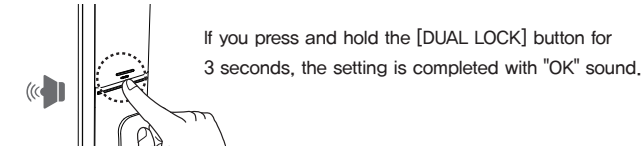

How to release internal

- Push or pull the knob from inside to open the door
- Press the [double lock] button inside and dismiss

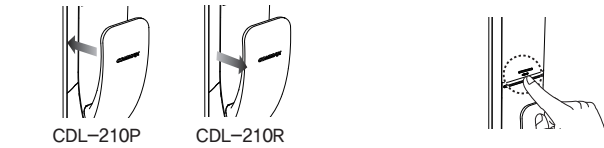

Sound Pause Mode

Temporary silence function (1 time) regardless latest volume setting

How to

- Touch number plate and press [#]
- Press [*] after password or, contact Card / Fingerprint to open the door.

Reference

Sound is back to the original volume if pause mode is operated once

High Temperture Alarm


Once extremely high temperature is detected (60°C ± 10°C), locker is automatically released to open the door with huge sound to secure user's safety.

Emergency Power

When door can not be opened due to fully discharged battery.


1. Contact the terminals of 9V battery to emergency power outlet

Press [Password] and [*] to open the door while contacting terminals of 9V battery to emergency power outlet.

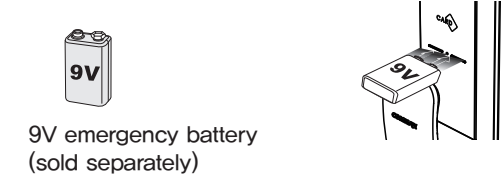

Emergency Key

When door is not opened due to malfunction.

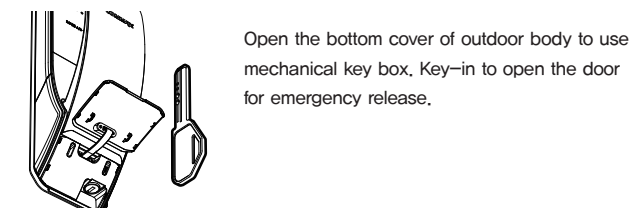


Caution


- Your mechanical key is recommended to be stored outside of the door for emergency use.

Deactivation from outdoor unit

1. Input Password

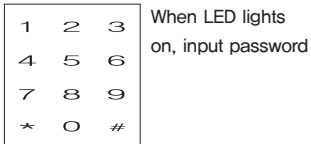


2. Press [#], [9] button

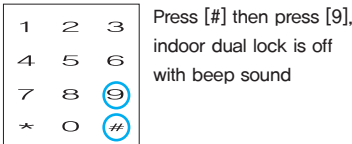


Dual authentication / Registration authentication setting


1. Input password

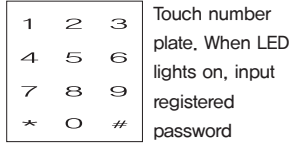

2. Press [#] button twice, press [1] or [8] button.

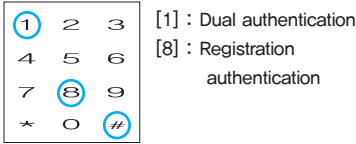

3. Press [Regist.] button.

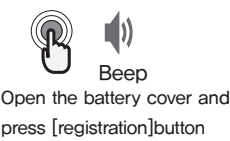


Once press [Regist.] button on outdoor body, Dual authentication or registration authentication mode is on or off.
Active: Sound – Bee ri rik
Deactive: Sound – Bee rik

Reference

- If dual authentication mode is activated, Password + Card should be confirmed to open to door. (door open by BLE keeps available.)
- If registration authentication mode is activated, first authentication by existing password should be done for the next step.
 - No dual authentication / registration authentication is activated if factory setting.
 - To deactivate dual authentication / registration authentication, repeat the same procedure for activation


Burglar Alert

If door to be opened by abnormal operation such as door gap break through, burglar alert rings with more than 80db noisy sound.

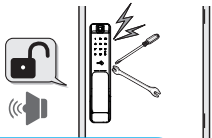

How to deactivate burglar or temperature alert

Remove batteries or [password + *], [smartkey touch], [contact fingerprint]
* if temperature is too high, no deactivation.

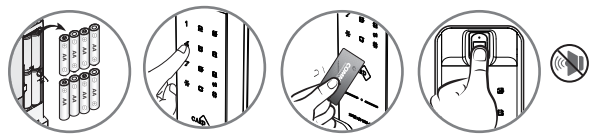


Factory Reset Mode


1. Press [Regist.] button.



2. Input "123578951" when number plate lights on

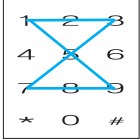

3. Press [#] button for 2 secs.

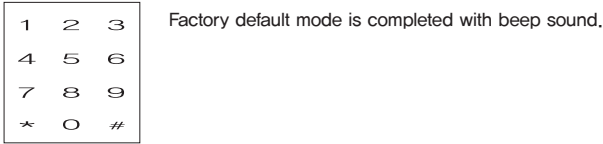

Caution

- All settings back to the default after factory reset

Anti-mischief alert and 1 minute pause

If unregistered [password], [smartkey], [fingerprint] keeps used more than 5 times continuously, freeze operation for 1 minute with alert sound.




Reference

- To deactivate alert sound, open the door from indoor body handle
- If mechanical key is available, deactivate alert sound by key

Deadbolt Jam alert

When deadbolt is jammed during door open/close, alert sound of bee bee bee bee rings 3 times.

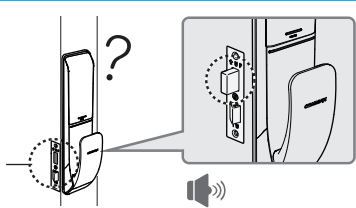

Caution


- If no sound deactivation or door lock malfunction, product installed position has to be adjusted. Please contact your local installer or service provider.

Volume Adjustment

Deadbolt of indoor unit must be come out from mortise before setting

How to


1. Input Password

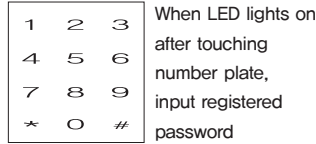

2. Press [#] button



3. Press [3] or [6] to adjust volume

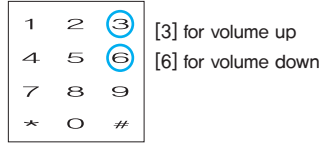

Reference

- Available total 8 levels of volume sound
- If sound pause mode, numbers are only flicking without sound

Battery Replacement Alert

If battery alert light is on on number plate or beep sounds ring, battery has to be replaced. All batteries must be replaced with new one at once.



Caution

- Lifetime of battery can be varied according to manufacturers, date of production, working condition. (Expected lifetime : 10 months assuming no wireless operation, AA type alkaline 8ea, 10 times per one day use)
- If battery liquid leaks out, product can be damaged. Regular checking is recommended - every 6 months.
- Battery lifetime might be shortened if wireless module is activated.

Door Open Alert during automatic lock setting

To inform door open status during automatics lock setting, alert sound rings 2 times with each 15 seconds interval if door opened.



Self-Diagnosis Table by each LED number flicking

To see the status of product by means of checking flicking number

ACTION	SELF-DIAGNOSIS
Flicking ALL LEDs	Anti-mischief alert and 1 minute pause
Flicking LED number 2	Error on password, card, fingerprint set
Flicking LED number 3	Full of registered fingerprint. Full of registered password, card
Flicking LED number 4	Deadbolt Jam
Flicking LED number 5	Burglar Alert
Flicking LED number 6	Unregistered password, card, fingerprint
Flicking LED number 7	Already registered address
Flicking LED number 8	Fire Alarm
Flicking LED number 9	Dual lock from Indoor unit
Flicking LED number 0	Malfunction of fingerprint module

Summary of how to use

Function	Default	
Fingerprint registration		[Registration] button => [1] button => Fingerprint registration 4 times => [Registration] button
Delete all fingerprints		[Registration] button => [9] button => [8] button More than 5 seconds
Password change	1234	[Registration] button => [2] button => Password to register => [*] button => [*] button
Card registration	None	[Registration] button => [3] button => Card (tag) recognition (Continuous registration) => [Registration] button
Delete all card		[Registration] button => [7] button => [8] button More than 5 seconds
Interlocking registration	None	[Registration] button => [4] button => Remote control [OP / CL] => [Registration] button
Delete the all interlocking		[Registration] button => [8] button => [8] button More than 5 seconds
Open the door indoors		Door lock handle: Push the manual opening / closing device towards the door.
Close the door indoors		Auto lock: Auto lock when the door is closed
Open the door outdoors		Manual Locking: Press the [Internal Dual Locking] button
Close the door outdoors		Password: LED of window number LED ON => Enter password => Press [*] button
Auto lock setting	Automatic locking	Card: Card contact with card recognition
Manual lock setting		Emergency key: Rotate after inserting emergency key into Emergency key insertion part
Set dual authentication mode	Release	Auto lock: Auto lock when the door is closed
Set registration authentication mode	Release	Manual locking: Touch the license plate of the window for 2 seconds
3D touch authentication mode	Release	Enter the password => Press the [8] [8] button => Press the [4] button => Press the [Registration] button
Internal dual lock LED setting	Release	Enter the password => Press the [8] [8] button => Press the [7] button => Press the [Registration] button
Internal force lock setting		Set sound (beep sound), release sound (beep sound)
Release internal force lock		Enter the password => Press the [8] [8] button => Press the [5] button => Press the [Registration] (On/Off)
Etiquette mode function	Normal mode	Press and hold the [Internal force lock] button for 3 seconds
Buzzer volume setting		Indoors: manual opening and closing with door open and door closing
Release alarm sound		Outdoors: Enter the password => Press the [8] button => Press the [9] button