

CONNECT2GO - INSTALLATION MANUAL



TECHNICAL SPECIFICATIONS

- Power Consumption: 65mA
- Terminal Connection
- Dimensions: 10.5 cm (4-3 / 16 ") x4.2cm (1-11 / 16").

COMPATIBLE PANELSDSCHONEYWELL: Vista 10P, Vista 15P,

Vista 20P, Vista 21IP and Vista 48LA

KEYBUS The **KEYBUS 4-wire connection is used by the panel to communicate with the Connect2go Module. Connect the terminals**

RED, BLK, YEL, and GRN from the device to the corresponding terminals on a panel

It requires a Patch Cord (cat 5, 5e, cat 6, etc), which works with the 568 a and 568 b standards. **This cable is required to connect to an available port on the router or other device on the DHCP network server .**

CONNECTING THE CONNECT2GO MODULE TO THE CONTROL PANEL

1. Disconnect the power source from the panel.
2. Connect the Connect2go Module to the Panel's KEYBUS terminals.
3. Connect a Patch Cord (network cable not included) with an RJ-45 connector to the port of an available router, switch or hub with server DHCP available.
- Four. Reset the panel power source.

Note: The device is automatically identified in the alarm system as a PC5400 / DVACS Module.

REGISTRATION OF ACCOUNT

1. Access the website <http://www.inalarm.com/connect2go> from any computer.
2. Enter customer key and password, in the menu appears an account registration section where you enter the company data or user who is going to administer the account, as well as an e-mail providing licenses (username and password)
3. Go to the page <https://myconnect2go.com> and go to the PRO LOGIN section to register your cards, for more details see the monitorist manual

ESP PLUG-IN FOR WEBSITE AND REMOTE ACCESS

1. Visit the page <https://myconnect2go.com> from any Smartphone with internet access.
2. Once you have entered the platform, follow the instructions in the User Manual to manipulate the device.

IT INCLUDES:

- Connect2go module
- Mounting bracket.
- Module Registration Manual

Tabla 1: Descripción de los LED

Name	Colour	Description M2G
KEYB	GREEN (GREEN)	OFF - Connect2Go Module is not connected FLASHING - The Connect2Go Module has been detected in the network, but does not have an IP address assigned SOLID - Normal Operation
OPERA	NET (RED)	OFF - M2G Module is not connected to power electric FLASHING - Normal Operation SOLID - Hardware Failure
ACT	NET (RED)	FLASHING - Exercise of Ethernet. Alone entry of packages
LINK	GREEN	OFF - No Internet Connection ON - Internet Connection Established

This device is compatible with Part 5 of the FCC Rules. his operation this hold to the following terms: (1) East device no can cause interference damaging and (2) East device should to accept any interference you receive, including interference that may cause unwanted operation.

