

User Manual Saturn-S1000 Series

Applicable Model(s): Saturn-S1000, Saturn-S1200

Date: December 2024

Doc Version: 1.0

English



Copyright © 2024 ZKTECO CO., LTD. All rights reserved.

Without the prior written consent of ZKTeco, no portion of this manual can be copied or forwarded in any way or form. All parts of this manual belong to ZKTeco and its subsidiaries (hereinafter the "Company" or "ZKTeco").

Trademark

is a registered trademark of ZKTeco. Other trademarks involved in this manual are owned by their respective owners.

Disclaimer

This manual contains information on the operation and maintenance of the ZKTeco equipment. The copyright in all the documents, drawings, etc. in relation to the ZKTeco supplied equipment vests in and is the property of ZKTeco. The contents hereof should not be used or shared by the receiver with any third party without express written permission of ZKTeco.

The contents of this manual must be read as a whole before starting the operation and maintenance of the supplied equipment. If any of the content(s) of the manual seems unclear or incomplete, please contact ZKTeco before starting the operation and maintenance of the said equipment.

It is an essential pre-requisite for the satisfactory operation and maintenance that the operating and maintenance personnel are fully familiar with the design and that the said personnel have received thorough training in operating and maintaining the machine/unit/equipment. It is further essential for the safe operation of the machine/unit/equipment that personnel has read, understood and followed the safety instructions contained in the manual.

In case of any conflict between terms and conditions of this manual and the contract specifications, drawings, instruction sheets or any other contract-related documents, the contract conditions/documents shall prevail. The contract specific conditions/documents shall apply in priority.

ZKTeco offers no warranty, guarantee or representation regarding the completeness of any information contained in this manual or any of the amendments made thereto. ZKTeco does not extend the warranty of any kind, including, without limitation, any warranty of design, merchantability or fitness for a particular purpose.

ZKTeco does not assume responsibility for any errors or omissions in the information or documents which are referenced by or linked to this manual. The entire risk as to the results and performance obtained from using the information is assumed by the user.

ZKTeco in no event shall be liable to the user or any third party for any incidental, consequential, indirect, special, or exemplary damages, including, without limitation, loss of business, loss of profits, business interruption, loss of business information or any pecuniary loss, arising out of, in connection with, or

relating to the use of the information contained in or referenced by this manual, even if ZKTeco has been advised of the possibility of such damages.

This manual and the information contained therein may include technical, other inaccuracies or typographical errors. ZKTeco periodically changes the information herein which will be incorporated into new additions/amendments to the manual. ZKTeco reserves the right to add, delete, amend or modify the information contained in the manual from time to time in the form of circulars, letters, notes, etc. for better operation and safety of the machine/unit/equipment. The said additions or amendments are meant for improvement /better operations of the machine/unit/equipment and such amendments shall not give any right to claim any compensation or damages under any circumstances.

ZKTeco shall in no way be responsible (I) in case the machine/unit/equipment malfunctions due to any non-compliance of the instructions contained in this manual (ii) in case of operation of the machine/unit/equipment beyond the rate limits (iii) in case of operation of the machine and equipment in conditions different from the prescribed conditions of the manual.

The product will be updated from time to time without prior notice. The latest operation procedures and relevant documents are available on http://www.zkteco.com

If there is any issue related to the product, please contact us.

ZKTeco Headquarters

Address ZKTeco Industrial Park, No. 32, Industrial Road,

Tangxia Town, Dongguan, China.

Phone +86 769 - 82109991

Fax +86 755 - 89602394

For business-related queries, please write to us at: sales@zkteco.com.

To know more about our global branches, visit www.zkteco.com.

About the Company

ZKTeco is one of the world's largest manufacturer of RFID and Biometric (Fingerprint, Facial, Finger-vein) readers. Product offerings include Access Control readers and panels, Near & Far-range Facial Recognition Cameras, Elevator/floor access controllers, Turnstiles, License Plate Recognition (LPR) gate controllers and Consumer products including battery-operated fingerprint and face-reader Door Locks. Our security solutions are multi-lingual and localized in over 18 different languages. At the ZKTeco state-of-the-art 700,000 square foot ISO9001-certified manufacturing facility, we control manufacturing, product design, component assembly, and logistics/shipping, all under one roof.

The founders of ZKTeco have been determined for independent research and development of biometric verification procedures and the productization of biometric verification SDK, which was initially widely applied in PC security and identity authentication fields. With the continuous enhancement of the development and plenty of market applications, the team has gradually constructed an identity authentication ecosystem and smart security ecosystem, which are based on biometric verification techniques. With years of experience in the industrialization of biometric verifications, ZKTeco was officially established in 2007 and now has been one of the globally leading enterprises in the biometric verification industry owning various patents and being selected as the National High-tech Enterprise for 6 consecutive years. Its products are protected by intellectual property rights.

About the Manual

This manual introduces the operations of **Saturn-S1000 Series**.

All figures displayed are for illustration purposes only. Figures in this manual may not be exactly consistent with the actual products.

Features and parameters with \star are not available in all devices.

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into Dangers and Cautions:

Dangers: Neglecting any of the warnings may cause serious injury or death.

Cautions: Neglecting any of the cautions may cause injury or equipment damage.

Symbols

Convention	Description	
*	Dangers: Follow these safeguards to prevent serious injury or death.	
\triangle	Cautions: Follow these precautions to prevent potential injury or material damage.	

Dangers:

- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- The equipment must be connected to an earthed mains socket-outlet.
- Shock hazard! Disconnect all power sources before maintenance.
- Do not touch the bare metal contacts of the inlets after the circuit breaker is turned off. Electricity still
 exists.
- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- All the electronic operation should be strictly compliance with the electrical safety regulations, fire prevention regulations and other related regulations in your local region.
- Please use the power adapter, which is provided by normal company. The power consumption cannot be less than the required value.
- Do not connect several devices to one power adapter as adapter overload may cause over-heat or fire hazard.
- Please make sure that the power has been disconnected before you wire, install or dismantle the
 device.
- If the top caps should be open and the device should be powered on for maintenance, make sure:
 - 1. Power off the fan to prevent the operator from getting injured accidentally.
 - 2. Do not touch bare high-voltage components.
 - **3.** Make sure the switch's wiring sequence is correct after maintenance.
- Please make sure that the power has been disconnected before you wire, install or dismantle the
 device.

 If smoke, odors or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the device yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)
- The Terminal PE of the switch should be connected to a ground wire.

ACautions:

- Instructions must be read before installation. Please follow these instructions carefully, incorrect installation could affect gate operation.
- When mounting and positioning this product please ensure the power cable is unplugged.
- The motor cover will need to be removed to mount the motor to the mounting plate. Electrical-related operation of the main unit can only be made by a licensed electrician.
- To prevent injury, this equipment must be securely attached to the floor/base of the turnstile in accordance with the installation instructions.
- Keep straight down when moving or using the equipment.
- Never place the equipment in an unstable location. The equipment may fall, causing serious personal injury or death.
- Cold-rolled SPCC steel may be corroded in some circumstances. You need to clean and care the device
 by using the stainless steel cleaner. It is suggested to clean the device every month.
- Do not drop the device or subject it to physical shock, and do not expose it to high electromagnetism radiation. Avoid the equipment installation on vibrations surface or places subject to shock (ignorance can cause equipment damage).
- Do not place the device in extremely hot (refer to the specification of the device for the detailed operating temperature), cold, dusty or damp locations, and do not expose it to high electromagnetic radiation.
- The device cover for indoor use shall be kept from rain and moisture.
- Exposing the equipment to direct sun light, low ventilation or heat source such as heater or radiator is forbidden (ignorance can cause fire danger).
- Do not aim the device at the sun or extra bright places. A blooming or smear may occur otherwise (which is not a malfunction however), and affecting the endurance of sensor at the same time.
- Please use the provided glove when open up the device cover, avoid direct contact with the device cover, because the acidic sweat of the fingers may erode the surface coating of the device cover.
- Please use a soft and dry cloth when clean inside and outside surfaces of the device cover, do not use alkaline detergents.
- Please keep all wrappers after unpack them for future use. In case of any failure occurred, you need to return the device to the factory with the original wrapper. Transportation without the original wrapper may result in damage on the device and lead to additional costs.

• Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.

- Biometric authentication products are not 100% applicable to anti-spoofing environments. If you require a higher security level, use multiple authentication modes.
- Do not stay in the lane when the device is rebooting.
- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES
 ACCORDING TO THE INSTRUCTIONS.
- SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.
- The instructions shall require connection of the equipment protective earthing conductor to the installation protective earthing conductor.

Table of Contents

1 OVERVIEW	
1.1 Key Features	11
1.2 SPECIFICATION	12
1.2.1 APPEARANCE	12
1.2.2 SYSTEM COMPONENTS	15
1.2.3 TECHNICAL SPECIFICATIONS	17
1.3 MECHANICAL SYSTEM	19
1.4 ELECTRONIC CONTROL SYSTEM	19
2 AUTHENTICATION METHODS	21
2.1 CARD VERIFICATION★	21
2.2 QR CODE VERIFICATION★	22
2.3 FACIAL VERIFICATION★	22
3 INSTALLATION	24
3.1 Installation Tools	24
3.2 Installation Requirements	24
3.3 Installation Environment	24
3.4 Installation Cabinet	25
3.5 ACCESSORY INSTALLATION	31
3.5.1 FACIAL AUTHENTICATION TERMINAL INSTALLATION	31
3.5.2 SWING BARRIER INSTALLATION	32
4 TERMINAL DESCRIPTION	33
4.1 Main and Sub Board	33
4.2 IR Sensor Board	34
5 WIRING INSTRUCTIONS	35
5.1 Main-sub Location	35
5.2 SLOTTING POSITION	36
5.3 WIRING METHODS	36
5.4 Main and Sub Connection Cable	37
5.5 POWER AND AIR SWITCH WIRING	37
5.6 System Wiring Diagram	39
6 OPERATION PROCESS	40

7 MACHINE OPERATION	42
7.1 Operation Buttons Description	
7.2 MENU PARAMETER SETTINGS	42
8 MAINTENANCE	53
8.1 Chassis Maintenance	53
8.2 MOVEMENT MAINTENANCE	53
8.3 Power Supply Maintenance	53
9 TROUBLESHOOTING	54
10 PACKING LIST	55

1 Overview

Unveiling the ZKTeco Saturn Series, an innovative swing barrier turnstile designed for an paralleled passage experience. With its sophisticated design, the Saturn Series is available in range of striking colors including Pearl White (PWH), Space Gray (SGY), Carbon Black (CBK), Bay Blue (BBLE) and Mist Brown (MBW), making it blends seamlessly with both indoor and outdoor applications.

Crafted from cold-rolled SPCC steel (GB700) the chassis features an integrated cover molding process and boasts an IPX4 protection rating, ensuring exceptional resistance to water and dust. The authentication area is enhanced with 2.5D tempered glass, offering superior scratch and wear resistance. The Saturn Series accommodates various credential options, including single lane and dual swing configurations, with support for facial authentication, QR codes, and multi-tech cards.

Additionally, it features four pairs of infrared sensors for dual pinch protection, enhancing safety with locked positions and automatic barrier opening during emergencies.



1.1 Key Features

Innovative Aesthetics

The Saturn series is available in an array of contemporary colors, including Pearl White, Space Gray, Bay Blue, Mist Brown and Carbon black.

Durability

The lid is made using an integrated molding process, achieves an IPX4 protection rating, offering robust defense against water and dust. The product is designed to thrive in extreme conditions, maintaining functionality after an 8-hour period in sub-zero temperatures as low as -30°C.

Material Innovation

The outer surface is treated with electrostatic spraying, which ensures excellent adhesion and prevents paint from dripping. This treatment also aids in thermal regulation, preventing surface burns due to high temperatures. The identification area is elegantly embedded with 2.5D tempered glass, which is resistant to scratches and wear, enhancing the clarity of the identification process.

DC Brushless motor

The Saturn Series uses DC brushless motors, which are stable and reliable, and the movement life reaches 3 million MCBF. Barrier material made of acrylic, the default lane width is 650mm, can be optional 900mm width. Modular design, more convenient replacement and maintenance, more cost saving.

Safety and security


Safety features include a swing arm with the upper edge is more than 800mm from the ground and the lower edge is less than 200mm, allowing normal operation even when submerged in water up to 0.8m, effectively preventing unauthorized crossings. Additionally, the Saturn series is fortified with 4 pairs of infrared sensors for double anti-crushing protection and a leakage protection switch to protect against electrical hazards.


1.2 Specification


1.2.1 Appearance


• Saturn-S1000:

Unit: mm

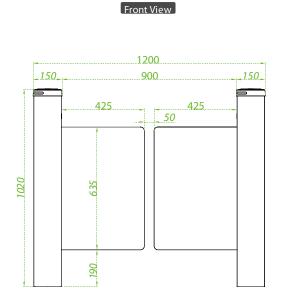

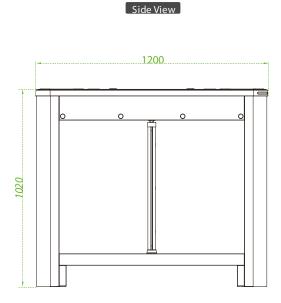

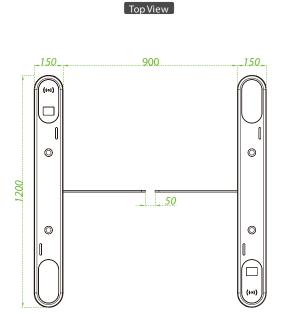


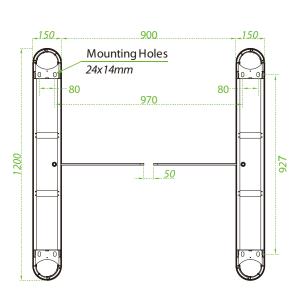


Bottom View


Saturn-S1200:


Unit: mm

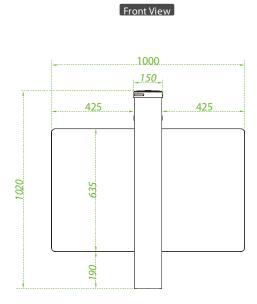

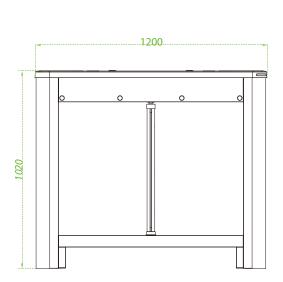

Side View

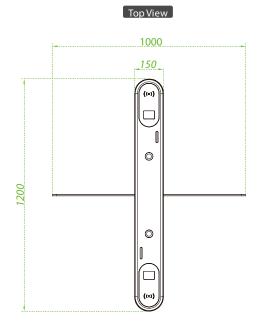


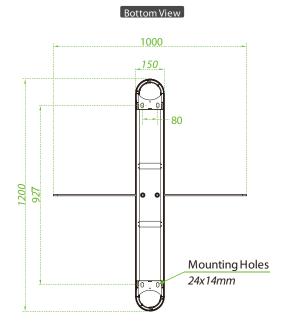


Swing Barriers Specifications

The Saturn-S1000 and Saturn-S1200 can be combined to form a single, dual or multi-lane system, allowing the user to select the appropriate swing barrier size according to actual needs.

1) Single-lane

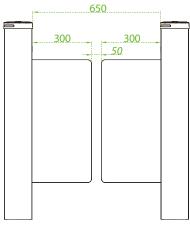




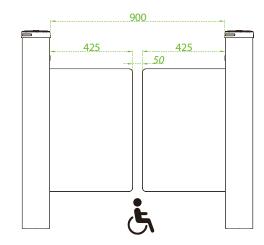


Wide Lane / ADA Lane

2) Dual-lane

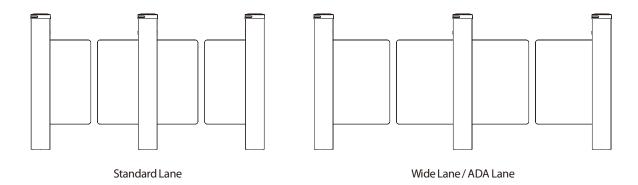


3) Multi-lane

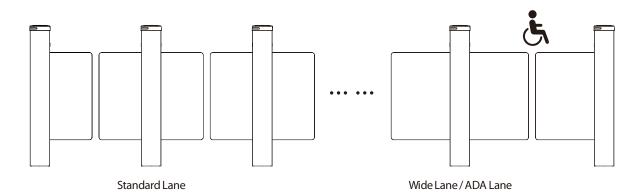


1.2.2 System Components


Saturn-S1000:

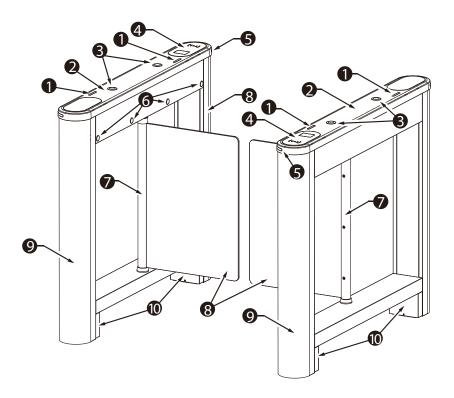

Saturn-S1200:

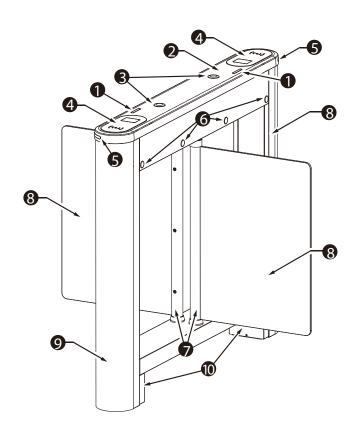

Core Component

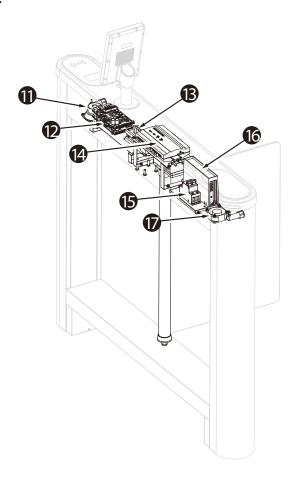

No.	Components	Descriptions
1	Visual Indicator	Top LED indicator: Blue=Door closed /stand by Green=Door opening Red=Door closing/alarm To indicate the passage status
2	Top Lid	Polycarbonate+2.5D Tempered glass
3	Reserve Mounting Holes	Reserved mounting holes for facial authentication devices.
4	Verification Area	Card (RFID)/Facial/QR Code modules are available
5	Entry/Exit Visual Indicator	Slide LED indicator: Green=Lane available Red=Lane unavailable Used to indicate the Entry/Exit passage status
6	Infrared Sensor	It detects the position of the pedestrian and plays a role in ensuring safety and protection
7	Core Component	Operating components of the turnstile

8	Barrier Material	Clear Acrylic(optional: Tempered Glass)
9	Side Lids	Polycarbonate
10	Expansion Screw Cover Plate	Used to cover expansion screws.
11	Speaker	To play alarms and alert voices.
12	Turnstile Controller Board	The system's control center
13	IR Sensor Board	Used to control sensors.
14	Access controller	To verify if the credential is valid. If successful, sends a door open signal to the turnstile controller. Otherwise will not.
15	Air Switch	It provides reliable protection by automatically disconnecting the circuit in the event of overload, short circuit, under voltage, or power loss.
16	Power Supply	110V / 220V ±10% AC @50Hz/ 60Hz
17	Fan	Used for cooling.

1.2.3 Technical Specifications

Model	Saturn-S1000	Saturn-S1200
Audio Indicator	Internal speaker	
Visual Indicator	Top LED indicator: Blue=Door closed /stand by Green=Door opening Red=Door closing/alarm	Slide LED indicator: Green=Lane available Red=Lane unavailable
Display	N	A
Lane Type	Single lane Dual Swing(for additional lane)	
Lane Width	650mm (Standard), 900mm (Optional)	
Barrier Movement Type	Swing	
Motor	DC brushless motor	
Movement Speed	Average 1s per movement (Adjustable open/close timing)	
Movement Accuracy	NA	
Clutch	NA	
Lid Material	Polycarbonate +2.5D tempered glass	
Lid Options Authentication Methods	Streamlined under mount options: QR Code / RFID Surface mount option: Facial Authentication	


Chassis Material	Cold-rolled SPCC Steel (GB70	0) / Polycarbonate (Side Lid)	
Chassis Material	Cold-rolled SPCC Steel (GB700) / Polycarbonate (Side Lid)		
Chassis Colour	Pearl White(PWH), Space Gray(SGY), Carbon Black(CBK), Bay Blue(BBLE), Mist Brown(MBW)		
		· · ·	
Barrier Material	Clear acrylic (635*300mm)(standard	, -	
	(optio		
IR Sensors	4 pa		
Motherboard Function	System configurati	on, access control	
Motherboard	Fire alarm port (rela	y)*1, RS485 port*1	
Communication	•		
Controller	Not equipped, allowing optional from C	3/ InBio Series series or customization.	
Credential Options	Under mount RFID reader: (suppo	rt model: Pro ID Series, KR Series)	
	Under mount fingerprint	reader: FR1200/FR1500S	
	Facial Authentication: 15	passengers per minute	
Flow Rate	QR Code: 30 passe	ngers per minute	
	RFID: 35 passeno	gers per minute	
Accessibility	Adult, children(with care), Disability(with care)		
Power Supply	110V / 220V ±10% AC @50Hz/60Hz		
Power Rating	10VA(Standby) 40VA(Operation)		
Fire Signal	Input for voltage free contact		
Noise Level	Less than 60dB		
MTTR	Less than 60 minutes		
MCBF	3 million		
Weight	50kg	30kg	
Dimension (L*W*H)	1200*150*	1020mm	
	Carton(standard): 1265*220*1070	Carton(standard):	
Dimensions With	mm(2 boxes)	1265*220*1070mm(1 box)	
Packing(L*W*H)	Wooden box(optional):	Wooden box(optional):	
	1300*480*1224(1box) 1300*260*1224(1 box)		
Operating Temperature	-30°C to 70°C		
Operating Humidity	5% to 90% RH (Non-condensing)		
Certifications	CE, FCC		
Ingress Protection Rating	IPX4		
Supported Software	ZKBio CVAccess / ZKBio CVSecurity (Depends on equipped access controller)		
Safatu Ecaturas	Voltage free contact inpu	ut for fire alarm fail state	
Safety Features	automatic swing barrier open during power off		
Security Features	Anti-tailgating, anti-pinch		

Product Delivery	Pre-assembled
Application Environment	Indoor / outdoor (if sheltered)
Site Preparation	Flat & level finished floor (base plate in options for unfinished floor)
Security Level	Low
Emergency Mode	Support (swing barrier open automatically)
Packing Material	Carton(standard) / Wooden(optional)

1.3 Mechanical System

The mechanical system of the turnstile includes the chassis and the core component.

- Chassis: It is a carrier where the Visual Indicator and Infrared Sensor are installed.
- Core Component: The core component mainly consists of the Frame, DC Brushless Motor,
 Rotating Shaft and Swing Barrier.

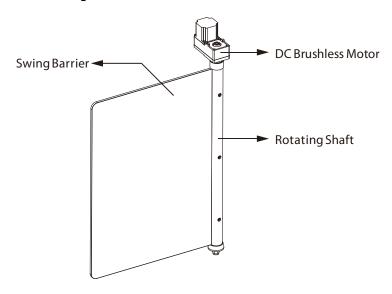

1.4 Electronic Control System


The electronic control system of a turnstile is mainly composed of the Servo Motor Driver, Infrared Sensor, Turnstile Control Board, Traffic Indicator and Alarm.

- Power supply: connected with AC power and converting to DC power for turnstile operating system.
- **Access control system:** including various types of readers such as RFID readers, QR code readers, fingerprint readers, and facial authentication devices, and access controllers.
- **Infrared Sensor:** It detects the position of the pedestrian and plays the role of safety protection.
- Turnstile Control Board: The Turnstile control board is the system's control center that receives


signals from the reader. The IR performs logical calculation and processing of these signals and then sends executive commands to the Traffic Indicator, Electric Motor, and the alarm.

- **Traffic Indicator:** The system will light up the red indicator when the gate is closed. When someone passes the verification, the system will light up the green indicator.
- **Alarm:** The alarm gives the voice and light alarm if the system detects any unauthorized entry to the passage, false direction entry, anti-tailgate and other violations.

Saturn-S1000:

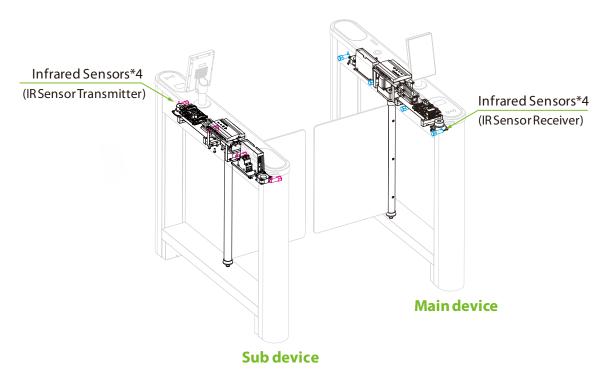

Saturn-S1200:

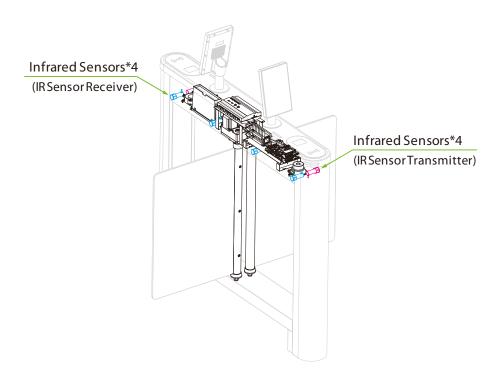


2 Authentication Methods

Users can freely choose to configure the authentication module according to actual needs. The following options are included.


Streamlined Under Mount Options:

RFID only,RFID & QR Code.

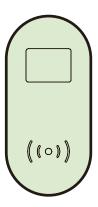

Surface Mount Option:


Mounting Pole (Compatible with ProFace X series / SpeedFace V5L / Elite Pass).

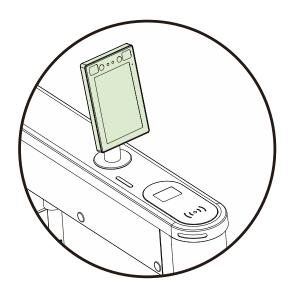


2.1 Card Verification★

When the device is configured with a card swipe module, the Card Verification mode compares the card number in the card induction area with all of the card number data registered in the device and sends it to the Access Controller.

When a user presses his / her card on the card reading area, the device enters card authentication mode.

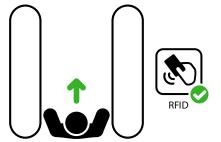


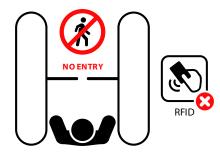


2.2 QR Code Verification★

The QR code Verification mode is to scan the QR code on the user's mobile phone through the QR code scanner and compare the data with the registered QR code, and then sends it to the Access Controller.

When the user places the mobile phone displaying with the QR code on top of the QR code scanner, the device enters the QR code authentication mode.

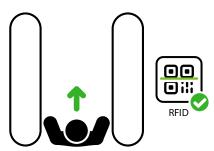

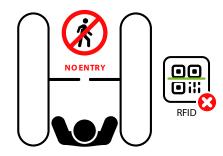

2.3 Facial Verification★


In this verification mode, the device compares the collected facial images with all face data registered in the device and then sends it to the Access Controller.


Try to keep the face in the centre of the screen during authentication. Please face towards the camera and stay still during face registration.

Recommended Standing Posture and Facial Expression:



Note: Please keep your facial expression and standing posture natural while enrollment or verification.

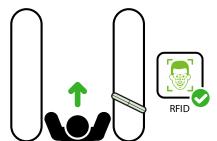

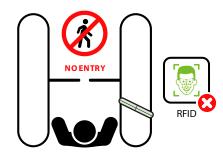

3 Installation

3.1 Installation Tools


- Tapeline
- Marker Pen
- Pencil
- Percussion Drill
- Screwdriver
- Wrench
- Hex Wrench
- Cutting Machine

3.2 Installation Requirements

- 1. It is recommended that the turnstile must be installed on a horizontal solid platform with a height of **50mm to 100mm**.
- 2. It is recommended that the turnstile should not be used in the corrosive environment.
- **3.** Make sure that the ground wire of the system is securely connected to avoid personal injuries or other accidents.
- **4.** After installation, check if the connection has been done correctly at the connecting points of the ground wire, at the connector assemblies and wiring points of the circuits, as well as at each movable part of the turnstile. Any loose nuts, screws and other fasteners should be tightened in time to avoid any failures caused by long-time operations.

3.3 Installation Environment


- **1.** Before installation begins, prepare installation tools, check the device and the accessories, and clear the installation base.
- **2.** Make sure that the appliance is mounted on a concrete surface or other non-flammable surfaces surfaces.
- **3.** The installation position of the turnstile depends on its size. A distance of **100mm** between the turnstile and the wall needs to be reserved for ease of opening the top lid of the turnstile to perform maintenance and adjustment. The reference figure is shown below:

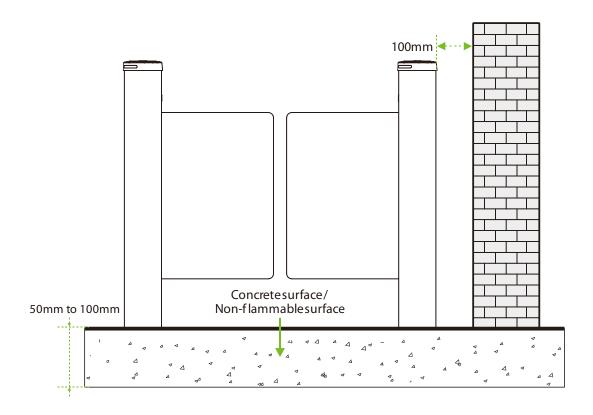


3.4 Installation Cabinet

Stept 1 Remove the Top Lid and Expansion Screw Cover Plate


- 1. Remove the four screws hidden under the top lid, then remove the top lid.
- 2. Remove the four screws of the expansion screw cover plate under the bottom beam, and then remove the cover plate.

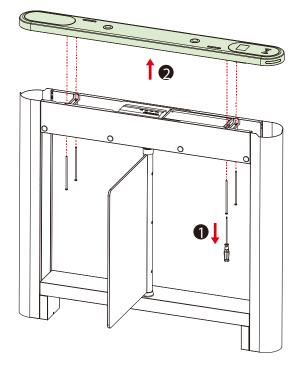

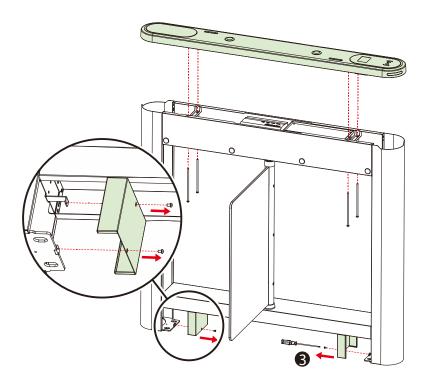


Stept 2 Determine the Mounting Location

- 1. Please refer to the user's manual and complete the **power-on self test** operation before installation.
- 2. Then place the cabinet according to the mounting distances shown in the diagram below. Take care to measure the distance between the bottom inside walls of the cabinets on the entrance side and exit side of the channel and make sure that the measurements are consistent.

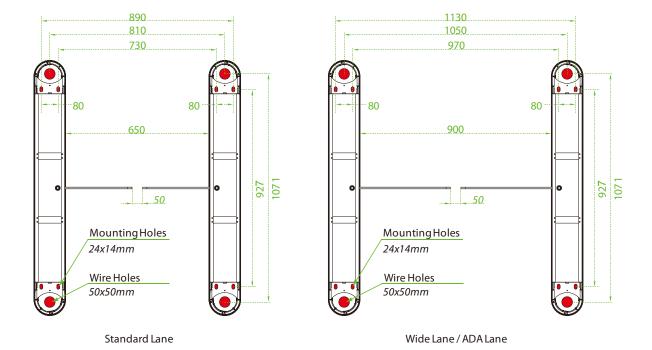


Stept 3 Marker Position

Draw the location of the cabinet with a marker and mark each location of the mounting holes. There will be a total of four mounting holes and two wire holes per cabinet.

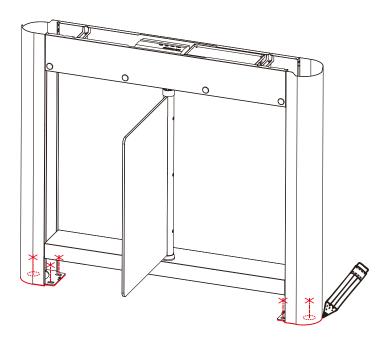

Stept 4 Drill Holes and Place Bolts

- **1.** Using a concrete drill bit, drill the mounting holes 60mm in depth at the center of each marked location.
- 2. Then insert the bolts vertically into the mounting holes as shown at right.
- **3.** Make sure the bolts are placed in place. Use a hammer to tap the bolts into place, if needed.

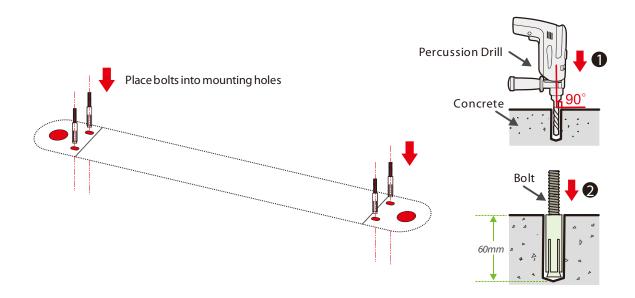


Stept 5 Wireway Laying

 Dig a recess of 50mm depth between the wire holes on both sides of the channel with the dimensions shown below. Recesses can be dug at positions 1 and 2.


- 2. Then lay two 25mm diameter PVC pipes as shown below.
- 3. After threading the cable out of the PVC pipe, pour concrete to fix it in place.

Top View

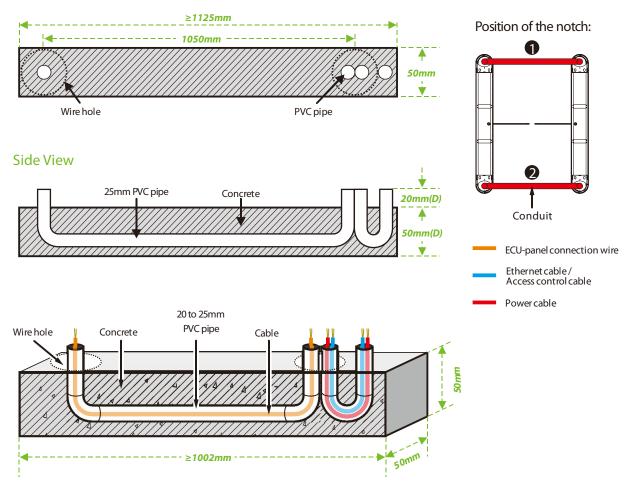


Stept 6 Fixed Cabinet

- 1. After laying the PVC pipe, place the cabinet alignment bolts back into the mounting position.
- 2. Then insert the four washers and nuts into the bolts one by one.
- **3.** Tighten the nuts to hold the cabinet in place. Don't tighten it completely until after you're sure it won't move anymore. The finished result is shown below:

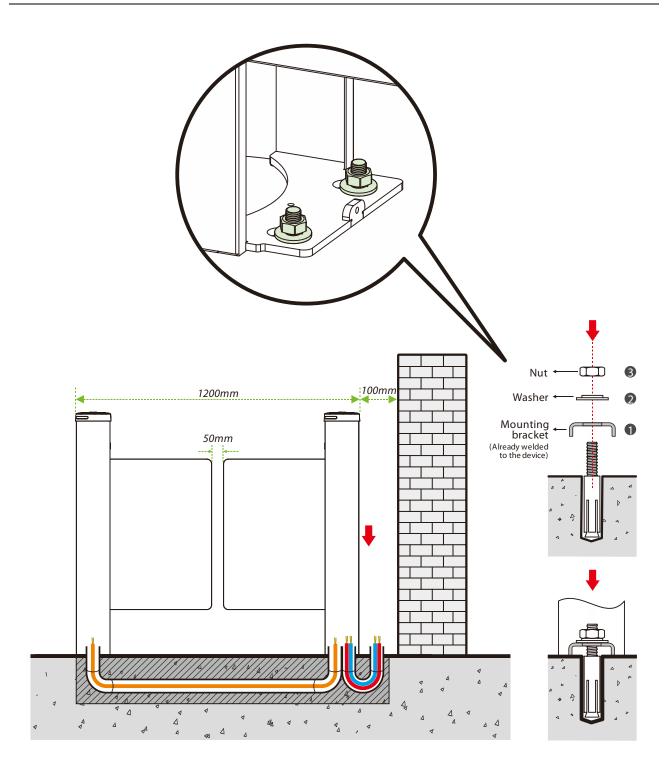


Stept 7 Close the Top Lid and Expansion Screw Cover Plate

Close the top lid and expansion screw cover plate, and secure with screws.

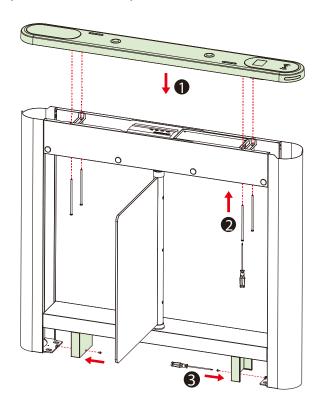

Stept 8 Marking the Warning Line


- 1. It is recommended that warning lines be marked on the ground and used to alert users.
- 2. A warning line can alert users to wait outside the line until the previous user completes the verification process and passes through the turnstile.

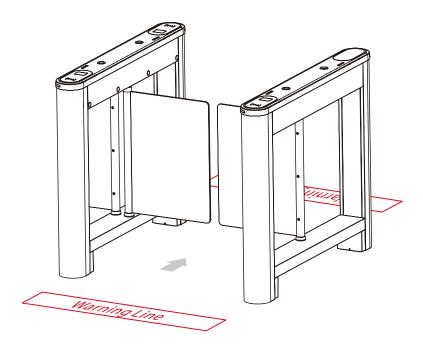

3.5 Accessory Installation

3.5.1 Facial Authentication Terminal Installation


- 1. Remove the top cover plate and route the unit's cables through the pre-drilled mounting holes.
- **2.** Pass the mounting bracket through the mounting holes.
- 3. Place the gasket and nut and tighten the nut to secure the unit.
- **4.** Adjust the unit to a suitable angle.

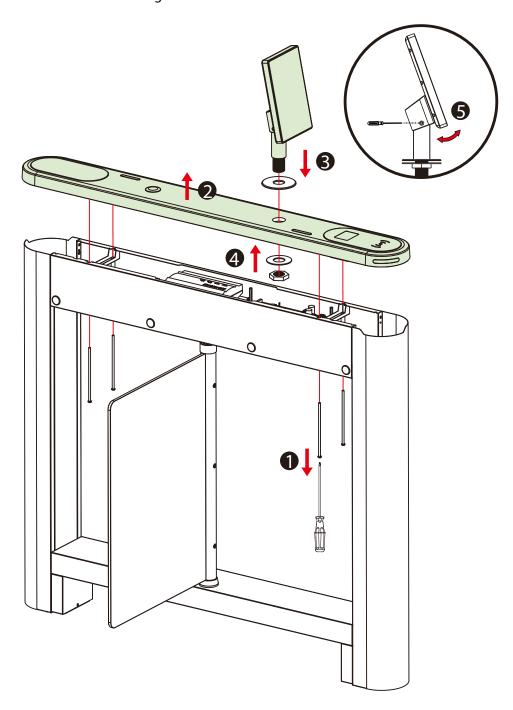

3.5.2 Swing Barrier Installation


1. Push the swing barrier into the clamping block.

2. Lock the swing barrier with the screws.

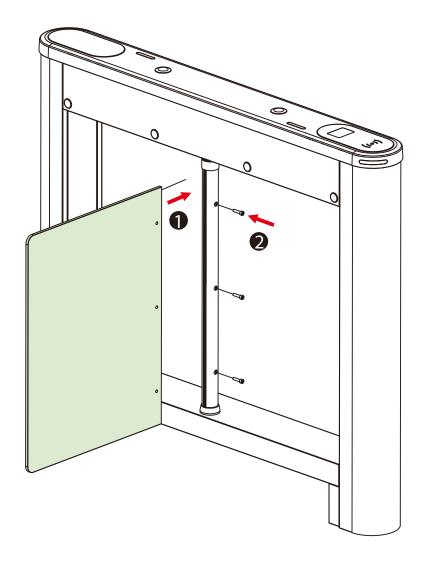

4 Terminal Description


4.1 Main and Sub Board

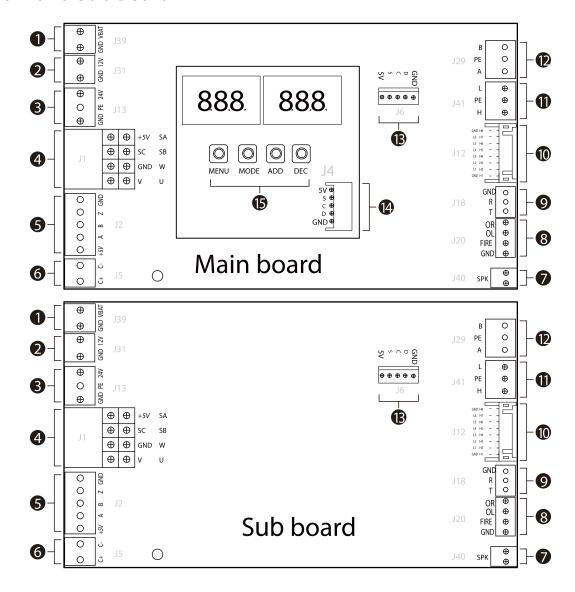

NO.	Terminal	Descriptions
1	GND, VBAT	Fire panel interface
2	GND, 12V	12V DC power supply input
3	GND, PE, 24V	24V DC power supply input
_	+5V, SC, GND, V	Motor interface
4	SA, SB, W, U	
5	+5V, A, B, Z, GND	Encoder interface
6	C+, C-	Clutch
7	SPK	Speaker

8	OR, OL, FIRE, GND	Fire Control Port, Right Open, Left Open
9	GND, R, T	RS232 communication
10	GND, L1-L6, GND; H1-H8	Interface board infrared communication interface
11	L, PE, H	CAN communication interface
12	B, PE, A	RS485 communication
13	5V, S, C, D, GND	Keypad interface
14	5V, S, C, D, GND	Keypad interface
15	MENU, MODE, ADD, DEC	Control buttons for setting menu parameters

4.2 IR Sensor Board

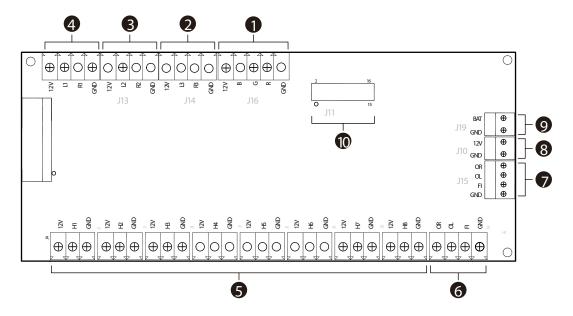


NO.	Terminal	Descriptions
1	12V, B, G, R,GND	Wing arm light bar interface
2	12V, L3, R3, GND	Top light interface
3	12V, L2, R2, GND	Top light interface
4	12V, L1, R1, GND	Top light interface
5	12V, H1-8, GND	Infrared sensor interface
6	OR, OL, FI, GND	External fire port
7	OR, OL, FI, GND	Alarm, fire opening port
8	12V, GND	12V DC power supply input
9	BAT, GND	Backup firefighting power interface
10	J11	Main board communication interface

5 Wiring Instructions


5.1 Main-sub Location

The positions of the main and sub corresponding to single-lane, dual-lane and multi-lane are shown in the figure below.

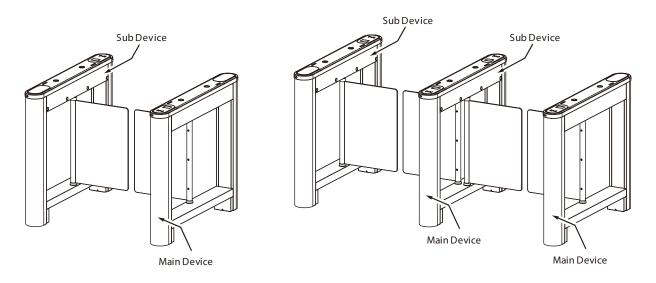

Single-lane


Dual-lane

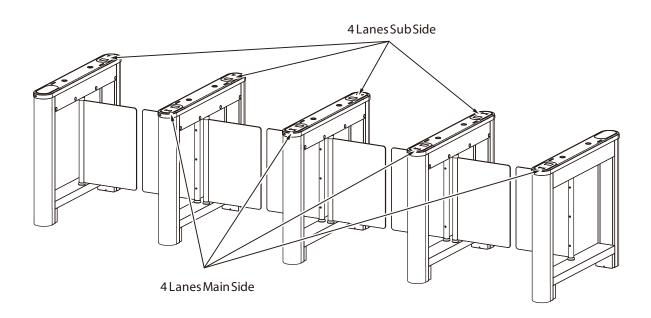

Multi-lane


5.2 Slotting Position

For the different channels, the slotted locations are shown below.

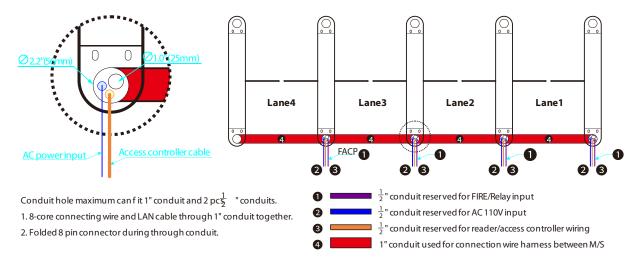


5.3 Wiring Methods

The wiring principle is to connect the main device to the sub device and communicate via the ECU-panel connection wire. Each main device is then powered individually. The following diagram shows how the different channels are wired.

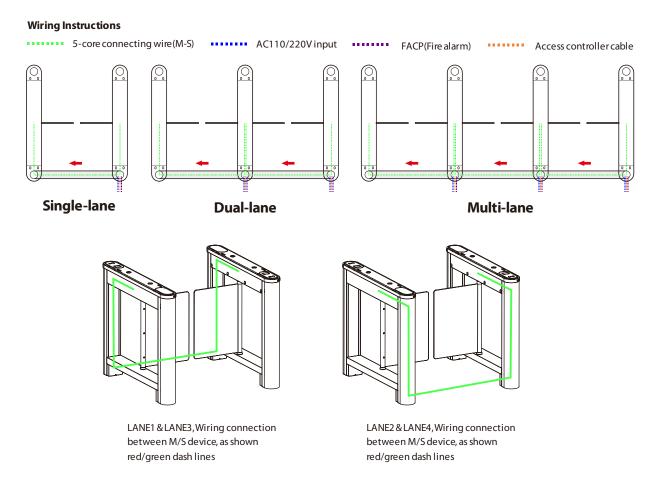


5.4 Main and Sub Connection Cable

Pass the Main and sub connecting wires through the PVC tubing and then plug them into the J41 ports respectively to communicate as shown below.

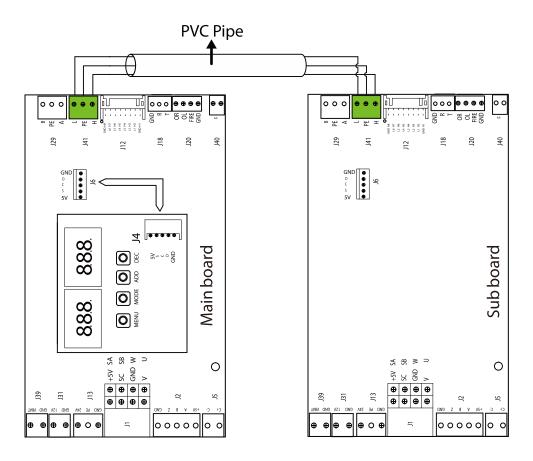


5.5 Power and Air Switch Wiring


120VAC and 240VAC primary power must be hard wired in place (Note: must be grounded). It is strongly recommended that a licensed electrician perform this procedure in accordance with applicable local codes.

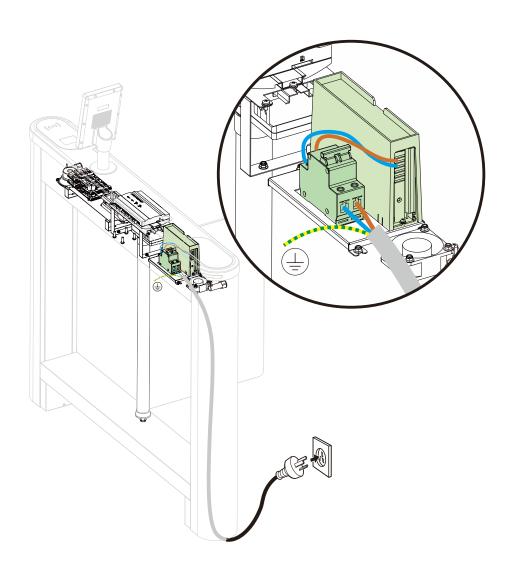

5.6 System Wiring Diagram

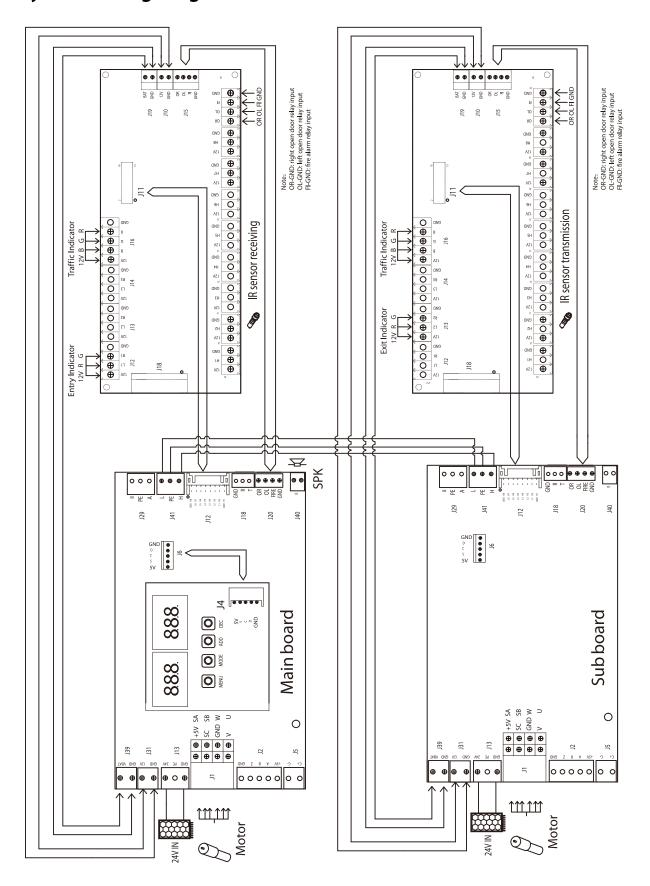

6 Operation Process

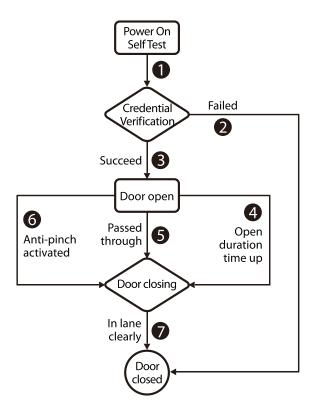


1. POST (Power On Self Test)

When powering up the unit, wait 30 seconds for the system to perform a POST (Power On Self Test) procedure. If no problems are detected, the unit will operate normally. If a fault is detected, the system will display a relevant message on the LCD display so that the user can quickly understand and solve the problem. (Reference <u>5.5 Power and air switch wiring</u> for connecting the air switch and power supply.)

2. Credential Verification

After the unit's power on self test is complete, you can test the door opening by pressing the **ADD**/ **DEC** button on the motherboard.

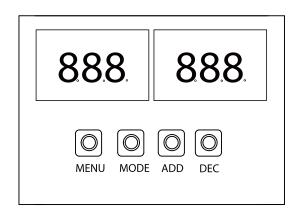

When the user presses the **ADD/ DEC** button on the main board, it is equivalent to recognizing a valid card. The LCD display will show success and a buzzer will give a positive audible indication to the pedestrian that it has been successfully validated. The card reader then sends a signal to the access controller requesting permission to pass through the channel. The access controller will send a signal to the revolving door control panel. After receiving the signal from the card reader and the Infrared Sensor, the Turnstile Control Board will send valid control signals to the servo motor driver.

1) Verification Success

When the verification is successful, the door is opened.

2) Validation Failure

When verification fails, the door remains closed.

Note: At this time, if the system is in forbidden passing mode, the mode indicator light will turn red, and the Turnstile Control Board will not accept signals of card.


3. Passed Through

After the passenger passes the channel according to the opening direction of the swing arm, the Infrared Sensor will keep detecting the movement of the pedestrian throughout the passage and continue to deliver signals to the Turnstile Control Board until the pedestrian passes through the passage.

If the pedestrian enters without ID or an invalid card, the system will prompt an audible alarm. The alarm signal will not be canceled until the passenger retreats from the passage. The pedestrian can pass through the passage only after a valid card is successfully verified.

7 Machine Operation

7.1 Operation Buttons Description

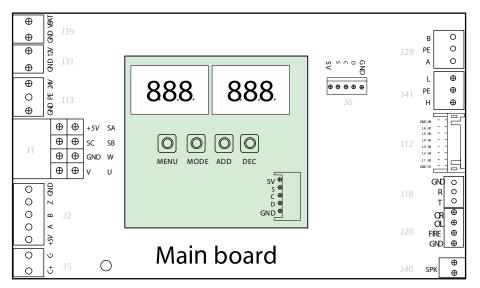

There are 4 keys on the main motor driving controller, "MENU", "MODE", "ADD" and "DEC".

Operation Buttons Description:

- MENU: Used to access the Settings menu and confirm modified values
- MODE: Returns to the previous menu and cancels the current operation.
- **ADD:** Navigate to the upper menu item and increase the value.
- **DEC:** Navigate to the lower menu item and decrease the value.


7.2 Menu Parameter Settings

01EXXX: Display Mode

- **01E000:** Displays current position of the gate
- 01E001: Infrared input signal
- 01E002: Controls input signal
- **01E003:** Test mode (the digital LED displays "---" in the test mode)
- 01E004: Version number


02EXXX: Device Mode

• **02E001:** Entry & Exit: access requires verification (Default)

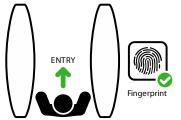




• **02E002:** Entry: access requires verification, Exit: free

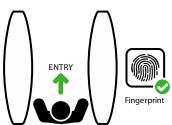



• **02E003:** Entry: free, Exit: access requires verification



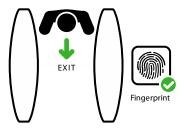


• **02E004:** Entry & Exit: free






02E005: Entry: free, Exit: prohibited

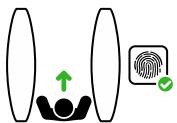



• **02E006:** Entry: prohibited, Exit: access requires verification



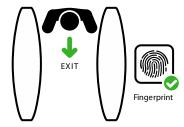

02E007: Entry: free, Exit: prohibited





• 02E008: Entry: prohibited, Exit: free





• 02E009: Entry & Exit: prohibited






02E010: Entry & Exit: free





03EXXX: Gate Opening Speed

To adjust the gate opening speed, you can set a larger number for a faster opening. The Gate Opening Speed can be configured between **5** and **22**, with a default value of **18**.

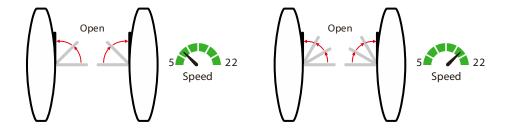

04EXXX: Gate Opening Deceleration Distance


A larger number increases the deceleration time, enhancing the stability of the wing arm operation. The Gate Opening Deceleration Distance can be set between **0** and **50**, with a default value of **10**.

05EXXX: Gate Opening Compensation Speed

This setting is used when the wing arm cannot fully open or shakes during operation. A larger number results in faster compensation speed. The Gate Opening Compensation Speed can be set between **0** and **50**, with a default value of **12**.

06EXXX: Gate Closing Speed

To adjust the gate closing speed, you can set a larger number for a faster closing. The Gate Closing Speed can be configured between **5** and **22**, with a default value of **18**.

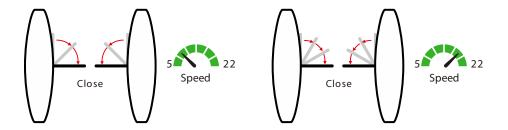

07EXXX: Gate Closing Deceleration Distance

A larger number increases the deceleration time, enhancing the stability of the wing arm operation. The Gate Closing Deceleration Distance can be set between **0** and **50**, with a default value of **10**.

08EXXX: Gate Closing Compensation Speed

This setting is used when the wing arm cannot fully close or shakes during operation. A larger number results in faster compensation speed. The Gate Closing Compensation Speed can be set between **0** and **50**, with a default value of **12**.

09EXXX: Main and Sub Settings

This setting is used to set the main and sub device.

• **09E000**: Main device


• **09E001**: Sub device (Default)

10EXXX: RS485 Address

It can be set between 0 to 254 and the default value is 0.


11EXXX: Open Duration Time

The valid time period after a successful verification can be configured. Once the set time is reached, the gate will automatically close. The longer the number set, the longer the valid time. The valid value ranges from **2** to **60** seconds, with a default value of **5** seconds.

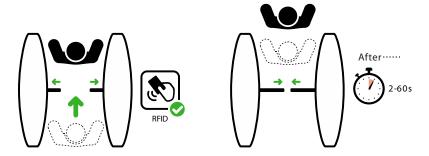

12EXXX: Gate Closing Delay Time

Set the delay time of gate closing after passing. The valid value for gate closing delay time can be set between **0** to **60** seconds and the default value is **0** seconds.

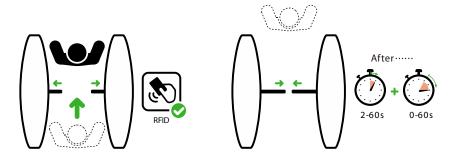

13EXXX: In Place Position Adjustment

This setting is used to adjust the wing arm to close in place/open in place. **Note:** The wing arm needs to be in the corresponding position during commissioning.

• **13E001**: Wing arm close in place adjustment

• **13E002**: Right in place adjustment


• 13E003: Left in place adjustment

14EXXX: Gate Opening Memory

When more than two legal access signals are given at the same time (including the same direction and the opposite direction), the system will remember all pass requests and complete each pass in turn.

14E000: Close (Default)

• 14E001: Open

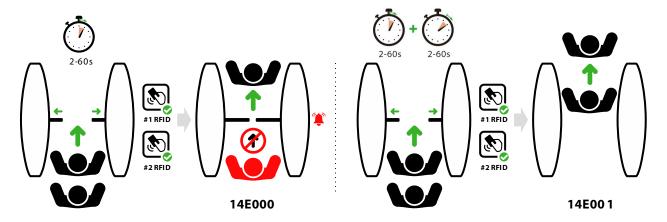

15EXXX: Authentication in Lane

It allows pedestrian verification during the IR sensor triggered.

15E000: Allow (Default)

• 15E001: Forbidden



16EXXX: Volume Setting

Volume Setting is used for adjusting the volume of the device. The larger the number is set, the louder the volume. The valid value for Volume Setting can be set between **1** to **100** and the default value is **70**.




17EXXX: Close Alarm Tone

When the alarm tone is turned off, the Turnstile will not emit an alarm tone when encountering an alarm situation. The following figure shows an example of the prohibition of authentication in lane:

• **17E000:** Close

17E001: Open (Default)

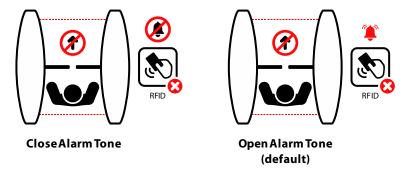


18EXXX: Light Mode

0 to **10** Light effect, 1 to 10 Reserved.

19EXXX: Stay Duration Time

Set the duration of stay in the channel after successful verification. After exceeding the set time, the device will alarm to indicate. The valid value for Stay Duration Time can be set between **5** to **30** seconds and the default value is **10** seconds.

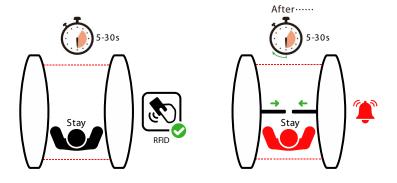


20EXXX: Force Adjustment

The larger the number, the greater the efficiency of the gate opening and closing force. The valid value for Force Adjustment can be set between **10** to **100** and the default value is **50**.

21EXXX: Fire Mode

21E000: Entry opening (Default)

21E001: Exit opening

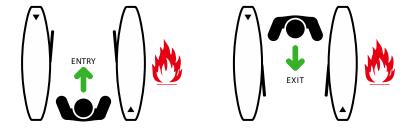

22EXXX: Clutch Start Angle

Set the angle at which the clutch starts. The larger the number, the bigger the angle. The valid value for Clutch Start Angle can be set between **0** to **99**, and the default value is **0**. 0 not locked, adapted to movements without clutch

23EXXX: Clutch Alarm Setting

• 23E000: Automatic Unlock (Default)

• **23E001:** Authorized Unlock

When the gate is unlocked in an unauthorized way, the clutch gets locked automatically.

24EXXX: Restore Factory Setting


24E001: Restore factory settings

• **24E002:** Reboot

25EXXX: Anti-pinch Area Setting

• **25E000:** All Infrared anti-pinch (Default)

25E001: First and last pair are not anti-pinch

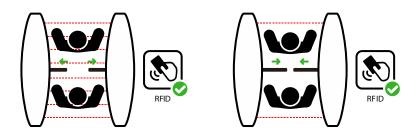


26EXXX: False Direction Entry

The False Direction Entry (**26E000**) will only be effective when the Anti-pinch Area Setting is set to (**25E001**).

26E000: Close (For wing gates)

26E001: Only alarm (Default)

26E002: No detection

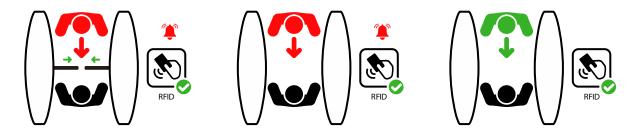


27EXXX: Anti-tailgate Setting

The Anti-tailgate Setting (**27E000**) will only be effective when the Anti-pinch Area Setting is set to (**25E001**).

27E000: Close (For wing gates)

27E001: Only alarm (Default)

27E002: No detection

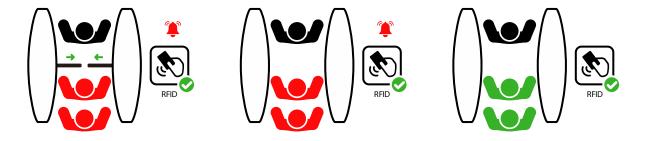


28EXXX: Gate Closing Position

The Gate Closing Position (**28E001**) will only be effective when the Anti-pinch Area Setting is set to (**21E001**).

28E000: Last pair (Default)

• **28E001:** Penultimate pair

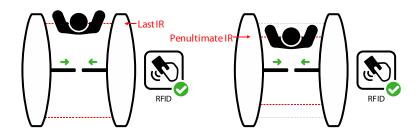


29EXXX: Anti-pinch Action Setting

29E000: Stop

29E001: Open (Default)

29E002: Close the function

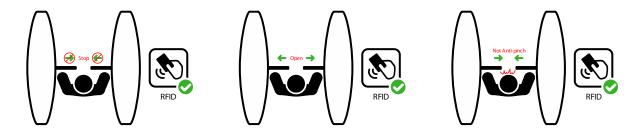


30EXXX: Voice Switching

Sets whether the device announces a voice or an alarm tone.

• **30E000:** Voice playback

• 30E001: Alarm tone (Default)

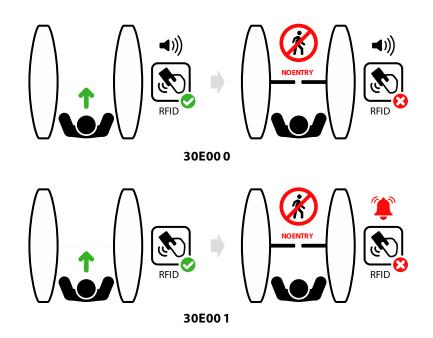

31EXXX: Movement Replacement

• **31E000:** Swing Barrier A

• **31E001:** Swing Barrier B (Default)

• **31E002:** AA (Wing Gate)

• **31E003:** BB (Wing Gate)

• **31E004:** AB (Wing Gate)

• **31E005:** BA (Wing Gate)

32EXXX: Swing arm selection

32E000: Normal Swing Arm (Default)

32E001: High Swing Arm

33EXXX: Main Device Opening Compensation Speed

A larger number results in faster compensation speed. The Main Device Compensation Speed can be set between **30** and **200**, with a default value of **100**.

34EXXX: Main Device Closing Compensation Speed

A larger number results in faster compensation speed. The Main Device Closing Compensation Speed can be set between **30** and **200**, with a default value of **100**.

35EXXX: New and Old Motherboards

The New and Old Motherboards can be set between 30 and 200, with a default value of 102.

36EXXX: Right Direction Voice

Selects the right direction voice, the setting range lies between **0** to **21**, and the default value is **0**.

37EXXX: Left Direction Voice

Selects the left direction voice, the setting range lies between 0 to 21, and the default value is 17.

38EXXX: Locking force adjustment

Valid values are 1 to 10, and the default value is 5.

39EXXX: Motor Parameter Settings

Valid values are 0 to 4, and the default value is 3.

40EXXX: Infrared Logarithm

The Infrared Logarithm can be set between **1** and **8**, with a default value of **8**. Greater than 8 becomes **22**.

8 Maintenance

8.1 Chassis Maintenance

The chassis is made up of cold-rolled SPCC steel (GB700). If it is used for substantial period, then there may be rust stains on its surface. Regularly clean the surface with a clean cloth carefully. Coat the surface with anti-rust oil and do not cover the infrared sensor.

8.2 Movement Maintenance

Before doing maintenance, turn off the power. Open the door, wipe the surface dust, and apply lubricant for smooth movement.

8.3 Power Supply Maintenance

- Switch off the power supply before maintenance.
- Check the power plug connection, if found loose, fix it properly.
- Do not change any connection position randomly.
- Check the external power supply insulation periodically.
- Do periodic check for any kind of leakage.
- Check if the technical parameters of interface are normal.
- Check the service life of the electronic components and replace accordingly.

Caution: All the above-mentioned maintenance methods for swing barrier must be carried out by a professional technician, especially the movement and the electric control part. For ensuring operational safety, first switch off the power supply when the barrier is not in use. Perform the safety check on a weekly basis to ensure that the turnstile is safe and ready for user operation.

9 Troubleshooting

No.	Failure Descriptions	Analysis and Solution
1	The mode indicator light does not respond or the indication is incorrect.	Check that the control panel mode indicator wiring is correct or that the contact is poor.
2	After swiping the card, there is only a speed gate unlocked.	Check the mode setting of the main and sub devices and the 8-core, 2-core connection lines. See the wiring diagram for the specific connection circuit.
3	The barrier doesn't close when the opening delay time is ended.	Check to see if the opening delay time is too long or whether the IR sensor is covered.
4	When the gate is self-tested, the swing arm is not in the normal closing position!	In the process of self-test, there are obstacles, please remove the obstacles, restart the self-test after power-on!

10 Packing List

The package consists of the following items:

Saturn-S1000:

	Saturn-S1000 (Main and Sub)	2
	Power Cable	1
	Card	1
	Expansion Screw M12*100	8
©©©©	Washer	8
	Expansion Screw Washers	8
	Stainless Steel Maintenance Wipes	1
	Hex Wrench	1

Saturn-S1200:

	Saturn-S1200	1
	Power Cable	1
	Card	1
(h ====3)	Expansion Screw M12*100	4
660	Washer	4
© © ©	Expansion Screw Washers	4
	Stainless Steel Maintenance Wipes	1
	Hex Wrench	1

Revision History

Revision	Date	Author	Reviewer	Description
V1.0	12/11/2024	Julia Huang		Original Document

ZKTeco Industrial Park, No. 32, Industrial Road,

Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

www.zkteco.com

