

AN-P01 LTE PoE-PSE Router


Quick Installation Guide

Package Contents

*1 x AN-P01 LTE PoE-PSE Router	*1 x 8 pin Terminal Block	*1 x DIN Rail Bracket, 1 x Screw Bag
*2 x Cellular Antenna (3dBi)	*2 x WiFi Antenna (5dBi)	*1 x RJ45 Cable, *1 x Power Cord

Connection

The AN-P01 series product can be powered by connecting a power source to the terminal block. **It supports 24V to 56V DC power input.** Following picture is the power terminal block pin assignments. Please check carefully and connect to the right power requirements and polarity.

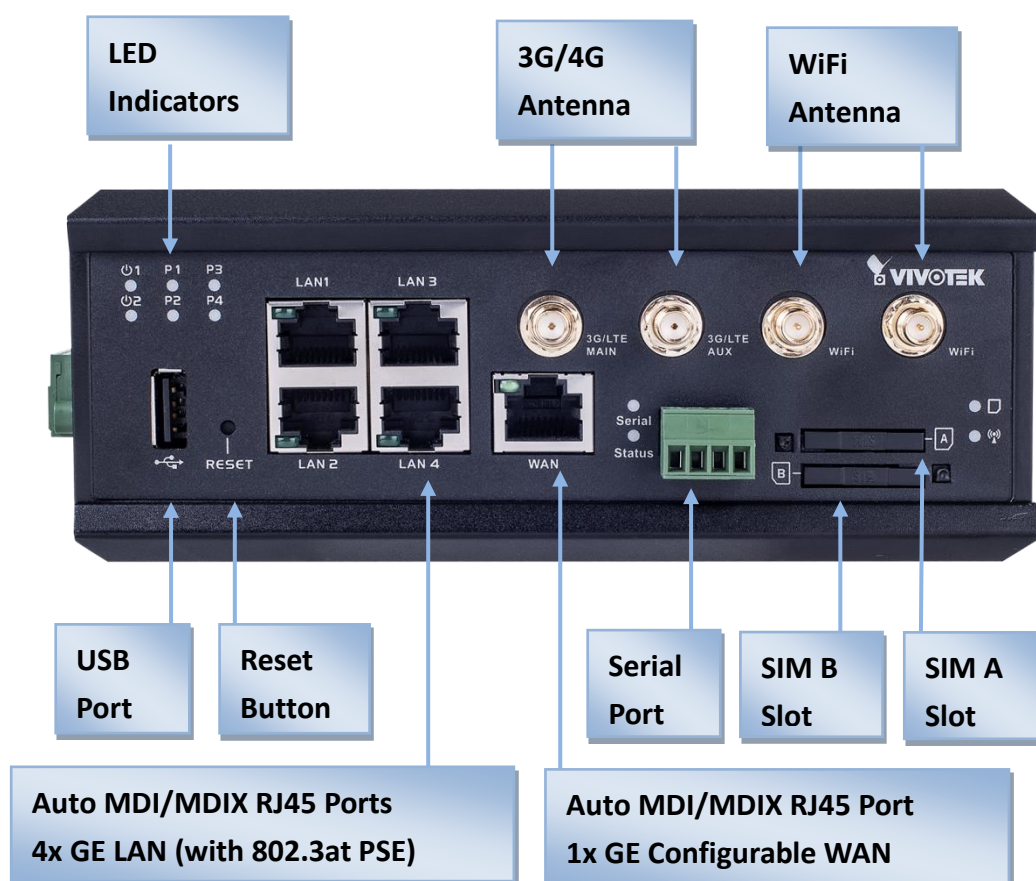

✂Reset Button

The RESET button provides user with a quick and easy way to resort the default setting. Press the RESET button continuously for 6 seconds, and then release it. The device will restore to factory default settings.



Attention

- Only use the power supply that complies with the power specification of the gateway, and can support enough Power to the conneted PoE devices.
- Do not open or repair the case yourself. If the product is too hot, turn off the power immediately and have it repaired at a qualified service center.