

Quick Start Guide

Model: SH01-C8AN

Version: 1.0

English

Important Notes

1. If you have any problems, please read this manual carefully or contact Customer Care.
2. The device **can only connect to 2.4GHz Wi-Fi networks**. If you have a dual-band router with separate 2.4GHz and 5GHz networks, make sure your phone is connected to the 2.4GHz network.
3. Make sure the entered Wi-Fi password is correct when adding a new device.
4. Please make sure the device is close to the router for a stable network connection.
5. Do not mount the camera before confirming a successful network connection and smooth live video.
6. We couldn't guarantee the exact consistency between the actual product and the written information in this manual due to the regular app and product updates.

Table of Contents

What's in the Box.....	3
Product Overview.....	3
Setup.....	4
Connecting the Device to NGTeco Home App.....	4
Watching the Videos from Browser.....	6
*Connecting the Device to Amazon Alexa or Google Assistant.....	7
Installation.....	8
Installation Location.....	8
Installation Steps.....	8
Product Features.....	9

What's in the Box



Camera



Power
Adapter



Quick Start
Guide



 
 
Mounting
Bracket



Screw Kit
(mounting
screws*2,
anchors*2)

Note: The power plug may vary in different regions.

Product Overview

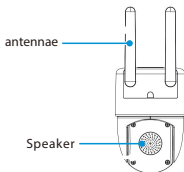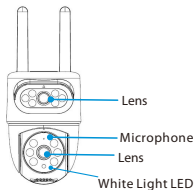

Blinking Blue Rapidly
In Pairing Mode



Blinking Blue Slowly
Network Connecting

Setup

Connecting the Device to NGTeco Home App

Step 1: Download the App and Register Your Account

Search for the **NGTeco Home** App in Apple App Store or Google Play Store and download the App to your mobile phone.

Open the **NGTeco Home** App and log in with your account. If you do not have an account, create an account with your phone number or Email ID.



Step 2: Power on the Device

1. Plug the camera into the power socket using the provided power adapter and USB cable.
2. Wait for a few seconds until you hear a sound prompt and the Status LED blinks blue rapidly, indicating that Pairing Mode is active.

Note: If the device doesn't display the above status, press and hold the **Reset Button** for 5 seconds until you hear a sound prompt.

Step 3: Add the Device to the App

Connection via Bluetooth Function

1. Open the smartphone bluetooth function.
2. Open the app, tap the "+" button at the top right corner of the interface, and then select the **"Add Device"** option. The camera connection will appear directly, click on **Connect**.
3. Tick **"Next"** if you have finished the above steps on the interface. Select the desired Wi-Fi and enter the correct password. Then tap the **"Next"** button.
4. You can manually change the name of the device once you see the message **"Added successfully"** on the mobile app. To finish the setting, tap the **"Done"** button.

Connection via Camera Scanning QR Code

1. Open the app, tap the "+" button on the top right corner of the interface, and then select the **"Add Device"** option. Select the **"Smart Camera"** option and then choose the corresponding model purchased.
2. Tick **"Next"** if you have finished the above steps on the interface. Select the desired Wi-Fi and enter the correct password. Then tap the **"Next"** button.
3. Show the QR code towards the device lens, and the camera will scan the QR code. Once you hear a sound prompt and the Status LED blinks blue slowly, tap the **"I Heard a Prompt"** button on your mobile, the App will connect the device automatically.

 
Note: Please hold the phone about 15-20 cm (6-8 inches) away from the camera. You can slightly move your mobile device forward and backward for better scanning.

4. You can manually change the name of the device once you see the message "**Added successfully**" on the mobile app. To finish the setting, tap the "**Done**" button.

Note: If you failed to connect your device to Wi-Fi, press and hold the **RESET Button** for 5 seconds until you hear a sound prompt and the Status LED blinks blue rapidly, then repeat the above steps.

Watching the Videos from Browser

1. Visit <https://ipc-us.ismartlife.me>, and then select the corresponding data server on the top right corner of the interface.
2. Use NGTeco Home App to scan the QR code to login to your account.
3. Click the corresponding device to watch the live videos.

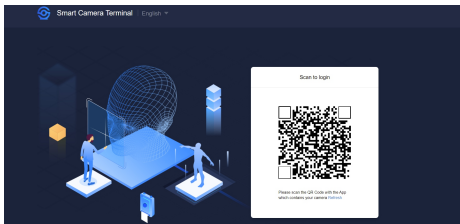

*Connecting the Device to Amazon Alexa or Google Assistant

Tap the **EDIT Button** in the upper right corner of the device interface after successfully connecting the device to the NGTeco Home App. To link your NGTeco Home Account to Amazon Alexa or Google Assistant, select the Amazon Alexa or Google Assistant icon and follow the on-screen instructions.

After completing the setup, you can use the supported voice commands that include:

- *Echo, show me <device name>.*
- *Hey Google, show me <device name>.*

Note:

1. Every time you change the name of a linked device, you must discover it again to update the name.
2. **This voice control feature is optional, only the model SH01-C8AN can support.**

Installation

 
Installation Location

The device can be put on the ceiling or the wall, or it can be placed horizontally. Choose a location with a clear, unblocked field of view and with a good wireless signal to the device, and can reach a power outlet easily.

Installation Steps


After confirming a successful Wi-Fi connection and smooth live video, you can select the required position to mount the device. The installation steps are as follows:

1. Drill two holes in the wall according to the hole positions of the mounting plate, and then insert the plastic anchor into the holes; anchors are necessary for walls that are made of hard materials such as concrete, brick or stucco.
2. Fix the mounting plate onto the wall with two screws.
3. Twist the camera clockwise into the mounting bracket.

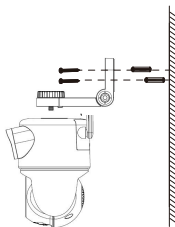

Product Features

 Note: APP display interface is subject to change according to version

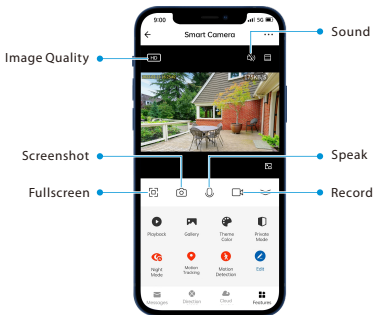

Main Interface:

Image Quality: To switch the image quality between HD and SD.

Sound: To mute or unmute the sound from the device.

Fullscreen: Tap it to switch to the full screen.

Screenshot: Capture a picture to the photo album in App.

Speak: Tap it to talk to people in front of the device.

Record: Manually record a video to the photo album in App.

Playback: Watch the recorded videos in the Micro-SD Card.

Gallery: Review the recorded photos when detecting the motion.

Theme Color: Change the UI theme to light mode or dark mode.

Private Mode: Disable the live videos with one click to protect your privacy.

Night Mode: Switch on/off the night vision mode or set it to Auto Mode.

Motion Tracking: Keep tracking the subject when motion activity is detected.

Motion Detection: Enable or disable the alarm of motion detection.

Message: Check the specific logs of all the motion detection or video call.

Direction: Tap the buttons to rotate and set the camera's point of view.

***Cloud:** This **Video Cloud Storage** service is needed to pay for the monthly or annually subscription. You could check the video from cloud storage with App anytime, anywhere. The cloud storage only supports recording the events video clips.

More Settings:

Basic Settings:

- **Status Indicator:** The status LED can be set as ON or OFF.
- **Flip Screen:** Rotate the current monitoring image at 180 degrees.
- **Time Watermark:** Choose whether the monitoring interface displays the real time watermark.
- **Talk Mode:** To fit the actual requirements, select the one-way or two-way talk mode.

Detection Alarm Settings:

- **Motion Detection:** Enable or disable the alarm of motion detection.
- **Alarm Sensitivity Level:** The level can be set to High/Medium/Low modes as required.
- **Motion Tracking:** Keep tracking the subject when motion activity is detected.
- **Schedule:** Customize the schedule for the motion detection to be active.

Storage Settings: After inserting the Micro-SD card, you could check the status of storage capacity.

Recording Settings: Select the recording mode and set the schedule of the local recording.

***Voice Control:** To see live video from the Amazon Echo or Google Home device, use Amazon Alexa or Google Assistant voice commands. This feature is optional.

Offline Notification: It enables to receive the offline push message of the camera.

Remove Device: Remember to **REMOVE** the device from the current account when the owner of the camera changes.

- **Modo de audio:** Para adaptarse a los requisitos reales, seleccione el modo de conversación unidireccional o bidireccional.

Configuración de Alarma de Detección:

- **Detección de Movimiento:** Habilite o deshabilite la alarma de detección de movimiento.
- **Nivel de Sensibilidad de la Alarma:** El nivel se puede configurar en los modos Alto/Medio/Bajo como sea necesario.
- **Seguimiento de Movimiento:** Siga al objeto cuando se detecte su actividad de movimiento.
- **Horario:** Personalice el horario para que la función de detección de movimiento esté activa.

Configuración de Almacenamiento: Después de insertar la tarjeta Micro-SD, puede verificar el estado de la capacidad de almacenamiento.

Ajustes de grabación: Seleccione el modo de grabación y configure el horario de la grabación local.

***Control por Voz:** Para ver videos en vivo desde el dispositivo Amazon Echo o Google Home, use los comandos de voz de Amazon Alexa o Google Assistant. Esta función es opcional.

Recordatorio de Falta de Conexión: Habilite para recibir una notificación cuando el dispositivo no tenga conexión.

Eliminar Dispositivo: Recuerde ELIMINAR el dispositivo de la cuenta actual cuando cambie el propietario del dispositivo.



Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:

- This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.

IMPORTANT! Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.