

User manual

DAHUA DHI-TF-C100/32GB

1. INTRODUCTION

Thank you for choosing the DAHUA DHI-TF-C100/32GB Micro SD memory. This card is designed to provide a high-speed, reliable storage solution for a variety of devices, including security cameras, mobile phones, tablets and more. With a capacity of 32 GB, this card offers enough space to store videos, photos, music and other important files.

2. PRODUCT SPECIFICATIONS

- **Model:**DHI-TF-C100/32GB
- **Ability:**32GB
- **Card Type:**Micro SD (UHS-I)
- **Speed Rating:**C10/U1/V10
- **Reading Speed:**Up to 90 MB/s
- **Writing Speed:**Up to 15 MB/s
- **Dimensions:**15mm x 11mm x 1mm
- **Weight:**0.16g
- **Operating Temperature:**0°C to +70°C
- **Storage temperature:**-25°C to +85°C

3. PACKAGE CONTENTS

- x1 DAHUA DHI-TF-C100/32GB Micro SD Memory
- X1 User Manual

4. INSTRUCTIONS FOR USE

4.1 Card Installation

1. For Security Cameras:

Step 1. Turn off the camera before inserting the Micro SD card. Step 2. Locate the Micro SD card slot on the camera. Step 3. Insert the card with the metal contacts facing down, until secure.

Step 4. Turn on the camera and follow the instructions on the device to format or configure the card as necessary.

2. For Mobile Phones/Tablets:

Step 1. Turn off the device.

Step 2. Locate the SIM/Micro SD card tray and remove it using the eject tool.

Step 3. Place the Micro SD card into the tray, making sure it is securely seated.

Step 4. Insert the tray back into the device and turn it on.

3. For Other Devices:

Step 1. Insert the Micro SD card into the corresponding slot, making sure the metal contacts are oriented correctly.

Step 2. See the device manual for additional instructions on setting up and using the card.

4.2 Card Formatting

Step 1. Before using the card for the first time, it is recommended that you format it on the device in which it will be used.

Step 2. Follow the instructions on your device to format the card.

Note: Formatting will erase all data on the card. Be sure to back up important data before formatting.

4.3 Card Removal

Step 1. Turn off the device before removing the card to avoid data loss or damage.

Step 2. Gently press the card to release it from the slot and carefully remove it.

5. Maintenance and Care

- Avoid exposing the card to extreme temperatures, humidity, water, or strong shock.
- Store the card in a dry, protected location when not in use.
- Always use the provided SD adapter (if included) to read the card on devices that do not support Micro SD.

6. Problem Solving

Problem:The card is not recognized by the device.

Solution:Make sure the card is inserted correctly and the device supports Micro SD. Try formatting the card on another compatible device.

Problem:Slow transfer speed.

Solution:Make sure the device and adapter (if used) support the UHS-I speed of the card. Writing speed may vary depending on device and usage conditions.