

✂ English

The EL-2714 is a portable four-button keyfob transmitter designed for use with RISCO's supervised wireless range of receivers.



Fig. 1: EL-2714

Registration

To register the EL-2714:

1. Set the receiver to Registration mode.
2. Press one of the buttons, making sure that the LED lights up when the button is pressed.
3. Wait for five seconds and press the same button again.

Alternatively, the EL-2714 can be registered to the receiver by manually entering the transmitter's serial number.

Battery Replacement

If the LED blinks during transmissions, this indicates that the battery is low and need replacing.

To replace the battery:


1. Insert a small screwdriver into the pry-off slot – see Figure 2. Carefully twist the screwdriver to separate the front and back of the casing.
2. Observing correct polarity, replace the battery.
3. Close the casing making sure that the front and back click shut.

Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Technical Specifications

Antenna: Built-in whip
 Frequency: 868.35*, 433.92, or 418 MHz
 Power: 3V Lithium Battery, Size CR2032
 Battery Capacity: 240mAh
 Low Battery Threshold: 2.4V
 Current Consumption: 16mA (transmission), 0µA (standby)
 Expected Battery Life : 3 years
 Dimensions: 4.4(W x 4.4(L) x 1.1(H)
 Weight (kg): 0.015
 RFI Immunity: 40V/m
 Operating Temperature: -10°C to 55°C
 Humidity : Up to 93% non condensing
 For EN50131-3 Compliance:

- Arm the panel only from an exit zone in order to be aware of any system indication if arming cannot be performed.
- In case of a low keyfob battery, the system will not arm until user acknowledgment

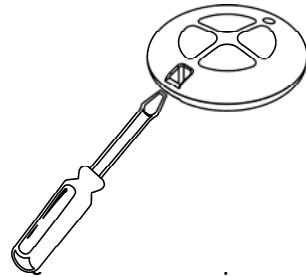

Battery Holder/
 Emplacement de
 la Batterie/
 Soporte de
 la Batería

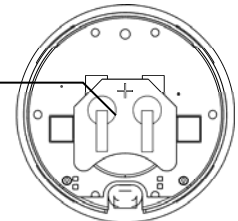


Fig. 2:
 Rear view (casing open) /
 Vue arrière (boîtier ouvert) /
 Vista posterior (tapa abierta)

✂ Français

Le EL-2714 est un émetteur de télécommande à quatre boutons à utiliser avec la gamme des récepteurs de radio supervisés d'RISCO.

Processus d'Enregistrement

1. Réglez le récepteur en mode Enregistrer.
2. Appuyez sur un bouton, vérifiez que la LED de la télécommande s'allume lorsque le bouton est appuyé.
3. Attendez pendant cinq secondes et appuyez à nouveau sur le même bouton.

Indication de Tension Batterie Basse

Si la LED clignote lors des transmissions, cela signifie que la tension de la batterie est basse et qu'elle doit être remplacée:

Pour remplacer la batterie:

1. Insérez un petit tournevis dans la fente – voir *Figure 2*. Tournez doucement le tournevis pour séparer l'avant et l'arrière du boîtier.
2. En observant la polarité correcte, remplacez la batterie.
3. Fermez le boîtier en vérifiant à ce que l'avant et l'arrière se ferment avec un clic.

Spécifications Techniques

Antenne: Fouet intégré

Fréquences: 868.35*, 433.92 ou 418MHz FM

Alimentation:

3V Batterie de lithium, Taille CR2032

Consommation du courant:

16mA (en transmission), 0µA (au repos)

Immunité IRF: 40V/m

Température de Fonctionnement: 0-60°C

Dimensions: 45Ø x13mm

***Conforme à la norme EN-50131 Grade 2 Class II Alimentation Type C**

RISCO Limited Warranty

RISCO Ltd. and its subsidiaries and affiliates ("RISCO") warrants its products to be free from defects in materials and workmanship under normal use for 24 months from the date of production. Because Seller does not install or connect the product and because the product may be used in conjunction with products not manufactured by the Seller, Seller cannot guarantee the performance of the security system which uses this product. Seller's obligation and liability under this warranty is expressly limited to repairing and replacing, at Seller's option, within a reasonable time after the date of delivery, any product not meeting the specifications. Seller makes no other warranty, expressed or implied, and makes no warranty of merchantability or of fitness for any particular purpose.

In no case shall seller be liable for any consequential or incidental damages for breach of this or any other warranty, expressed or implied, or upon any other basis of liability whatsoever.

Seller's obligation under this warranty shall not include any transportation charges or costs of installation or any liability for direct, indirect, or consequential damages or delay.

Seller does not represent that its product may not be compromised or circumvented; that the product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product will in all cases provide adequate warning or protection.

Seller, in no event shall be liable for any direct or indirect damages or any other losses occurred due to any type of tampering, whether intentional or unintentional such as masking, painting or spraying on the lenses, mirrors or any other part of the detector.

Buyer understands that a properly installed and maintained alarm may only reduce the risk of burglary, robbery or fire without warning, but is not insurance or a guaranty that such event will not occur or that there will be no personal injury or property loss as a result thereof.

Consequently seller shall have no liability for any personal injury, property damage or loss based on a claim that the product fails to give warning. However, if seller is held liable, whether directly or indirectly, for any loss or damage arising under this limited warranty or otherwise, regardless of cause or origin, seller's maximum liability shall not exceed the purchase price of the product, which shall be complete and exclusive remedy against seller.

No employee or representative of Seller is authorized to change this warranty in any way or grant any other warrant.

CAUTION: This product should be tested at least once a week.



UPGRADING
EVERYDAY
SECURITY



All rights reserved

No part of this document may be reproduced in any form without the prior written permission from the publisher.

RISCO 03/2016

✂ Español

El EL-2714 es un transmisor de cuatro botones diseñado para ser utilizado con la línea de receptores inalámbricos supervisada de RISCO.

Procedimiento de Registración

1. Coloque el receptor en modo Registración.
2. Presione un botón, asegurándose que el LED del llavero encienda al ser presionado.
3. Espere cinco segundos y presione el botón nuevamente.

Indicación de Baja Batería

Quando el LED parpadea durante la transmisión, significa que la batería está baja y precisa ser reemplazada.

Para reemplazar la batería:

1. Inserte un pequeño destornillador en la ranura inferior – ver *Figura 2*. Cuidadosamente gire el destornillador para separar las tapas.
2. Observando la polaridad correcta, reemplace la batería.
3. Cierre el llavero asegurándose que las tapas coincidan correctamente.

Especificaciones Técnicas

Antena: Incorporada, de Lazo Interno

Frecuencia: 868.35*, 433.92 o 418MHz FM

Alimentación:

3V Batería de Lito, CR2032

Consumo de Corriente:

16mA (transmisión), 0µA (en reposo)

Inmunidad a RF: 40V/m

Temperatura de Operación: 0-60°C

Dimensiones: 45Ø x13mm

***Cumple norma EN-50131 Grado 2 Clase II Fuente alimentación Tipo C**

Contacting RISCO

RISCO is committed to customer service and product support. You can contact us through our website (www.riscogroup.com) or at the following telephone and fax numbers:

International Headquarters:

RISCO

14 Hachoma St., 75655 Rishon Le Zion, Israel

Tel: (+972-3) 963-7777 Fax: (+972-3) 961-6584

All data is subject to change without prior notice. In no event shall RISCO be liable for an amount in excess of RISCO's original selling price of this product, for any loss or damage whether direct, indirect, incidental, consequential or otherwise arising out of any failure of the product. Hereby, RISCO declares that this transmitter is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

5INZI0608B E