







## What do the LEDs on the ADC-V516 mean?


### LED reference guide


#### LED status

LED pattern	Description
Off 	Power off
Solid green 	Connected to Alarm.com
Blinking green 	Local network connection
Blinking red 	Power on, camera booting
Blinking blue 	WPS mode

LED pattern	Description
Blinking white 	Wi-Fi Access Point mode

**Trouble condition**

LED pattern	Description
Solid red 	No local or Internet connection

LED pattern	Description
Blinking red and green 	Reverting to factory default settings