




1 |

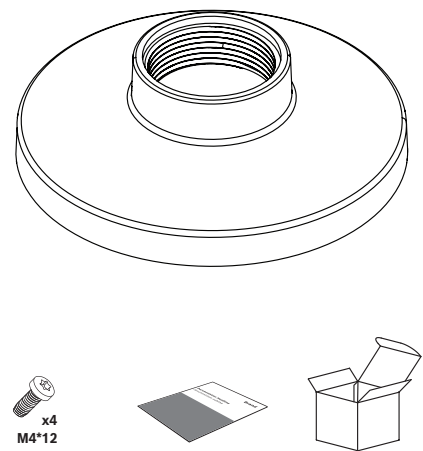


2 |

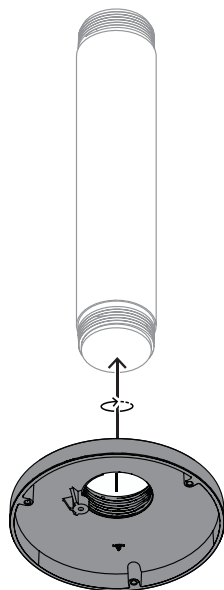

3 |

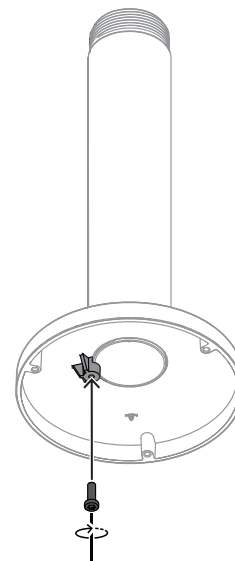


4 |

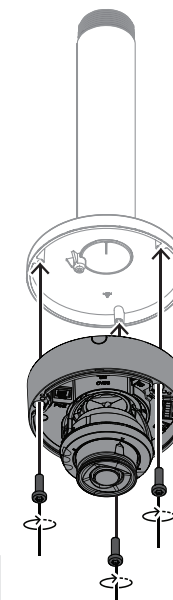


i
NDE-3702-AL-x
NDE-3703-AL-x

5 |

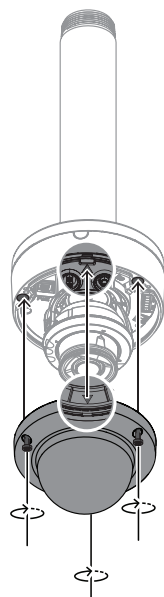


i
NDE-3702-AL-x
NDE-3703-AL-x

6 |

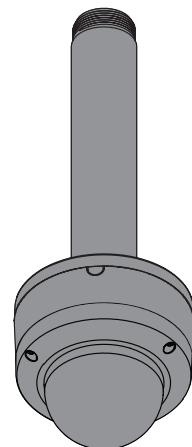


i
NDE-3702-AL-x
NDE-3703-AL-x

7 |

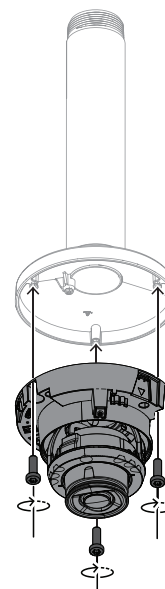


i
NDI-3702-A-x
NDI-3702-AL-x
NDI-3703-A-x
NDI-3703-AL-x

8 |

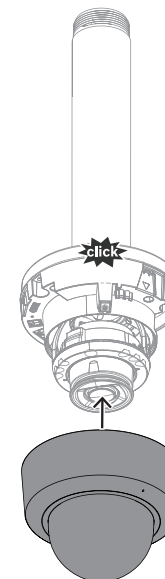


i
NDI-3702-A-x
NDI-3702-AL-x
NDI-3703-A-x
NDI-3703-AL-x

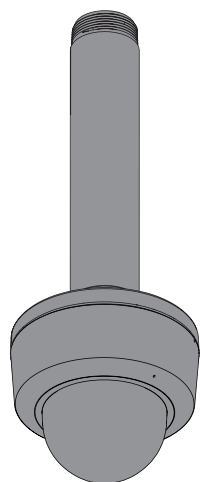

1
NDI-3702-A-x
NDI-3702-AL-x
NDI-3703-A-x
NDI-3703-AL-x

Pendant interface plate FD 3100i
NDA-3083-PIP

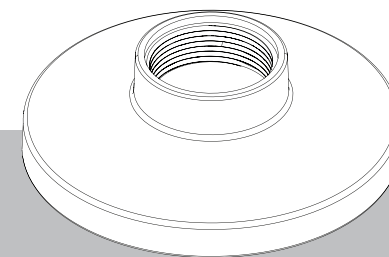

en Quick installation guide

IQSIGHT B.V.

Achtseweg Zuid 173
5651 GW Eindhoven
The Netherlands

www.iqsight.com

© IQSIGHT 2026

