



Quick Guide Installation

SFP-1000-MM85-X5



Instalación



All specifications are subject to change without notice. Copyright © VIVOTEK INC. All rights reserved. Ver. 11

VIVOTEK INC.
6F, No.192, Lien-Cheng Rd., Chung-Ho,
New Taipei City, 235, Taiwan, R.O.C.
T: +886-2-82455282 F: +886-2-82455532
E: sales@vivotek.com

VIVOTEK USA
2050 Ringwood Avenue,
San Jose, CA 95131
T: 408-773-8686 F: 408-773-8298
E: salesusa@vivotek.com

VIVOTEK Europe
Randstad 22-133, 1316BW Almere,
The Netherlands
T: +31(0)36-5298-434
E: saleseurope@vivotek.com

VIVOTEK India
602, Best sky Tower, Plot No. F-5,
Netaji Subhash Place, Pitam Pura, Delhi-110 034
T: +91-11-45137465
E: salesindia@vivotek.com

Contents

Installing the SFP Transceiver Module.....	3
Removing the SFP Transceiver Module	4

Installing the SFP Transceiver Module

An SFP (small form-factor pluggable) transceiver module plugs into the SFP cage of switch VIVOTEK chassis

CAUTION: Observe electrostatic discharge (ESD) precautions when handling SFP transceiver modules. Always wear a wrist strap that connects to an approved grounding source when installing or handling the modules.


CAUTION: To prevent damage to an SFP module and to any connected cables, disconnect all cables before installing or removing a module.

NOTE: An SFP module is a hot-pluggable device; therefore, there is no need to power down the appliance when installing or removing a module.


To install an optical SFP module into an SFP cage, perform the following procedure.

NOTE: Do not remove the dust cap from the optical SFP module until directed to do so in the following procedure. In addition, always keep the dust caps on the fiber-optic cable connectors until ready to make a connection.


1. Verify that the bail latch is closed.

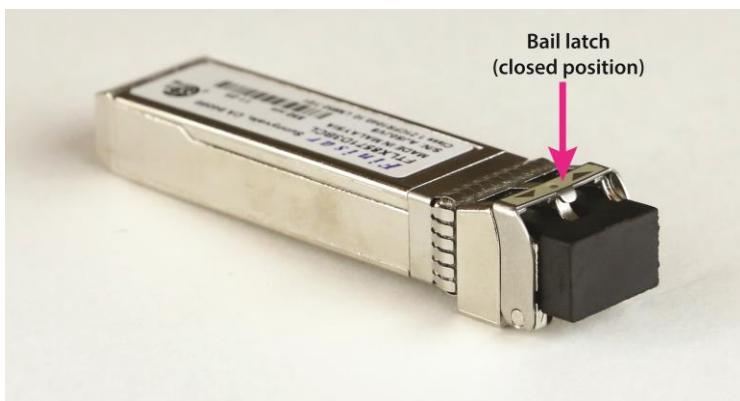

2. Verifying that the SFP cage notch and hinge are along the same edge, insert the module into the SFP cage until the module latches into place. The module is fully seated when you hear a click.

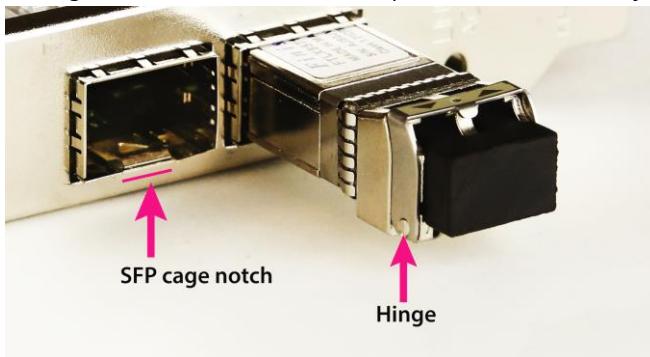

3. At one end of the fiber-optic cable, remove the dust caps from the LC connectors. Save the dust caps for future use.
4. Inspect and clean the now uncovered fiber-optic end faces of the LC connectors.
5. Remove the dust cap from the SFP module. Save the dust cap for future use.

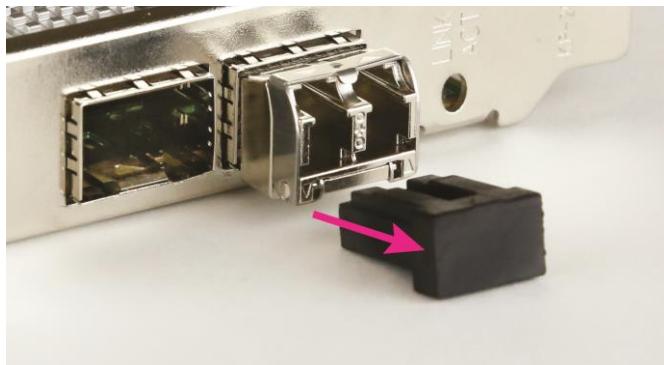


6. Connect the LC connectors of the fiber-optic cable to the SFP module.

Removing the SFP Transceiver Module

To remove an optical SFP module from an SFP cage, perform the following procedure.

1. Disconnect the LC cable connector from the SFP module.
2. Reinstall the dust cap onto each LC cable connector.
3. Remove the SFP module from the SFP cage.

Open the bail latch by rotating it 90 degrees.

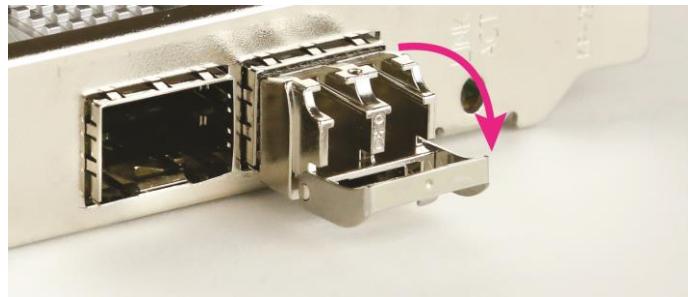

- b. Grasp the SFP module, and then carefully remove the module from the SFP cage.
4. Close the bail latch.
5. Reinstall the dust cap into the SFP module.