



Data sheet

The 16ch passive HD (non-amplified) video UTP transceiver allows transmission of real-time and high-performance color or monochrome (B/W) CCTV video or HDCVI/AHD/HDTVI HD video over UTP cable. The device is 1U rack-mountable, perfect for multi-point surveillance.

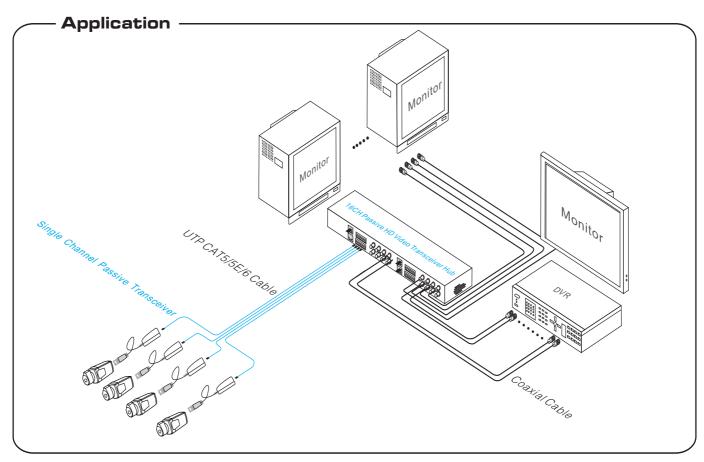

▲▲▲ 16ch Passive HD Video UTP Transceiver—

■ Panel Diagram

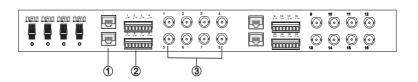

NO.	Component	Description
1	RJ-45	please refer to "how to make RJ-45 plug"
2	8 pin green terminal block	to connect UTP cable directly
3	BNC-F	for video input

Note: 1) or 2 to be choosed

■ Installation steps

Please check the following items before installation, if it is missing, please contact the dealer.

16ch passive HD Video UTP Transceiver
Accessory
User manual
1pcs

Please follow the next installation steps:

- 1) Please power off camera, PC, DVR, IPC and monitor which are to be used;
- 2) Connect cameras with transmitter via BNC cable,
- 3) Connect DVR with it via BNC cable;
- 4) Connect transmitter and receiver via UTP cable.
- 5) Power camera, DVR, monitor etc.

Specification

	Item	Description
Function	Channels	16Channel
	Transmission Distance	Please refer to table 1
Video Properties	Video Connector	BNC-F
	UTP Cable Connector	8 pin green terminal block,RJ-45
	Compatible With	PAL、NTSC、SECAM video HDCVI/AHD/HDTVI HD video
	Signal Transmission Band	0-70MHz
	Interference Rejection	>60db
	Video Connector Protection	2KV(common mode) Per: IEC61000-4-5
	UTP Cable Connector Protection	2KV(different mode) Per:IEC61000-4-5
Protection	ESD Protection	Contact Discharge:6000V Air Discharge:8000V Per:IEC61000-4-2
Physical Properties	Size (LWH)	430*100*44.5(1U)
	Outer Shell	Iron Metal
	Color	Black
	N.W.	1.181kg
Environmental	Operation Temperature	0° C-50° C
	Storage Temperature	-40° C-85℃
	Relative Humidity	0%-95%(non-condensing)

Specification change will not be noticed

Troubleshooting

If any trouble in installation, please follow these steps:

- Check if it's according to the manual;
- If choose RJ-45, make sure both ends of UTP cable are same(both 568A or both 568B)
- If choose green terminal block, make sure cable of same color be in the same pin;
- Check all connection(like BNC,RJ-45);
- Make sure the real distance not exceeds the allowed transmission distance;
- Make sure the cables are quality;
- Replace the device at question by a normal working device;
- Please contact your vendor if trouble still exists.