

DIGITAL VIDEO RECORDER

User's Manual

V1.1.0

ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

Mandatory actions to be taken towards cybersecurity

1. Change Passwords and Use Strong Passwords:

The number one reason systems get "hacked" is due to having weak or default passwords. It is recommended to change default passwords immediately and choose a strong password whenever possible. A strong password should be made up of at least 8 characters and a combination of special characters, numbers, and upper and lower case letters.

2. Update Firmware

As is standard procedure in the tech-industry, we recommend keeping NVR, DVR, and IP camera firmware up-to-date to ensure the system is current with the latest security patches and fixes.

"Nice to have" recommendations to improve your network security

1. Change Passwords Regularly

Regularly change the credentials to your devices to help ensure that only authorized users are able to access the system.

2. Change Default HTTP and TCP Ports:

• Change default HTTP and TCP ports for systems. These are the two ports used to communicate and to view video feeds remotely.

• These ports can be changed to any set of numbers between 1025-65535. Avoiding the default ports reduces the risk of outsiders being able to guess which ports you are using.

3. Enable HTTPS/SSL:

Set up an SSL Certificate to enable HTTPS. This will encrypt all communication between your devices and recorder.

4. Enable IP Filter:

Enabling your IP filter will prevent everyone, except those with specified IP addresses, from accessing the system.

5. Change ONVIF Password:

On older IP Camera firmware, the ONVIF password does not change when you change the system's credentials. You will need to either update the camera's firmware to the latest revision or manually change the ONVIF password.

6. Forward Only Ports You Need:

• Only forward the HTTP and TCP ports that you need to use. Do not forward a huge range of numbers to the device. Do not DMZ the device's IP address.

• You do not need to forward any ports for individual cameras if they are all connected to a recorder on site; just the NVR is needed.

7. Disable Auto-Login on SmartPSS:

Those using SmartPSS to view their system and on a computer that is used by multiple people should disable auto-login. This adds a layer of security to prevent users without the appropriate credentials from accessing the system.

8. Use a Different Username and Password for SmartPSS:

In the event that your social media, bank, email, etc. account is compromised, you would not want someone collecting those passwords and trying them out on your video surveillance system. Using a different username and password for your security system will make it more difficult for someone to guess their way into your system.

9. Limit Features of Guest Accounts:

If your system is set up for multiple users, ensure that each user only has rights to features and functions they need to use to perform their job.

10. UPnP:

• UPnP will automatically try to forward ports in your router or modem. Normally this would be a good thing. However, if your system automatically forwards the ports and you leave the credentials defaulted, you may end up with unwanted visitors.

• If you manually forwarded the HTTP and TCP ports in your router/modem, this feature should be turned off regardless. Disabling UPnP is recommended when the function is not used in real applications.

11. SNMP:

Disable SNMP if you are not using it. If you are using SNMP, you should do so only temporarily, for tracing and testing purposes only.

12. Multicast:

Multicast is used to share video streams between two recorders. Currently there are no known issues involving Multicast, but if you are not using this feature, deactivation can enhance your network security.

13. Check the Log:

If you suspect that someone has gained unauthorized access to your system, you can check the system log. The system log will show you which IP addresses were used to login to your system and what was accessed.

14. Physically Lock Down the Device:

Ideally, you want to prevent any unauthorized physical access to your system. The best way to achieve this is to install the recorder in a lockbox, locking server rack, or in a room that is behind a lock and key.

General

This user's manual (hereinafter referred to be "the Manual") introduces the functions and operations of the DVR devices (hereinafter referred to be "the Device").

Models

Series	Models		
	DH-XVR4104C-X/DH-XVR4108C-X/DH-XVR4116HS-X/DH-XVR4104HS-X/		
XVR4 series	DH-XVR4108HS-X/DH-XVR4216AN-X/DH-XVR4232AN-X		
	DH-XVR5108C-X/DH-XVR5104C-4KL-X/DH-XVR5104C-X/DH-XVR5108H-X/		
	DH-XVR5116H-X/DH-XVR5104H-4KL-X/DH-XVR5108H-4KL-X/		
	DH-XVR5116H-4KL-X/DH-XVR5108HE-X/DH-XVR5116HE-X/		
	DH-XVR5108HS-X/DH-XVR5116HS-X/DH-XVR5104HS-4KL-X/		
XVR5 series	DH-XVR5108HS-4KL-X/DH-XVR5104HS-X/DH-XVR5104H-X/		
	DH-XVR5104HE-X/DH-XVR5216AN-X/DH-XVR5232AN-X/		
	DH-XVR5208AN-4KL-X/DH-XVR5216AN-4KL-X/DH-XVR5216A-X/		
	DH-XVR5432L-X/DH-XVR5832S-X/DH-5208AN-4KL-X-8/		
	DH-5216AN-4KL-X-16P/DH-XVR5108H-4KL-X-8P		
	DH-XVR7104E-4KL-X/DH-XVR7108E-4KL-X/DH-XVR7104E-4KL-B-X/		
	DH-XVR7108E-4KL-B-X/DH-XVR7104HE-4KL-X/		
XVR7 series	DH-XVR7108HE-4KL-X/DH-XVR7116HE-4KL-X/DH-XVR7108HE-4K-X/		
	DH-XVR7208A-4KL-X/DH-XVR7216A-4KL-X/DH-XVR7208A-4K-X/		
	DH-XVR7416L-4KL-X/ DH-XVR7816S-4KL-X		

Safety Instructions

The following categorized signal words with defined meaning might appear in the Manual.

Signal Words	Meaning
	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
©— ^₄ TIPS	Provides methods to help you solve a problem or save you time.

Signal Words	Meaning	
m	Provides additional information as the emphasis and supplement	
I NOTE	to the text.	

Revision History

No.	Version	Revision Content	Release Time
1	V1.0.0	First Release.	February 27, 2018
2	V1.0.1	Add eight models.	March 27, 2018
3	V1.1.0	 Add four models. Add following sections: Add following sections: Privacy Protection Notice Using Reset Button on the Mainboard Configuring White Light Configuring Siren Viewing PoC Information Update following sections: About the Manual Important Safeguards and Warnings Configuring IVS Function Configuring Face Detection 	May 10, 2018

Privacy Protection Notice

As the device user or data controller, you might collect personal data of others' such as face, fingerprints, car plate number, Email address, phone number, GPS and so on. You need to be in compliance with the local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures include but not limited to: providing clear and visible identification to inform data subject the existence of surveillance area and providing related contact.

About the Manual

- The Manual is for reference only. If there is inconsistency between the Manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the Manual.
- The Manual would be updated according to the latest laws and regulations of related regions. For detailed information, see the paper User's Manual, CD-ROM, QR code or our official website. If there is inconsistency between paper User's Manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the Manual. Please

contact the customer service for the latest program and supplementary documentation.

- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the Guide (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the Manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
- If there is any uncertainty or controversy, please refer to our final explanation.

Important Safeguards and Warnings

This Chapter describes the contents covering proper handling of the Device, hazard prevention, and prevention of property damage. Read these contents carefully before using the Device, comply with them when using, and keep it well for future reference.

Operation Requirement

- Do not place or install the Device in a place exposed to sunlight or near the heat source.
- Keep the Device away from dampness, dust or soot.
- Keep the Device installed horizontally on the stable place to prevent it from falling.
- Do not drop or splash liquid onto the Device, and make sure there is no object filled with liquid on the Device to prevent liquid from flowing into the Device.
- Install the Device in a well-ventilated place, and do not block the ventilation of the Device.
- Operate the device within the rated range of power input and output.
- Do not dissemble the Device.
- Transport, use and store the Device under the allowed humidity and temperature conditions.

Electrical Safety

- Improper battery use might result in fire, explosion, or inflammation.
- When replacing battery, make sure the same model is used.
- Use the recommended power cables in the region and conform to the rated power specification.
- Use the power adapter provided with the Device; otherwise, it might result in people injury and device damage.
- The power source shall conform to the requirement of the Safety Extra Low Voltage (SELV) standard, and supply power with rated voltage which conforms to Limited power Source requirement according to IEC60950-1. Please note that the power supply requirement is subject to the device label.
- Connect the device (I-type structure) to the power socket with protective earthing.
- The appliance coupler is a disconnection device. When using the coupler, keep the angle for easy operation.

Table of Contents

Cybersecurity RecommendationsI
ForewordIII
Important Safeguards and WarningsVI
1 Introduction1
1.1 Overview
1.2 Functions
2 Getting Started
2.1 Checking the Components
2.2 Installing HDD
2.2.1 DH-XVR5108C-X/DH-XVR5104C-4KL-X/DH-XVR5104C-X/
DH-XVR4104C-X/DH-XVR4108C-X4
2.2.2 DH-XVR7104E-4KL-X/DH-XVR7108E-4KL-X/DH-XVR7104E-4KL-B-X/
DH-XVR7108E-4KL-B-X5
2.2.3 DH-XVR4116HS-X/DH-XVR5108HS-X/DH-XVR5116HS-X/DH-XVR5104HS-4KL-X/
DH-XVR5108HS-4KL-X/
DH-XVR5108H-X/DH-XVR5116H-X/DH-XVR5104H-4KL-X/DH-XVR5108H-4KL-X/DH-XVR511
6H-4KL-X/DH-XVR5108HE-X/DH-XVR5116HE-X/DH-XVR7104HE-4KL-X/DH-XVR7108HE-4K
L-X/DH-XVR7116HE-4KL-X/DH-XVR7108HE-4K-X/DH-XVR5104HS-X/
DH-XVR4104HS-X/DH-XVR5104H-X/DH-XVR5104HE-X/DH-XVR4108HS-X6
2.2.4 DH-XVR4216AN-X/DH-XVR4232AN-X/DH-XVR5216AN-X/DH-XVR5232AN-X/
DH-XVR5208AN-4KL-X/DH-XVR5216AN-4KL-X/DH-XVR5216A-X/DH-XVR7208A-4KL-X/DH-
XVR7216A-4KL-X/DH-XVR7208A-4K-X
2.2.5 DH-XVR7416L-4KL-X/DH-XVR5432L-X7
2.2.6 DH-XVR7816S-4KL-X/DH-XVR5832S-X8
2.3 Installing Device into Rack
3 The Grand Tour10
3.1 Front Panel 10
3.1.1 DH-XVR5108C-X/DH-XVR5104C-4KL-X/DH-XVR5104C-X/
DH-XVR4104C-X/DH-XVR4108C-X10
3.1.2 DH-XVR7104E-4KL-X/DH-XVR7108E-4KL-X/DH-XVR7104E-4KL-B-X/
DH-XVR7108E-4KL-B-X11
3.1.3 DH-XVR5108H-X/DH-XVR5116H-X/DH-XVR5104H-4KL-X/DH-XVR5108H-4KL-X/
DH-XVR5116H-4KL-X/DH-XVR5108HE-X/DH-XVR5116HE-X/DH-XVR4116HS-X/DH-XVR510
8HS-X/DH-XVR5116HS-X/DH-XVR5104HS-4KL-X/DH-XVR5108HS-4KL-X/
DH-XVR5104HS-X/DH-XVR4104HS-X/DH-XVR4108HS-X/DH-XVR5104H-X/
DH-XVR5104HE-X
3.1.4 DH-XVR7104HE-4KL-X/DH-XVR7108HE-4KL-X/DH-XVR7116HE-4KL-X/
DH-XVR7108HE-4K-X
3.1.5 DH-XVR4216AN-X/DH-XVR4232AN-X/DH-XVR5216AN-X/DH-XVR5232AN-X/
DH-XVR5208AN-4KL-X/DH-XVR5216AN-4KL-X/DH-XVR5216A-X
3.1.6 DH-XVR7208A-4KL-X/DH-XVR7216A-4KL-X/DH-XVR7208A-4K-X

3.1.7 DH-XVR7416L-4KL-X	14
3.1.8 DH-XVR7816S-4KL-X	14
3.1.9 DH-XVR5432L-X	14
3.1.10 DH-XVR5832S-X	15
3.2 Rear Panel	16
3.2.1 DH-XVR5108C-X/DH-XVR5104C-4KL-X/DH-XVR5104C-X/	
DH-XVR4104C-X/DH-XVR4108C-X	16
3.2.2 DH-XVR7104E-4KL-X/DH-XVR7108E-4KL-X/DH-XVR7104E-4KL-B-X/	
DH-XVR7108E-4KL-B-X	17
3.2.3 DH-XVR4116HS-X/DH-XVR5108HS-X/DH-XVR5116HS-X/DH-XVR5104HS-4KL-	.X/
DH-XVR5108HS-4KL-X/DH-XVR5104HS-X/DH-XVR4104HS-X/DH-XVR4108HS-X	18
3.2.4 DH-XVR5108H-X/DH-XVR5116H-X/DH-XVR5104H-4KL-X/DH-XVR5108H-4KL->	(/
DH-XVR5116H-4KL-X/DH-XVR5108HE-X/DH-XVR5116HE-X/DH-XVR7104HE-4KL-X/	DH-XV
R7108HE-4KL-X/DH-XVR7116HE-4KL-X/DH-XVR7108HE-4K-X/DH-XVR5104H-X/DH	-XVR51
04HE-X/DH-XVR5108H-4KL-X-8P	19
3.2.5 DH-XVR4216AN-X/DH-XVR4232AN-X/DH-XVR5216AN-X/DH-XVR5232AN-X/	
DH-XVR5208AN-4KL-X/DH-XVR5216AN-4KL-X/DH-XVR5216A-X/DH-XVR7208A-4KL	-X/DH-
XVR7216A-4KL-X/DH-XVR7208A-4K-X/DH-5208AN-4KL-X-8/DH-5216AN-4KL-X-16P	20
3.2.6 DH-XVR7416L-4KL-X/DH-XVR5432L-X	22
3.2.7 DH-XVR7816S-4KL-X/DH-XVR5832S-X	23
3.3 Remote Control Operations	25
3.4 Mouse Operations	27
4 Connecting Basics	29
4.1 Typical Connection Diagram	29
4.2 Connecting to Video and Audio Input and Output	
4.2.1 Video Input	
4.2.2 Video Output	
4.2.3 Audio Input	32
4.2.4 Audio Output	
4.3 Connecting to Alarm Input and Output	
4.3.1 Introducing Alarm Port	33
4.3.2 Alarm Input	
4.3.3 Alarm Output	
4.3.4 Alarm Output Relay Parameters	
4.4 Connecting to RS485 Port	
5 Local Configurations	
5.1 Initial Settings	
5.1.1 Booting up	
5.1.2 Initializing the Device	
5.1.3 Resetting Password	
5.1.4 Setting Up with the Startup Wizard	
5.2 Live View	
5.2.1 Live View Screen	
5.2.2 Live View Control bar	
5.2.3 Navigation Bar	
5.2.4 Shortcut Menu	
5.2.5 Color Setting	71

5.2.7 Configuring Tour Settings 78 5.3 Entering Main Menu 81 5.4 Controlling PTZ Cameras 84 5.4.1 Configuring PTZ connection Settings 84 5.4.2 Working with PTZ Control Panel 86 5.4.3 Configuring PTZ Functions 88 5.4.4 Calling PTZ Functions 90 5.4.5 Calling OSD Menu 91 5.5 Configuring Camera Settings 92 5.5.1 Configuring Inage Settings 92 5.5.2 Configuring Snapshot Settings 93 5.5.4 Configuring Overlay Settings 95 5.5.3 Configuring Covered Area Settings 99 5.5.4 Configuring Covered Area Settings 99 5.5.5 Configuring Covered Area Settings 99 5.5.6 Configuring Covered Area Settings 99 5.6.7 Upgrading Covered Area Settings 101 5.6 Configuring Remote Devices 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 112 5.7 Configuring Record Settings 117 5.7 Configuring Snapshot Storage Schedule 118 5.7 2 Configuring Snapshot Storage Schedule 118 5.7 2 Configuring Snapshot
5.4 Controlling PTZ Cameras 84 5.4.1 Configuring PTZ Connection Settings 84 5.4.2 Working with PTZ Control Panel 86 5.4.3 Configuring PTZ Functions 88 5.4.4 Calling PTZ Functions 90 5.4.5 Calling OSD Menu 91 5.5 Configuring Camera Settings 92 5.5.1 Configuring Image Settings 92 5.5.3 Configuring Snapshot Settings 95 5.5.4 Configuring Covered Area Settings 98 5.5.5 Configuring Covered Area Settings 99 5.5.6 Configuring Covered Area Settings 99 5.5.6 Configuring Covered Area Settings 101 5.6 Configuring Covered Area Settings 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 102 5.6.2 Managing Record Settings 117 5.7.1 Enabling Record Control 118 5.7.2 Configuring Snapshot Settings 119 5.8.1 Configuring Snapshot Settings 119 5.8.1 Configuring Snapshot Settings 119 5.8.2 Configuring Snapshot Settings 119 5.8.2 Configuring Snapshot Settings 119 5.8.2 Configuring Sn
5.4.1 Configuring PTZ Connection Settings 84 5.4.2 Working with PTZ Control Panel 86 5.4.3 Configuring PTZ Functions 88 5.4.4 Calling PTZ Functions 90 5.4.5 Calling OSD Menu 91 5.5 Configuring Camera Settings 92 5.5.1 Configuring Image Settings 92 5.5.2 Configuring Covered Settings 95 5.5.3 Configuring Overlay Settings 97 5.5.4 Configuring Covered Area Settings 99 5.5.5 Configuring Covered Area Settings 99 5.5.6 Configuring Covered Area Settings 99 5.5.6 Configuring Covered Area Settings 99 5.5.6 Configuring Remote Devices 100 5.7 Upgrading Coaxial Camera 101 5.6 Configuring Remote Devices 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 112 5.7 Configuring Record Control 118 5.7.2 Configuring Record Control 118 5.7.2 Configuring Snapshot Storage Schedule 119 5.8.1 Configuring Snapshot Storage Schedule 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Cont
5.4.2 Working with PTZ Control Panel 86 5.4.3 Configuring PTZ Functions 88 5.4.4 Calling PTZ Functions 90 5.4.5 Calling OSD Menu 91 5.5 Configuring Camera Settings 92 5.5.1 Configuring Image Settings 92 5.5.2 Configuring Incode Settings 92 5.5.3 Configuring Snapshot Settings 97 5.5.4 Configuring Overlay Settings 98 5.5.5 Configuring Covered Area Settings 98 5.5.6 Configuring Covered Area Settings 99 5.5.6 Configuring Covered Area Settings 99 5.5.7 Upgrading Coaxial Camera 100 5.6 Configuring Remote Devices 102 5.6 1 Adding Remote Devices 102 5.6.1 Adding Remote Devices 102 5.6.1 Adding Remote Devices 114 5.7 Configuring Record Control 118 5.7.2 Configuring Record Control 118 5.7.2 Configuring Snapshot Storage Schedule 119 5.8.1 Configuring Snapshot Storage Schedule 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.1 Enabling Record Control 12
5.4.3 Configuring PTZ Functions885.4.4 Calling PTZ Functions905.4.5 Calling OSD Menu915.5 Configuring Camera Settings925.5.1 Configuring Image Settings925.5.2 Configuring Encode Settings955.5.3 Configuring Snapshot Settings975.5.4 Configuring Overlay Settings985.5.5 Configuring Covered Area Settings995.5.6 Configuring Covered Area Settings995.5.6 Configuring Covered Area Settings995.5.6 Configuring Channel Type1005.5.7 Upgrading Coaxial Camera1015.6 Configuring Remote Devices1025.6.1 Adding Remote Devices1025.6.2 Managing Remote Devices1025.6.2 Managing Record Settings1175.7.1 Enabling Record Control1185.7.2 Configuring Snapshot Strings1195.8 Configuring Snapshot Strings1195.8 Configuring Snapshot Strings1195.8.1 Configuring Snapshot Storage Schedule1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Splices1345.9.7 Playing Back Splices1355.10
5.4.4 Calling PTZ Functions 90 5.4.5 Calling OSD Menu 91 5.5 Configuring Camera Settings 92 5.5.1 Configuring Image Settings 92 5.5.2 Configuring Snapshot Settings 95 5.5.3 Configuring Overlay Settings 97 5.5.4 Configuring Overlay Settings 98 5.5.5 Configuring Overlay Settings 99 5.5.6 Configuring Covered Area Settings 99 5.5.6 Configuring Channel Type 100 5.7 Upgrading Coaxial Camera 101 5.6 Configuring Remote Devices 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 114 5.7 Configuring Record Settings 117 5.7.1 Enabling Record Control 118 5.7.2 Configuring Record Video Storage Schedule 119 5.8 Configuring Snapshot Settings 119 5.8.1 Configuring Snapshot Storage Schedule 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.3 Main Interface of Video Playback 126 5.9.4 Smart Search 131
5.4.5 Calling OSD Menu 91 5.5 Configuring Camera Settings 92 5.5.1 Configuring Image Settings 92 5.5.2 Configuring Encode Settings 95 5.5.3 Configuring Snapshot Settings 97 5.5.4 Configuring Overlay Settings 98 5.5.5 Configuring Overlay Settings 98 5.5.6 Configuring Covered Area Settings 99 5.5.6 Configuring Coaxial Camera 100 5.7 Upgrading Coaxial Camera 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 102 5.6.2 Managing Record Settings 117 5.7.1 Enabling Record Settings 119 5.8 Configuring Snapshot Settings 119 5.8.1 Configuring Snapshot Storage Schedule 119 5.8.2 Configuring Snapshot Storage Schedule 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.3 Main Interface of Video Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Splices 134
5.5 Configuring Camera Settings925.5.1 Configuring Image Settings925.5.2 Configuring Encode Settings955.5.3 Configuring Snapshot Settings975.5.4 Configuring Covered Area Settings985.5.5 Configuring Covered Area Settings995.5.6 Configuring Channel Type1005.7 Upgrading Coaxial Camera1015.6 Configuring Remote Devices1025.6.1 Adding Remote Devices1025.6.2 Managing Remote Devices1025.6.2 Managing Remote Devices1145.7 Configuring Record Settings1175.7.1 Enabling Record Control1185.7.2 Configuring Recorded Video Storage Schedule1195.8 Configuring Snapshot Storage Schedule1195.8 Configuring Snapshot Storage Schedule1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smat Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Snapshots1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Events Settings1375.10.1 Alarm Information1375.10.2 Alarm Input Settings138
5.5.1 Configuring Image Settings 92 5.5.2 Configuring Encode Settings 95 5.5.3 Configuring Snapshot Settings 97 5.5.4 Configuring Overlay Settings 98 5.5.5 Configuring Covered Area Settings 99 5.5.6 Configuring Channel Type 100 5.7 Upgrading Coaxial Camera 101 5.6 Configuring Remote Devices 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 102 5.6.2 Managing Remote Devices 114 5.7 Configuring Record Settings 117 5.7.1 Enabling Record Control 118 5.7.2 Configuring Recorded Video Storage Schedule 119 5.8.1 Configuring Snapshot Storage Schedule 119 5.8.2 Configuring Snapshot Storage Schedule 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 </td
5.5.1 Configuring Image Settings 92 5.5.2 Configuring Encode Settings 95 5.5.3 Configuring Snapshot Settings 97 5.5.4 Configuring Overlay Settings 98 5.5.5 Configuring Covered Area Settings 99 5.5.6 Configuring Channel Type 100 5.7 Upgrading Coaxial Camera 101 5.6 Configuring Remote Devices 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 102 5.6.2 Managing Remote Devices 114 5.7 Configuring Record Settings 117 5.7.1 Enabling Record Control 118 5.7.2 Configuring Recorded Video Storage Schedule 119 5.8.1 Configuring Snapshot Storage Schedule 119 5.8.2 Configuring Snapshot Storage Schedule 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 </td
5.5.2 Configuring Encode Settings 95 5.5.3 Configuring Snapshot Settings 97 5.5.4 Configuring Overlay Settings 98 5.5.5 Configuring Covered Area Settings 99 5.5.6 Configuring Channel Type 100 5.5.7 Upgrading Coaxial Camera 101 5.6 Configuring Remote Devices 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 102 5.6.2 Managing Record Settings 114 5.7 Configuring Record Settings 117 5.7.1 Enabling Record Control 118 5.7.2 Configuring Recorded Video Storage Schedule 119 5.8 Configuring Snapshot Settings 119 5.8.1 Configuring Snapshot Storage Schedule 124 5.8.3 Backing up Snapshots to FTP 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Snapshots 134 5.9.8 Using the File List 135
5.5.3 Configuring Snapshot Settings 97 5.5.4 Configuring Overlay Settings 98 5.5.5 Configuring Covered Area Settings 99 5.5.6 Configuring Channel Type 100 5.5.7 Upgrading Coaxial Camera 101 5.6 Configuring Remote Devices 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 102 5.6.2 Managing Remote Devices 114 5.7 Configuring Record Settings 117 5.7.1 Enabling Record Control 118 5.7.2 Configuring Recorded Video Storage Schedule 119 5.8.1 Configuring Snapshot Settings 119 5.8.2 Configuring Snapshot Storage Schedule 124 5.8.3 Backing up Snapshot Storage Schedule 124 5.9.1 Enabling Record Control 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.3 Main Interface of Video Playback 126 5.9.4 Smart Search 131 5.9.5 Playing Back Snapshots 134 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Snapshots 134 5.9.8 Using the File List 135
5.5.4 Configuring Overlay Settings985.5.5 Configuring Covered Area Settings995.5.6 Configuring Channel Type1005.7 Upgrading Coaxial Camera1015.6 Configuring Remote Devices1025.6.1 Adding Remote Devices1025.6.2 Managing Remote Devices1025.6.2 Managing Record Settings1145.7 Configuring Record Settings1175.7.1 Enabling Record Control1185.7.2 Configuring Recorded Video Storage Schedule1195.8 Configuring Snapshot Settings1195.8.1 Configuring Snapshot Storage Schedule1245.8.3 Backing up Snapshots to FTP1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Snapshots1345.9.7 Playing Back Splices1345.9.7 Playing Back Splices1345.9.7 Playing Back Splices1345.9.7 Playing Back Splices1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Information1375.10.2 Alarm Input Settings138
5.5.5 Configuring Covered Area Settings995.5.6 Configuring Channel Type1005.5.7 Upgrading Coaxial Camera1015.6 Configuring Remote Devices1025.6.1 Adding Remote Devices1025.6.2 Managing Remote Devices1145.7 Configuring Record Settings1175.7.1 Enabling Record Control1185.7.2 Configuring Record Control1195.8 Configuring Snapshot Settings1195.8.1 Configuring Snapshot Storage Schedule1195.8.2 Configuring Snapshot Storage Schedule1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Snapshots1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Information1375.10.2 Alarm Input Settings138
5.5.6 Configuring Channel Type 100 5.5.7 Upgrading Coaxial Camera 101 5.6 Configuring Remote Devices 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 102 5.6.2 Managing Remote Devices 114 5.7 Configuring Record Settings 117 5.7.1 Enabling Record Control 118 5.7.2 Configuring Recorded Video Storage Schedule 119 5.8 Configuring Snapshot Settings 119 5.8.1 Configuring Snapshot Storage Schedule 124 5.8.3 Backing up Snapshot Storage Schedule 124 5.9.4 Enabling Record Control 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.3 Main Interface of Video Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.5.7 Upgrading Coaxial Camera1015.6 Configuring Remote Devices1025.6.1 Adding Remote Devices1025.6.2 Managing Remote Devices1145.7 Configuring Record Settings1175.7.1 Enabling Record Control1185.7.2 Configuring Recorded Video Storage Schedule1195.8.1 Configuring Snapshot Settings1195.8.2 Configuring Snapshot Storage Schedule1245.8.3 Backing up Snapshot Storage Schedule1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Splices1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Events Settings1375.10.2 Alarm Input Settings138
5.6 Configuring Remote Devices 102 5.6.1 Adding Remote Devices 102 5.6.2 Managing Remote Devices 114 5.7 Configuring Record Settings 117 5.7.1 Enabling Record Control 118 5.7.2 Configuring Recorded Video Storage Schedule 119 5.8 Configuring Snapshot Settings 119 5.8.1 Configuring Snapshot Trigger 119 5.8.2 Configuring Snapshot Storage Schedule 124 5.8.3 Backing up Snapshot Storage Schedule 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.3 Main Interface of Video Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.2 Alarm Input Settings 138
5.6.1 Adding Remote Devices1025.6.2 Managing Remote Devices1145.7 Configuring Record Settings1175.7.1 Enabling Record Control1185.7.2 Configuring Recorded Video Storage Schedule1195.8 Configuring Snapshot Settings1195.8.1 Configuring Snapshot Trigger1195.8.2 Configuring Snapshot Storage Schedule1245.8.3 Backing up Snapshots to FTP1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Snapshots1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Events Settings1375.10.2 Alarm Input Settings138
5.6.2 Managing Remote Devices1145.7 Configuring Record Settings1175.7.1 Enabling Record Control1185.7.2 Configuring Recorded Video Storage Schedule1195.8 Configuring Snapshot Settings1195.8.1 Configuring Snapshot Storage Schedule1245.8.3 Backing up Snapshot Storage Schedule1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Splices1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Events Settings1375.10.2 Alarm Input Settings138
5.7 Configuring Record Settings1175.7.1 Enabling Record Control1185.7.2 Configuring Recorded Video Storage Schedule1195.8 Configuring Snapshot Settings1195.8.1 Configuring Snapshot Trigger1195.8.2 Configuring Snapshot Storage Schedule1245.8.3 Backing up Snapshot Storage Schedule1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Splices1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Events Settings1375.10.1 Alarm Information1375.10.2 Alarm Input Settings138
5.7.1 Enabling Record Control1185.7.2 Configuring Recorded Video Storage Schedule1195.8 Configuring Snapshot Settings1195.8.1 Configuring Snapshot Trigger.1195.8.2 Configuring Snapshot Storage Schedule1245.8.3 Backing up Snapshots to FTP1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Snapshots1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Events Settings1375.10.1 Alarm Information1375.10.2 Alarm Input Settings138
5.7.2 Configuring Recorded Video Storage Schedule1195.8 Configuring Snapshot Settings1195.8.1 Configuring Snapshot Trigger1195.8.2 Configuring Snapshot Storage Schedule1245.8.3 Backing up Snapshots to FTP1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Snapshots1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Events Settings1375.10.1 Alarm Information1375.10.2 Alarm Input Settings138
5.8 Configuring Snapshot Settings1195.8.1 Configuring Snapshot Trigger1195.8.2 Configuring Snapshot Storage Schedule1245.8.3 Backing up Snapshots to FTP1245.9 Playing Back Video1255.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Snapshots1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Events Settings1375.10.1 Alarm Information1375.10.2 Alarm Input Settings138
5.8.1 Configuring Snapshot Trigger. 119 5.8.2 Configuring Snapshot Storage Schedule 124 5.8.3 Backing up Snapshots to FTP. 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.3 Main Interface of Video Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.8.2 Configuring Snapshot Storage Schedule 124 5.8.3 Backing up Snapshots to FTP 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.3 Main Interface of Video Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.8.3 Backing up Snapshots to FTP 124 5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.3 Main Interface of Video Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.9 Playing Back Video 125 5.9.1 Enabling Record Control 125 5.9.2 Instant Playback 126 5.9.3 Main Interface of Video Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.9.1 Enabling Record Control1255.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Snapshots1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Events Settings1375.10.1 Alarm Information1375.10.2 Alarm Input Settings138
5.9.2 Instant Playback1265.9.3 Main Interface of Video Playback1265.9.4 Smart Search1315.9.5 Marking and Playing Back Video1325.9.6 Playing Back Snapshots1345.9.7 Playing Back Splices1345.9.8 Using the File List1355.10 Alarm Events Settings1375.10.1 Alarm Information1375.10.2 Alarm Input Settings138
5.9.3 Main Interface of Video Playback 126 5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.9.4 Smart Search 131 5.9.5 Marking and Playing Back Video 132 5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.9.5 Marking and Playing Back Video1325.9.6 Playing Back Snapshots1345.9.7 Playing Back Splices1345.9.8 Using the File List135 5.10 Alarm Events Settings1375.10.1 Alarm Information1375.10.2 Alarm Input Settings138
5.9.6 Playing Back Snapshots 134 5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.9.7 Playing Back Splices 134 5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.9.8 Using the File List 135 5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.10 Alarm Events Settings 137 5.10.1 Alarm Information 137 5.10.2 Alarm Input Settings 138
5.10.1 Alarm Information
5.10.2 Alarm Input Settings
5. 10.5 Aldrin Oulput Settings
5.10.4 Video Detection
5.10.5 System Events
5.11 Configuring IVS Function
5.11.1 Configuring Intelligent Settings
5.11.2 Enabling the Intelligent Settings for IP Camera
5.11.3 Using Smart Search
5.12 Configuring Face Detection

5.12.1 Configuring Face Detection Settings	183
5.12.2 Searching for Detected Faces	
5.12.3 Playing the Detected Faces	188
5.13 IoT Function	188
5.13.1 Configuring Sensor Settings	188
5.13.2 Configuring Temperature and Humidity Camera	196
5.13.3 Configuring Wireless Siren	208
5.14 Configuring POS Settings	209
5.14.1 Searching the Transaction Records	209
5.14.2 Configuring POS Settings	210
5.15 Configuring Backup Settings	
5.15.1 Finding USB Device	
5.15.2 Backing up Files	
5.16 Network Management	
5.16.1 Configuring Network Settings	
5.16.2 Configuring Network Testing Settings	
5.17 Configuring Account Settings	
5.17.1 Configuring User Account	
5.17.2 Configuring Group Account	
5.17.3 Configuring Onvif Users	
5.18 Audio Management	
5.18.1 Configuring Audio Files	
5.18.2 Configuring Playing Schedule for Audio Files	
5.19 Storage Management	
5.19.1 Configuring Basic Settings	
5.19.2 Configuring the Recording and Snapshot Schedule	
5.19.3 Configuring HDD Manager	
5.19.4 Configuring HDD Detecting Settings	
5.19.5 Configuring Record Estimate	
5.19.6 Configuring FTP Storage Settings	
5.20 Configuring System Settings	
5.20.1 Configuring General System Settings	
5.20.2 Configuring Security Settings	
5.20.3 Configuring System Maintenance Settings	
5.20.4 Exporting and Importing System Settings	
5.20.5 Restoring Default Settings	
5.20.6 Upgrading the Device	
5.21 Viewing Information	
5.21.1 Viewing Version Details	
5.21.2 Viewing Log Information	
5.21.3 Viewing Event Information	
5.21.4 Viewing Network Information	
5.21.5 Viewing HDD Information	
5.21.6 Viewing Channel Information	
5.21.7 Viewing Data Stream Information	
5.21.8 Viewing PoC Information	
5.22 Logout the Device	

6 Web Operations	281
6.1 Connecting to Network	281
6.2 Logging in the Web	281
6.3 Resetting Password	282
6.4 Introducing Web Main Menu	286
7 FAQ	288
Appendix 1 Glossary	294
Appendix 2 HDD Capacity Calculation	296
Appendix 3 Compatible Backup Devices	298
Appendix 3.1 Compatible USB list	298
Appendix 3.2 Compatible SD Card list	299
Appendix 3.3 Compatible Portable HDD list	299
Appendix 3.4 Compatible USB DVD List	299
Appendix 3.5 Compatible SATA DVD List	299
Appendix 3.6 Compatible SATA HDD List	300
Appendix 4 Compatible CD/DVD Burner List	305
Appendix 5 Compatible Displayer List	306
Appendix 6 Compatible Switcher	307
Appendix 7 Earthing	308
Appendix 7.1 What Is the Surge	308
Appendix 7.2 The Earthing Modes	309
Appendix 7.3 Thunder Proof Ground Method in the Monitor System	310
Appendix 7.4 The Shortcut Way to Check the Electric System by Digital Multimeter	311
Appendix 8 RJ45-RS232 Connection Cable Definition	314

1.1 Overview

The Device is an excellent digital monitor product for security industry. The embedded LINUX OS assures the stable operation. The H.265 and G.711 technologies assure the high quality image and low bit stream. The frame-by-frame play function displays more details for analysis, and provides the functions such as record, playback, and monitor and assures the synchronization for audio and video. The Device also adopts the advanced control technology and great network data transmission capability.

The Device adopts embedded design to achieve high security and reliability. It can work in the local end and, with strong networking capability it can get connected to the professional surveillance software (Smart PSS) to form a security network to show its powerful remote monitoring function.

The Device is applicable to the areas such as bank, telecom, electricity, traffic, intelligent residential district, factory, warehouse, resources, and water conservancy facilities.

1.2 Functions

The functions might be different depending on the software and hardware version of the model you purchased.

Real-time Surveillance

- Support VGA port and HDMI port to realize the surveillance through monitors.
- Support HDMI, VGA, and TV output at the same time.

IoT Management

Provide specific management module for IoT features including humidity and temperature data reports and alarms linkage.

Sensor Integration

Integrate coaxial cameras with diverse array of sensors such as temperature, humidity and wireless alarm devices.

Storage Management

- Special data format to guarantee data security and avoid the risk of modifying data viciously.
- Support digital watermark.

Compression Format

Support multiple-channel audio and video signal. An independent hardware decodes the audio and video signal from each channel to maintain video and audio synchronization.

Backup Function

- Support backup operation through USB port (such as USB storage disk, portable HDD, and burner).
- Client-end user can download the file from local HDD through network to backup.

Record & Playback

- Support each channel real-time record independently, and simultaneously support the functions such as search, backward play, network monitor, record search, and download.
- Support various playback modes: slow play, fast play, backward play and frame by frame play.
- Support time title overlay so that you can view event accurate occurred time.
- Support zooming in the selected area in the live view.

Network Operation

Support network remote real-time monitor, remote record search and remote PTZ control.

Alarm Activation

- Several relay alarm outputs to realize alarm activation and on-site light control.
- The alarm input port and output port have the protection circuit to guarantee the Device safety.

Communication Port

- RS485 port can realize alarm input and PTZ control.
- RS232 port can connect to keyboard, COM port of PC or the matrix control.
- Standard Ethernet port can realize network remote access function.
- The dual-network port has the multi-address, fault tolerance, load balance setup mode.

PTZ Control

Support PTZ decoder through RS485 port.

Intelligent Operation

- Support mouse operation function.
- Support "copy and paste" function for the same settings.

UPnP (Universal Plug and Play)

Establish mapping connection between LAN and WAN through UPnP protocol.

Camera Self-adaptive

Auto-recognize and work with the PAL or NTSC camera and HD camera.

2 Getting Started

2.1 Checking the Components

When you receive the Device, please check against the following checking list. If any of the items are missing or damaged, contact the local retailer or after-sales engineer immediately.

Sequence	Checking items		Requirement
1	Package	Appearance	No obvious damage.
		Packing materials	No broken or distorted positions that could be caused by hit.
2	Labels	Labels on the device	Not torn up. NOTE Do not tear up or throw away the labels; otherwise the warranty services are not ensured. You need to provide the serial number of the product when you call the after-sales service.
3	Device	Appearance	No obvious damage.
		Data cables, power cables, fan cables, mainboard	No connection loose.

2.2 Installing HDD

Please check if the HDD is already installed in the Device when you first time using the Device. It is suggested to use the HDD recommended officially. Do not use the PC HDD.

Shut down the device and then unplug the power cable before you open the case to replace the HDD.

2.2.1 DH-XVR5108C-X/DH-XVR5104C-4KL-X/DH-XVR5104C-X/ DH-XVR4104C-X/DH-XVR4108C-X



1. Remove the screws to take 2. Fix the screws on the HDD off the cover.



but do not fasten them.



4. Turn the DVR upside down to see the screws and then fasten them.



5. Use the HDD cable and power cable to connect HDD and mainboard.



3. Match the screws with the holes on the DVR to place the HDD.



6. Put back the cover and fasten the screws.

2.2.2 DH-XVR7104E-4KL-X/DH-XVR7108E-4KL-X/DH-XVR7104E-

4KL-B-X/ DH-XVR7108E-4KL-B-X

2.2.2.1 Installing Battery

D NOTE

The battery is only provided with some models.



1. Put the battery cable through the hole.



2. Connect to the cable into the port.

2.2.2.2 Installing HDD



Skip step 6 if the battery is not equipped with the model you purchased.



1. Remove the screws to take off the cover.



 Match the holes on the bracket with the screw holes on HDD.

- 2. Remove the screws to take off the bracket.



5. Use screws to fix the HDD onto the bracket.



3. Put the HDD onto the bracket.



 (Optional) Put the battery cable through the hole to connect into the cable port.



 Use the HDD cable and power cable to connect HDD and mainboard.



 Install the bracket back and then fasten the screws.



9. Put back the cover and fasten the screws.

2.2.3 DH-XVR4116HS-X/DH-XVR5108HS-X/DH-XVR5116HS-X/DH -XVR5104HS-4KL-X/DH-XVR5108HS-4KL-X/ DH-XVR5108H-X/DH-XVR5116H-X/DH-XVR5104H-4KL-X/DH-XVR 5108H-4KL-X/DH-XVR5116H-4KL-X/DH-XVR5108HE-X/DH-XVR51 16HE-X/DH-XVR7104HE-4KL-X/DH-XVR7108HE-4KL-X/DH-XVR7 116HE-4KL-X/DH-XVR7108HE-4K-X/DH-XVR5104HS-X/ DH-XVR4104HS-X/DH-XVR5104H-X/DH-XVR5104HE-X/DH-XVR4 108HS-X



1. Remove the screws on the rear panel.



 Turn the device to see the back side of it. Aim the screws of the HDD at the holes on the back of the



2. Fix the screws on the HDD but do not be fastened.



 Use the HDD cable and power cable to connect HDD and mainboard.



3. Place the HDD onto the Device.



Put back the cover and fix the screws.

2.2.4 DH-XVR4216AN-X/DH-XVR4232AN-X/DH-XVR5216AN-X/D H-XVR5232AN-X/DH-XVR5208AN-4KL-X/DH-XVR5216AN-4KL-X/ DH-XVR5216A-X/DH-XVR7208A-4KL-X/DH-XVR7216A-4KL-X/DH-XVR7208A-4K-X



1. Remove the screws on the cover.



 Fix the screws onto the HDD, but do not be fastened.



 Put the HDD into the Device.



 Turn the device to see the back side of it. Aim the screws of the HDD at the holes on the back of the device, and then fix the screws.



 Use the HDD cable and power cable to connect HDD and mainboard.



6. Put back the cover and fix the screws.

2.2.5 DH-XVR7416L-4KL-X/DH-XVR5432L-X



 Remove the screws on cover.



 Use the screws to fix the HDD onto the bracket.




3. Connect one end of HDD cable to the HDD.



 Connect the other end of HDD cable to the mainboard.







6. Put back the cover and fix the screws.

2.2.6 DH-XVR7816S-4KL-X/DH-XVR5832S-X



 Loose the screws on the panel and remove the cover.



 Fix the HDD(s) onto the bracket. Remove the top bracket if you want to install HDD to the bottom bracket.



Connect one end of HDD cable to the HDD.



 Connect the other end of HDD cable to the mainboard



 Use the power cable to connect HDD and mainboard.



Put back the cover and fix the screws.

2.3 Installing Device into Rack



Not all models support this function.

To install the DVR into Rack, do the following:

- <u>Step 1</u> Check if the in-house temperature is lower than $35^{\circ}C(95^{\circ}F)$ and make sure the 15cm (6in.) spacing around the Device for ventilation.
- Step 2 Use six screws to fix the DVR on each side.
- Step 3 Install from the bottom up.



If you want to install more accessories to the rack, take preventive measures to avoid power socket overload.

<u>Step 4</u> Install more accessories to the rack if needed.

3 The Grand Tour

This chapter introduces various components of the Device, remote control and mouse operations.

3.1 Front Panel

3.1.1 DH-XVR5108C-X/DH-XVR5104C-4KL-X/DH-XVR5104C-X/

DH-XVR4104C-X/DH-XVR4108C-X

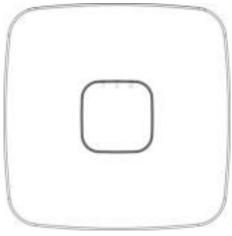


Figure 3-1

lcon	Name	Function	
		• The indicator is off when the HDD is running normally.	
0	HDD status indicator	• The indicator glows blue when the HDD is in	
		malfunction.	
		• The indicator is off when the power is connected	
ധ	Power status	abnormally.	
U	indicator	• The indicator glows blue when the power is connected	
		normally.	
		• The indicator is off when the network connection is	
器	Network status	correct.	
	indicator	• The indicator glows blue when the network connection	
		is abnormal.	

Table 3-1

4KL-B-X/ DH-XVR7108E-4KL-B-X

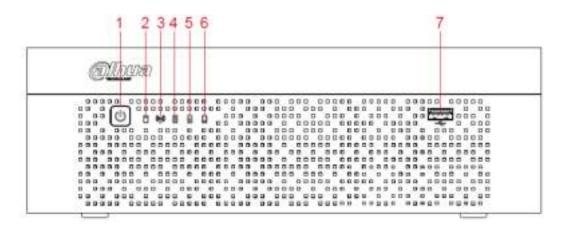


Figure 3-2

No.	Button/Icon	Function	
1	POWER	Turns on/off the DVR. The indicator glows blue when the DVR is turned on.	
2	HDD status indicator	The indicator glows blue when the HDD is in malfunction.	
3	Network status indicator	The indicator glows blue when the network connection is abnormal.	
4,5,6	Battery status indicator	 abnormal. When the battery remains full or no less than sixty percent, the No.4 indicator is on, and the No.5 and No.6 are out. When the battery remains between thirty percent and sixty percent, the No.5 indicator is on and the others are out. When the battery remains between one percent and thirty percent, the No.6 indicator is on and the others are out. When the battery is exhausted, the DVR is turned off, or there is no battery attached to the DVR, all the three indicators are out. 	
7	USB port	Connects to external devices such as USB storage device, keyboard and mouse.	

Table 3-2

3.1.3 DH-XVR5108H-X/DH-XVR5116H-X/DH-XVR5104H-4KL-X/D H-XVR5108H-4KL-X/DH-XVR5116H-4KL-X/DH-XVR5108HE-X/DH-XVR5116HE-X/DH-XVR4116HS-X/DH-XVR5108HS-X/DH-XVR511 6HS-X/DH-XVR5104HS-4KL-X/DH-XVR5108HS-4KL-X/ DH-XVR5104HS-X/DH-XVR4104HS-X/DH-XVR4108HS-X/DH-XVR 5104H-X/DH-XVR5104HE-X




Figure 3-3

No.	Port Name	Function
1	HDD	Glows blue when HDD status is abnormal.
2	NET	Glows blue when network status is abnormal.
3	POWER	Glows blue when the power is connected properly.
4	USB port	Connects to peripheral devices such as USB storage device, keyboard and mouse.

Table 3-3

3.1.4 DH-XVR7104HE-4KL-X/DH-XVR7108HE-4KL-X/DH-XVR711

6HE-4KL-X/DH-XVR7108HE-4K-X



Figure 3-4

No.	Port Name	Function
1	USB port	Connects to peripheral devices such as USB storage device,
		keyboard and mouse.

3.1.5 DH-XVR4216AN-X/DH-XVR4232AN-X/DH-XVR5216AN-X/D H-XVR5232AN-X/DH-XVR5208AN-4KL-X/DH-XVR5216AN-4KL-X/ DH-XVR5216A-X

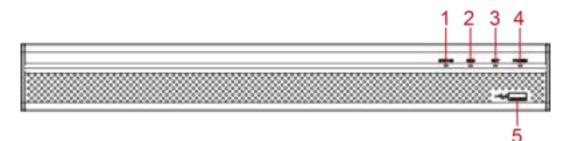


Figure 3-5

No.	Port Name	Function
1	Status indicator light	Glows blue when the device is working properly.
2	HDD	Glows blue when HDD status is abnormal.
3	NET	Glows blue when network status is abnormal.
4	POWER	Glows blue when the power is connected properly.
5	USB port	Connects to the external devices such as keyboard, mouse, and USB storage device.

Table 3-5

3.1.6 DH-XVR7208A-4KL-X/DH-XVR7216A-4KL-X/DH-XVR7208A-

4K-X



Figure 3-6

No.	Port Name	Function
1	Status indicator light	Glows blue when the device is working properly.
2	USB port	Connects to the external devices such as keyboard, mouse, and USB storage device.



3.1.7 DH-XVR7416L-4KL-X



Figure 3-7

No.	Port Name	Function
1	IR receiver	Receives infrared signal from remote control.
2	USB port	Connects to peripheral devices such as USB storage device, keyboard and mouse.

Table 3-7

3.1.8 DH-XVR7816S-4KL-X



Figure 3-8

No.	Port Name	Function
1	IR receiver	Receives infrared signal from remote control.
2	USB port	Connects to peripheral devices such as USB storage
device, keyboard and mouse.		

Table 3-8

3.1.9 DH-XVR5432L-X




Figure 3-9

No.	Port Name	Function
NO.	i ort Name	

No.	Port Name	Function
1	Status indicator light	Glows blue when the device is working properly.
2	HDD	Glows blue when HDD status is abnormal.
3	NET	Glows blue when network status is abnormal.
4	POWER	Glows blue when the power is connected properly.
5	USB port	Connects to peripheral devices such as USB storage device, keyboard and mouse.

Table 3-9

3.1.10 DH-XVR5832S-X



Figure 3-10

No.	Port Name	Function
1	Status indicator light	Glows blue when the device is working properly.
2	HDD	Glows blue when HDD status is abnormal.
3	NET	Glows blue when network status is abnormal.
4	POWER	Glows blue when the power is connected properly.
5	USB port	Connects to peripheral devices such as USB storage device, keyboard and mouse.

Table 3-10

3.2 Rear Panel

3.2.1 DH-XVR5108C-X/DH-XVR5104C-4KL-X/DH-XVR5104C-X/

DH-XVR4104C-X/DH-XVR4108C-X

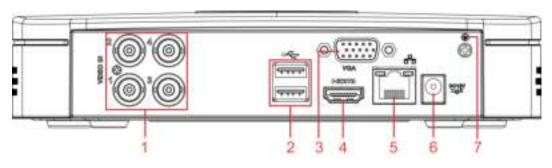
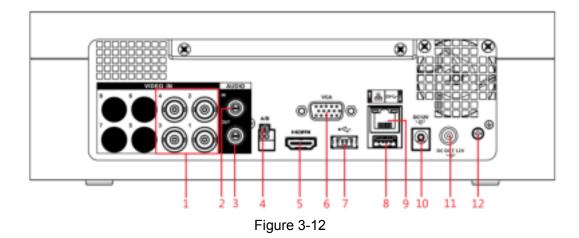


Figure 3-11

No.	Port Name	Function
1	Video input port	Connects to analog camera to input video signal.
2	USB port	Connects to external devices such as USB storage device, keyboard and mouse.
3	VGA port	Outputs analog video data to the connected display with VGA port.
4	HDMI port	High definition audio and video signal output port. The port outputs the uncompressed high definition video and multi-channel audio data to the connected display with HDMI port.
5	Network port	Connects to Ethernet port.
6	Power input port	Inputs DC 12V power.
7	e	Ground terminal.

Table 3-11

4KL-B-X/ DH-XVR7108E-4KL-B-X



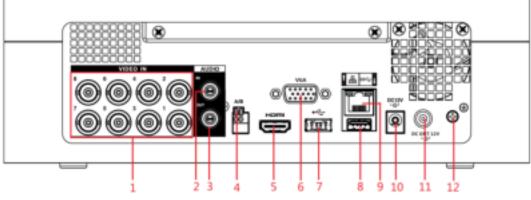


Figure 3-13

No.	Port Name	Function
1	Video input port	Connects to analog camera to input video signal.
2	Audio input port	Receives audio signal output from the devices such as microphone.
3	Audio output port	Outputs audio signal to the devices such as the sound box.
4	RS485 communication port	Connects to the control devices such as speed dome PTZ. RS485_A port is connected by the cable A and RS485_B is connected to the cable B.
5	HDMI port	High definition audio and video signal output port. The port outputs the uncompressed high definition video and multi-channel audio data to the connected display with HDMI port.
6	VGA port	Outputs analog video data to the connected display with VGA port.
7, 8	USB port	Connects to external devices such as USB storage device, keyboard and mouse.
9	Network port	Connects to Ethernet port.

No.	Port Name	Function
10	Power input port	Inputs DC 12V power.
11	Power output port	Outputs DC 12V power.
12	Ground	Ground terminal.

Table 3-12

3.2.3 DH-XVR4116HS-X/DH-XVR5108HS-X/DH-XVR5116HS-X/DH -XVR5104HS-4KL-X/DH-XVR5108HS-4KL-X/DH-XVR5104HS-X/ DH-XVR4104HS-X/DH-XVR4108HS-X

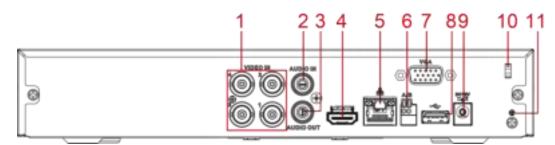


Figure 3-14

No.	Port Name	Function
1	Video input port	Connects to analog camera to input video signal.
2	Audio input port	Receives audio signal output from the devices such as microphone.
3	Audio output port	Outputs audio signal to the devices such as the sound box.
4	HDMI port	High definition audio and video signal output port. The port outputs the uncompressed high definition video and multi-channel audio data to the connected display with HDMI port.
5	Network port	Connects to Ethernet port.
6	RS485 communication port	Connects to the control devices such as speed dome PTZ. RS485_A port is connected by the cable A and RS485_B is connected to the cable B.
7	VGA port	Outputs analog video data to the connected display with VGA port.
8	USB port	Connects to external devices such as USB storage device, keyboard and mouse.
9	Power input port	Inputs DC 12V power.
10	Power cable fastener	Use clamp to secure the power cable on the DVR in case there is any loss.
11	Ð	Ground terminal.

Table 3-13

3.2.4 DH-XVR5108H-X/DH-XVR5116H-X/DH-XVR5104H-4KL-X/D H-XVR5108H-4KL-X/DH-XVR5116H-4KL-X/DH-XVR5108HE-X/DH-XVR5116HE-X/DH-XVR7104HE-4KL-X/DH-XVR7108HE-4KL-X/DH -XVR7116HE-4KL-X/DH-XVR7108HE-4K-X/DH-XVR5104H-X/DH-X VR5104HE-X/DH-XVR5108H-4KL-X-8P

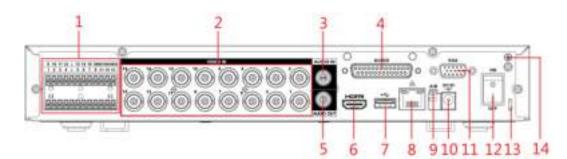


Figure 3-15

No.	Port Name	Function
1	Alarm input port 1–16	4 groups of alarm input ports (Group 1: port 1 to port 4; Group 2: port 5 to port 8; Group 3: port 9 to port 12; Group 4: port 13 to port 16). These ports receive the signal from the external alarm source. There are two types: NO (normal open) and NC (normal close). NOTE When your alarm input device is using external power, please make sure the alarm input device and the Device have the same ground.
	Alarm output port 1–3 (NO1–NO3; C1–C3)	 3 groups of alarm output ports (Group 1: port NO1–C1, Group 2: port NO2–C2, Group 3: port NO3–C3). These ports output alarm signal to the alarm device. Please make sure power supply to the external alarm device. NO: Normal open alarm output port. C: Alarm output public end.
	4	Ground.
2	Video input port	Connects to analog camera to input video signal.
3	Audio input port	Receives audio signal output from the devices such as microphone. It corresponds to video input port 1.
4	DB25 port	Connects to the audio splitter taken from the package to convert to audio input port which receives the audio signal from devices such as microphone. It corresponds to video input ports 2–16.
5	Audio output port	Outputs audio signal to the devices such as the sound box.

No.	Port Name	Function
6	HDMI port	High definition audio and video signal output port. The port outputs the uncompressed high definition video and multi-channel audio data to the connected display with HDMI port.
7	USB port	Connects to external devices such as USB storage device, keyboard and mouse.
8	Network port	Connects to Ethernet port.
9	RS485 communication port	Connects to the control devices such as speed dome PTZ. RS485_A port is connected by the cable A and RS485_B is connected to the cable B.
10	Power input port	Inputs DC 12V power.
11	VGA port	Outputs analog video data to the connected display with VGA port.
12	Power button	Turns on/off the DVR.
13	Power cable fastener	Use a cable tie to secure the power cable on the DVR to prevent loss.
14	\	Ground terminal.

Table 3-14

3.2.5 DH-XVR4216AN-X/DH-XVR4232AN-X/DH-XVR5216AN-X/D H-XVR5232AN-X/DH-XVR5208AN-4KL-X/DH-XVR5216AN-4KL-X/ DH-XVR5216A-X/DH-XVR7208A-4KL-X/DH-XVR7216A-4KL-X/DH-XVR7208A-4K-X/DH-5208AN-4KL-X-8/DH-5216AN-4KL-X-16P

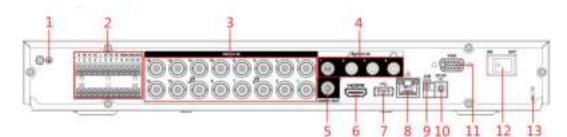


Figure 3-16

No.	Port Name	Function
1	⊕	Ground terminal.

No.	Port Name	Function
2	Alarm input port 1–16	4 groups of alarm input ports (Group 1: port 1 to port 4; Group 2: port 5 to port 8; Group 3: port 9 to port 12; Group 4: port 13 to port 16). These ports receive the signal from the external alarm source. There are two types: NO (normal open) and NC (normal close). NOTE When your alarm input device is using external power, please make sure the alarm input device and the DVR connect to the same ground.
	Alarm output port 1–3 (NO1–NO3; C1–C3)	 3 groups of alarm output ports. (Group 1: port NO1– C1,Group 2:port NO2–C2,Group 3:port NO3–C3)). These ports output alarm signal to the alarm device. Please make sure power supply to the external alarm device. NO: Normal open alarm output port. C: Alarm output public end.
	Ŧ	Ground.
3	Video input port	Connects to analog camera to input video signal.
4	Audio input port	Receives audio signal output from the devices such as microphone.
5	Audio output port	Outputs audio signal to the devices such as the sound box.
6	HDMI port	High definition audio and video signal output port. The port outputs the uncompressed high definition video and multi-channel audio data to the connected display with HDMI port.
7	USB port	Connects to the external devices such as keyboard, mouse, and USB storage device.
8	Network port	Connects to Ethernet port.
9	RS485 communication port	Connects to the control devices such as speed dome PTZ. RS485_A port is connected by the cable A and RS485_B is connected to the cable B.
10	Power input port	Inputs DC 12V power.
11	VGA port	Outputs analog video data to the connected display with VGA port.
12	Power button	Turns on/off the DVR.
13	Power cable fastener	Use clamp to secure the power cable on the DVR in case there is any loss.

Table 3-15

3.2.6 DH-XVR7416L-4KL-X/DH-XVR5432L-X

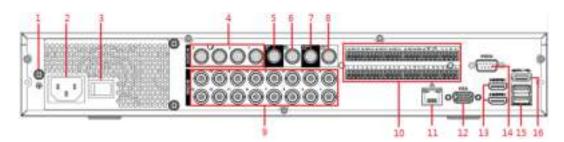


Figure 3-17

No.	Port Name	Function
1	ŧ	Ground terminal.
2	Power input port	Inputs power.
3	Power button	Turns on/off the DVR.
4	Audio input port	Receives audio signal output from the devices such as microphone.
5	Audio input port (MIC IN)	Tow-way talk input port which receives analog audio signal output from the devices such as microphone and pickup.
6	Audio output port (MIC OUT)	Tow-way talk output port which outputs the analog audio signal to the devices such as the sound box.
7	Audio output port	Outputs audio signal to the devices such as the sound box.
8	Video output port	Connects to video output devices such as TV.
9	Video input port	Connects to analog camera to input video signal.
10	Alarm input port 1–16	 4 groups of alarm input ports (Group 1: port 1 to port 4; Group 2: port 5 to port 8; Group 3: port 9 to port 12; Group 4: port 13 to port 16). These ports receive the signal from the external alarm source. There are two types: NO (normal open) and NC (normal close). NOTE When your alarm input device is using external power, please make sure the input device and the DVR connect to the same ground.
	Alarm output port 1–5 (NO1–NO5; C1–C5; NC5)	 5 groups of alarm output ports (Group 1: port NO1– C1,Group 2:port NO2–C2,Group 3:port NO3–C3, Group 4: port NO4–C4, Group 5: port NO5, C5, NC5). These ports output alarm signal to the alarm device. Please make sure power supply to the external alarm device. NO: Normal open alarm output port. C: Alarm output public end. NC: Normal close alarm output port.

No.	Port Name	Function
	RS485 communication port	Connects to the control devices such as speed dome PTZ. RS485_A port is connected by the cable A and RS485_B is connected to the cable B.
	Four-wire full-duplex 485 port (T+, T-, R+, R-)	Four-wire full-duplex 485 port. T+ and T- is the output wire; R+ and R- is the input wire.
	Power output control for alarm (CTRL 12V)	 Controls power output for alarm. The current is 500mA. Turns off power output when there is alarm output. Turns on power output when the alarm is cleared.
	12V power output port	Provides power to external devices such as camera and alarm device. Please note the power supply shall be below 1A.
	Ŧ	Ground.
10	Network port	Connects to Ethernet port.
12	VGA port	Outputs analog video data to the connected display with VGA port.
13	HDMI port	High definition audio and video signal output port. The port outputs the uncompressed high definition video and multi-channel audio data to the connected display with HDMI port.
14	RS232 debug COM	The port is used for general COM debug to configure IP address or transfer transparent COM data.
15	USB port	Connects to the external devices such as keyboard, mouse, and USB storage device.
16	eSATA port	External SATA port which connects to the device with SATA port. Perform the jumper configuration when connecting HDD.

Table 3-16

3.2.7 DH-XVR7816S-4KL-X/DH-XVR5832S-X

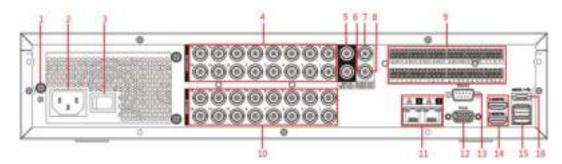


Figure 3-18

No.	Port Name	Function
1	GND	Ground.
2	Power input port	Inputs power.
3	Power button	Turns on/off the Device.

No.	Port Name	Function
4	Audio input port	Receives the analog audio signal output from the devices such as microphone.
5	Audio input port (MIC IN)	Tow-way talk input port which receives the analog audio signal output from the devices such as microphone, pickup.
6	Audio output port (MIC OUT)	Tow-way talk output port which outputs the analog audio signal to the devices such as the sound box.
7	Audio output port	Outputs the analog audio signal to the devices such as the sound box.
8	Video output port	Connect to video output devices such as TV.
9	Alarm input port 1–16	 4 groups of alarm output ports (Group 1: port 1 to port 4; Group 2: port 5 to port 8; Group 3: port 9 to port 12; Group 4: port 13 to port 16). These ports receive the signal from the external alarm source. There are two types; NO (normal open) and NC (normal close). When your alarm input device is using external power, please make sure the device and the NVR have the same ground.
	Alarm output port 1–5 (NO1–NO5; C1–C5; NC5)	 5 groups of alarm output ports. (Group 1: port NO1– C1,Group 2:port NO2–C2,Group 3:port NO3–C3, Group 4: port NO4–C4, Group 5: port NO5, C5, NC5). These ports output alarm signal to the alarm device. Please make sure power supply to the external alarm device. NO: Normal open alarm output port. C: Alarm output public end. NC: Normal close alarm output port.
	RS-485 communication port	You can connect to the control devices such as speed dome PTZ. RS485_A port is connected by the cable A and RS485_B is connected to the cable B.
	Four-wire full-duplex 485 port (T+, T-, R+, R-)	Four-wire full-duplex 485 port. T+ and T- is the output wire; R+ and R- is the input wire.
	Control power output (CTRL 12V)	Controller 12V power output. It is to control the on-off alarm relay output.
	12V power output port	Provides power to external devices such as camera and alarm device. Please note the supplying power shall be below 1A.
	Ŧ	Ground.
10	Video input port	Connect to analog camera to input video signal.
11	Network port	Connects to Ethernet port.
12	VGA video output	Outputs analog video signal. It can connect to the monitor to view analog video.

No.	Port Name	Function			
13	RS232 debug COM.	It is for general COM debug to configure IP address or transfer transparent COM data.			
14	HDMI port	High definition audio and video signal output port. It outputs the same video source as VGA. It supports 4K resolution output and supports mouse operation and control. Please note when the HDMI output resolution is 4K, the VGA output stops.			
15	USB port	Connects to the external devices such as keyboard, mouse, and USB storage device.			
16	eSATA port	External SATA port which connects to the device with SATA port. Perform the jumper configuration when connecting HDD.			

Table 3-17

3.3 Remote Control Operations



Please note the remote control is not our standard accessory and might not be included in the accessary bag. It is supplied dependent on the model you purchased.

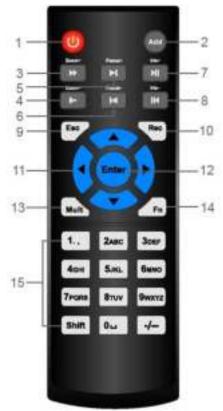


Figure 3-19

No.	Name	Function
1	Power button	Press this button to boot up or shut down the device.
2	Address	Press this button to input device serial number, so that you can control the Device.

No.	Name	Function					
3	Forward	Multi-step forward speed and normal speed playback.					
4	Slow motion	Multi-step slow motion speed or normal playback.					
5	Next record	In playback state, press this button to play back the next video.					
6	Previous record	In playback state, press this button to play back the previous video.					
7	Play/Pause	 In normal playback state, press this button to pause playback. In pause state, press this button to resume to normal playback. In live view window interface, press this button to enter video search menu. 					
8	Reverse/pause	In the reverse playback state, press this button to pause reverse playback. In the reverse playback pause state, press this button to resume to playback reversing state.					
9	Esc.	Go back to previous menu or cancel current operation (close front interface or control).					
10	Record	 Start or stop record manually. In record interface, use the direction buttons to select the channel that you want to record. Press this button for at least 1.5 seconds, and the manual record interface will be displayed. 					
11	Direction keys	Switch between current activated controls by going left or right. In playback state, the keys control the playback progress bar. Aux function (such as operating the PTZ menu).					
12	Enter/menu key	 Confirms an operation. Go to the OK button. Go to the menu. 					
13	Multiple-window switch	Switch between multiple-window and one-window.					
14	Fn	 In single-channel monitoring mode, press this button to display the PTZ control and color setting functions. Switch the PTZ control menu in PTZ control interface. In motion detection interface, press this button with direction keys to complete setup. In text mode, press and hold this button to delete the last character. To use the clearing function: Long press this button for 1.5 seconds. In HDD menu, switch HDD recording time and other information as indicated in the pop-up message. 					
15	Alphanumeric keys	 Input password, numbers. Switch channel. Press Shift to switch the input method. 					

Table 3-18

3.4 Mouse Operations

NOTE

The operations are based on the considerations for right-handed users.

Password input dialogue box pops up if you have not logged in yet. In live view window interface, you can go to the main menu. When you have selected one menu item, click it to view menu content. Implement the control operation. Modify checkbox or motion detection status. Click combo box to pop up drop-down list. In text box, click the corresponding button on the panel to enter a numeral or English character (small/capitalized). • In English input mode: Click I to enter a backspace and click I to delete the previous character. Implement special control operations such as double-click one item in the previous character. Implement special control operations such as double-click one item in the file list to play back the video. In multiple-window mode, ode. Right-click Right-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary. Exit current menu without saving the modification. In numeral input box: Increase or decrease numeral value. Switch the items in the check box. Page up or page down. Point to select and move Select current control and move it.		s are based on the considerations for right-handed users.					
In live view window interface, you can go to the main menu. When you have selected one menu item, click it to view menu content. Implement the control operation. Modify checkbox or motion detection status. Click combo box to pop up drop-down list. In text box, click the corresponding button on the panel to enter a numeral or English character (small/capitalized). • In English input mode: Click I to enter a backspace and click I to delete the previous character. • In numeral input mode: Click I to clear and click I to delete the previous character. • In numeral input mode: Click I to clear and click I to delete the previous character. • In numeral input mode: Click I to clear and click I to delete the previous character. • In numeral input mode: Click I to clear and click I to delete the previous character. • In numeral input mode: Click I to clear and click I to delete the previous character. • In numeral input mode: Click I to clear and click I to delete the previous character. • In numeral input mode: Click I to clear and click I to delete the previous character. Invible-click I to play back the video. In untiple-window mode, double-click one channel to view in full-window. Double-click Implement special control operations such as double-click one item in the file list to play back the video. Right-click I In unweral input worade, double-click one channel to view in full-window. <th>Operation</th> <th>Function</th>	Operation	Function					
When you have selected one menu item, click it to view menu content. Implement the control operation. Modify checkbox or motion detection status. Click combo box to pop up drop-down list. In text box, click the corresponding button on the panel to enter a numeral or English character (small/capitalized). In text box, click the corresponding button on the panel to enter a numeral or English character (small/capitalized). In lengtish input mode: Click I to enter a backspace and click I to delete the previous character. Implement special control operations such as double-click one item in the file list to play back the video. Double-click left mouse button Implement special control operations such as double-click one item in the file list to play back the video. In multiple-window mode, double-click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode. Right-click Right-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary. Exit current menu without saving the modification. In numeral input box: Increase or decrease numeral value. Switch the items in the check box. Page up or page down. Point to select and move Select current control and move it.							
Implement the control operation. Modify checkbox or motion detection status. Click combo box to pop up drop-down list. In text box, click the corresponding button on the panel to enter a numeral or English character (small/capitalized). • In English input mode: Click into the control operation. Intext box, click the corresponding button on the panel to enter a numeral or English character (small/capitalized). • In English input mode: Click into the control operations character. Implement special control operations such as double-click one item in the file list to play back the video. In multiple-window mode, double-click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode. Right-click Right-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary. Exit current menu without saving the modification. In numeral input box: Increase or decrease numeral value. Switch the items in the check box. Page up or page down. Point to select and move Select current control and move it.							
Modify checkbox or motion detection status. Click combo box to pop up drop-down list. In text box, click the corresponding button on the panel to enter a numeral or English character (small/capitalized). In English input mode: Click I to enter a backspace and click I to delete the previous character. Image: Click left mouse button In In numeral input mode: Click I to clear and click I to delete the previous character. Image: Click left mouse button In numeral input mode: Click I to clear and click I to delete the previous character. Image: Click left mouse button Image: Click current video again to go back to previous multiple-window mode. Double-click left mouse button Right-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary. Exit current menu without saving the modification. In numeral input box: Increase or decrease numeral value. Click scroll wheel button Switch the items in the check box. Page up or page down. Page up or page down. Point to select and move Select cur		When you have selected one menu item, click it to view menu content.					
Click combo box to pop up drop-down list. In text box, click the corresponding button on the panel to enter a numeral or English character (small/capitalized). • In English input mode: Click • to enter a backspace and click • to delete the previous character. • In numeral input mode: Click • to clear and click • to delete the previous character. • In numeral input mode: Click • to clear and click • to delete the previous character. • In numeral input mode: Click • to clear and click • to delete the previous character. • In numeral input mode: Click • to clear and click • to delete the previous character. • In numeral input mode: Click • to clear and click • to delete the previous character. • In numeral input mode: Click • to clear and click • to delete the previous character. • In numeral input mode: Click • to clear and click • to delete the previous character. • In numeral input mode: Click • to clear and click • to delete the previous character. • In numeral input mode: Click • to clear and click • to delete the previous character. • In numeral input mode: Click • to clear and click • to delete the previous character. • In nultiple-window mode, double-click one channel to view in full-window. Double-click In multiple-window mode, double-click one channel to view in full-window. Double-click In numeral input box: Increase or decrease numeral value. Right-click In numeral input box: Increase or decrea		Implement the control operation.					
In text box, click the corresponding button on the panel to enter a numeral or English character (small/capitalized). Click left mouse button In English input mode: Click in to enter a backspace and click in to delete the previous character. Image: Click left mouse button Double-click left mouse button Implement special control operations such as double-click one item in the file list to play back the video. In numeral input mode: click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode. Right-click Right-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary. Exit current menu without saving the modification. In numeral input box: Increase or decrease numeral value. Click scroll wheel button Switch the items in the check box. Page up or page down. Page up or page down.		Modify checkbox or motion detection status.					
Click left mouse or English character (small/capitalized). Click left mouse In English input mode: Click I to enter a backspace and click I to delete the previous character. Image: Click left mouse Image: Click left mouse Double-click left mouse button Implement special control operations such as double-click one item in the file list to play back the video. Immultiple-window mode, double-click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode. Right-click Right-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary. Exit current menu without saving the modification. In numeral input box: Increase or decrease numeral value. Click scroll wheel button Switch the items in the check box. Page up or page down. Page up or page down. Point to select and move Select current control and move it.		Click combo box to pop up drop-down list.					
Click left mouse button to delete the previous character. Implement special control operations such as double-click one item in the previous character. Implement special control operations such as double-click one item in the file list to play back the video. In multiple-window mode, double-click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode. Right-click Right-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary. Exit current menu without saving the modification. In numeral input box: Increase or decrease numeral value. Click scroll wheel button Switch the items in the check box. Point to select and move Select current control and move it.							
button bu	Click loft mouse	• In English input mode: Click 🔤 to enter a backspace and click 📰					
Pouble-click left Implement special control operations such as double-click one item in the file list to play back the video. In multiple-window mode, double-click one channel to view in full-window. Double-click left Right-click Right-click scroll wheel button In numeral input box: Increase or decrease numeral value. Switch the items in the check box. Point to select and move Select current control and move it.		to delete the previous character.					
previous character.Implement special control operations such as double-click one item in the file list to play back the video.Double-click left mouse buttonImplement special control operations such as double-click one item in the file list to play back the video.In multiple-window mode, double-click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode.Right-clickRight-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary.Right-click scroll wheel buttonIn numeral input box: Increase or decrease numeral value.Click scroll wheel buttonSwitch the items in the check box.Point to select and moveSelect current control and move it.	buttom	!? # \$ % = + * ← 1 2 3 q w r t y u o p / 4 5 6 a s d l n k l Enter 7 8 9 z x v b n m Shift ⊷ 0 8					
Image: Double-click left mouse buttonImplement special control operations such as double-click one item in the file list to play back the video. In multiple-window mode, double-click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode.Right-clickRight-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary.Right-click scoroll whee buttonIn numeral input box: Increase or decrease numeral value.Click scroll whee buttonSwitch the items in the check box.Point to select moveSelect current control and move it.		• In numeral input mode: Click 🔤 to clear and click 🔚 to delete the					
Double-click mouse buttonfile list to play back the video.In multiple-window mode, double-click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode.Right-clickRight-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary.Exit current menu without saving the modification.Click scroll wheel buttonIn numeral input box: Increase or decrease numeral value.Switch the items in the check box.Point to select and moveSelect current control and move it.		previous character.					
Double-click mouse buttonfile list to play back the video.In multiple-window mode, double-click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode.Right-clickRight-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary.Exit current menu without saving the modification.Click scroll wheel buttonIn numeral input box: Increase or decrease numeral value.Switch the items in the check box.Point to select and moveSelect current control and move it.		1 2 3 4 5 6 7 8 9 0 ↓↓ ↓↓					
Double-click In multiple-window mode, double-click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode. Right-click Right-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary. Exit current menu without saving the modification. In numeral input box: Increase or decrease numeral value. Switch the items in the check box. Page up or page down. Point to select and move		Implement special control operations such as double-click one item in the					
mouse button In multiple-window mode, double-click one channel to view in full-window. Double-click current video again to go back to previous multiple-window mode. Right-click Right-click in live view window interface, the shortcut menu is displayed. For different series product, the shortcut menu may vary. Exit current menu without saving the modification. In numeral input box: Increase or decrease numeral value. Click scroll wheel button Switch the items in the check box. Point to select and move Select current control and move it.	Double-click left						
Right-click different series product, the shortcut menu may vary. Exit current menu without saving the modification. Click scroll wheel button In numeral input box: Increase or decrease numeral value. Switch the items in the check box. Page up or page down. Point to select and move Exect current control and move it.	mouse button	Double-click current video again to go back to previous multiple-window					
Exit current menu without saving the modification. Click scroll wheel button In numeral input box: Increase or decrease numeral value. Switch the items in the check box. Page up or page down. Point to select and move Select current control and move it.	Right-click						
Click scroll wheel button Switch the items in the check box. Page up or page down. Point to select and move Select current control and move it.	Č	Exit current menu without saving the modification.					
button Switch the items in the check box. Page up or page down. Point to select and move Select current control and move it.		In numeral input box: Increase or decrease numeral value.					
Page up or page down. Point to select and move Select current control and move it.		Switch the items in the check box.					
and move Select current control and move it.		Page up or page down.					
Dragging a Select motion detection zone.	Point to select and move	Select current control and move it.					
	Dragging a	Select motion detection zone.					


Operation	Function
selection box with left mouse button	Select privacy mask zone.

Table 3-19

4 Connecting Basics

This chapter introduces the typical connection diagrams and ports connections.

4.1 Typical Connection Diagram

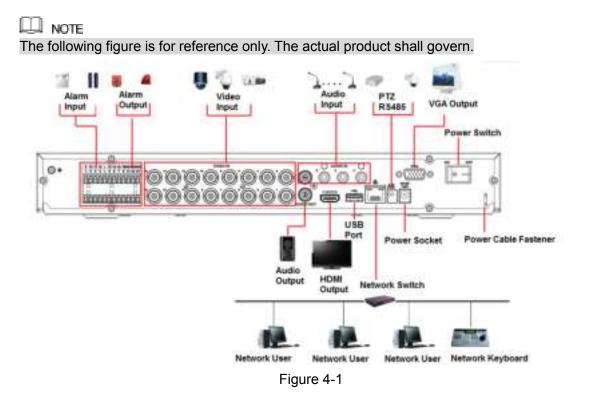

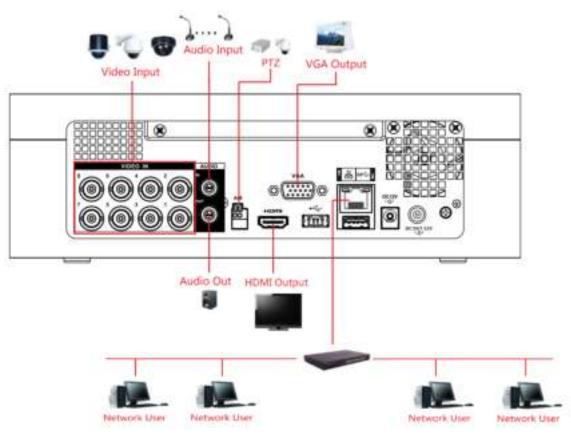


Figure 4-2

4.2 Connecting to Video and Audio Input and Output

4.2.1 Video Input

The video input interface is BNC. The input video format includes: PAL/NTSC BNC (1.0V_{P-P}, 75 Ω).

The video signal should comply with your national standards.

The input video signal shall have high SNR, low distortion; low interference, natural color and suitable lightness.

Guarantee the stability and reliability of the camera signal

The camera shall be installed in a cool, dry place away from direct sunlight, inflammable, explosive substances and etc.

The camera and the DVR should have the same grounding to ensure the normal operation of the camera.

Guarantee stability and reliability of the transmission line

Please use high quality, sound shielded BNC. Please select suitable BNC model according to the transmission distance.

If the distance is too long, you should use twisted pair cable, and you can add video compensation devices or use optical fiber to ensure video quality.

You should keep the video signal away from the strong electromagnetic interference, especially the high tension current.

Keep connection lugs in well contact

The signal line and shielded wire should be fixed firmly and in well connection. Avoid dry joint, lap welding and oxidation.

4.2.2 Video Output

Video output includes a BNC (PAL/NTSC1.0V_{P-P}, 75 Ω) output, a VGA output and HDMI output. System supports BNC, VGA and HDMI output at the same time.

When you are using pc-type monitor to replace the monitor, please pay attention to the following points:

- To defer aging, do not allow the pc monitor to run for a long time.
- Regular demagnetization will keep device maintain proper status.
- Keep it away from strong electromagnetic interference devices.

Using TV as video output device is not a reliable substitution method. You also need to reduce the working hour and control the interference from power supply and other devices. The low quality TV may result in device damage.

4.2.3 Audio Input

These series products audio input port adopt BNC port.

Due to high impedance of audio input, please use active sound pick-up.

Audio transmission is similar to video transmission. Try to avoid interference, dry joint, loose contact and it shall be away from high tension current.

4.2.4 Audio Output

The audio output signal parameter is usually over 200mv 1K Ω (BNC or RCA). It can directly connect to low impedance earphone, active sound box or amplifier-drive audio output device.

If the sound box and the pick-up cannot be separated spatially, it is easy to arouse squeaking. In this case you can adopt the following measures:

- Use better sound pick-up with better directing property.
- Reduce the volume of the sound box.
- Using more sound-absorbing materials in decoration can reduce voice echo and improve acoustics environment.
- Adjust the layout to reduce happening of the squeaking.

4.3 Connecting to Alarm Input and Output

Please read the followings before connecting.

Alarm input

- Please make sure alarm input mode is grounding alarm input.
- Grounding signal is needed for alarm input.
- Alarm input needs the low level voltage signal.
- Alarm input mode can be either NC (normal Open) or NO (Normal Close).
- When you are connecting two DVRs or you are connecting one DVR and one other device, please use a relay to separate them.

Alarm output

The alarm output port should not be connected to high power load directly (It shall be less than 1A) to avoid high current which may result in relay damage. Please use the contactor to realize the connection between the alarm output port and the load.

How to connect PTZ decoder

- Ensure the decoder has the same grounding with DVR, otherwise you may not control the PTZ. Shielded twisted wire is recommended and the shielded layer is used to connect to the grounding.
- Avoid high voltage. Ensure proper wiring and some thunder protection measures.
- For too long signal wires, 120Ω should be parallel connected between A, B lines on the far end to reduce reflection and guarantee the signal quality.
- "485 A, B" of DVR cannot parallel connect with "485 port" of other device.
- The voltage between of A, B lines of the decoder should be less than 5V.


Please make sure the front-end device has soundly earthed

Improper grounding may result in chip damage.

4.3.1 Introducing Alarm Port

D NOTE

The alarm input ports are dependent on the model you purchased.



1	2	3	4	÷	5	6	7	8	÷	Α	в	÷	9	10	11	12	Ť	13	14	15	16	÷	Ť

Figure 4-3	3
------------	---

Icon	Description					
1, 2, 3, 4, 5, 6,						
7, 8, 9, 10, 11,	ALARM 1 to ALARM 16. The alarm becomes active in low voltage.					
12, 13, 14, 15, 16						
NO1 C1, NO2 C2,	There are four groups of normal open activation output (on/off button).					
NO3 C3, NO4 C4						
NO5 C5 NC5,	There is one group of normal open activation output (on/off button).					
	Control power output of the alarm output channel 6. Voltage current:					
CTRL 12V	500mA.					
GIRL IZV	• When there is an alarm output, close the power output.					
	• When the alarm is cancelled, open the power output.					
+12V	Rated current.					
120	Voltage current: 500mA.					
÷	Ground cable.					
	485 communication port. They are used to control devices such as					
485 A/B	decoder. 120 Ω should be parallel connected between A, B lines if there					
	are too many PTZ decoders.					
	Four-wire full-duplex RS485 port.					
T+,T-,R+,R-	T+ T-: output wire.					
	R+ R-: input wire.					

Table 4-1

4.3.2 Alarm Input

Please refer to the following figure for more information.

- Grounding alarm inputs which includes Normal open and Normal close type.
- Please parallel connect COM end and GND end of the alarm detector (Provide external power to the alarm detector).
- Please parallel connect the Ground of the DVR and the ground of the alarm detector.
- Please connect the NC port of the alarm sensor to the DVR alarm input(ALARM)

• Use the same ground with that of DVR if you use external power to the alarm device.

124	GND	COM	PC	Alarm device
0	P	0	10	connection terminal
			-	ALARM
				1
				GND GND

Figure 4-4

4.3.3 Alarm Output

- Provide external power to external alarm device.
- To avoid overloading, please read the following relay parameters table carefully.
- RS485 A/B cable is for the A/B cable of the PTZ decoder.

4.3.4 Alarm Output Relay Parameters

D NOTE

Refer to the actual product for relay model information.

Model		HFD23/005-1ZS	HRB1-S-DC5V		
Material of th	e touch	AgNi+ gold-plating	AuAg10/AgNi10/CuNi30		
	Rated switch capacity	30V DC 1A/125V AC 0.5A	24V DC 1A/125V AC 2A		
Rating (Resistance	Maximum switch power	62.5VA/30W	250VA/48W		
Load)	Maximum switch voltage	125V AC/60V DC	125V AC/60V DC		
	Maximum switch currency	2A	2A		
	Between touches	400VAC 1 minute	500VAC 1 minute		
Insulation	Between touch and winding	1000VAC 1 minute	1000VAC 1 minute		
Turn-on Time	9	5ms max	5ms max		
Turn-off Time	9	5ms max	5ms max		
l an an ita	Mechanical	1×10 ⁷ times (300 times/MIN)	5×10 ⁶ times (300 times/MIN)		
Longevity	Electrical	1×10 ⁵ times (30 times/MIN)	2.5×10 ⁴ times (30 times/MIN)		
Working Terr	perature	-30°℃—+70°℃	-40°C−+70°C		

4.4 Connecting to RS485 Port

- <u>Step 1</u> Connect the RS485 cable of the PTZ camera to the RS485 port on the Device. Ensure the match of A and B interfaces.
- <u>Step 2</u> Connect the video out cable of the PTZ camera to the video input port on the Device.
- <u>Step 3</u> Turn on the PTZ camera.

5 Local Configurations

Please read the following notes prior to using the Device.

📖 NOTE

- The interfaces in the Manual are used for introducing the operations and only for reference. The actual interface might be different dependent on the model you purchased. If there is inconsistency between the Manual and the actual product, the actual product shall govern.
- The Manual is a general document for introducing the product, so there might be some functions described for the Device in the Manual not apply to the model you purchased.
- Conventions for mouse operations on a menu.
 - ♦ Click: On the menu, left-click the mouse once on an option to enter the option setting.
 - Right-click: On any interface, right-click the mouse once to return to the previous level.
 For details about mouse operations, see "3.4 Mouse Operations."

5.1 Initial Settings

5.1.1 Booting up



- Ensure the input voltage corresponds to the power requirement of the Device. Power on the Device after the power cable is properly connected.
- To protect the Device, please connect the Device with the power cable first, and then connect to the power source.
- To ensure the stable work of the Device and the external devices connected to the Device and to prolong the batter life, it is recommended to refer to the national related standard to use the power source that provides stable voltage with less interference from ripples. USP power source is recommended.
- <u>Step 1</u> Connect the Device to the monitor.
- <u>Step 2</u> Plug in the power cable to the Device.
- <u>Step 3</u> Press the power button to turn on the Device. The power indicator light is on.
 - On the connected monitor, the live view screen is displayed by default. If you turn on the Device during the time period that is configured for recording, the system starts recording after it is turned on, and you will see the icon indicating recording status is working in the specific channels.

5.1.2 Initializing the Device

When booting up for the first time, you need to configure the password information for **admin** (by default).

D NOTE

To secure the Device, it is strongly recommended for you to properly keep the password for admin and modify it regularly.

<u>Step 1</u> Turn on the Device.

The Device Initialization interface is displayed. See Figure 5-1.

Device Initialization				
T. Emili Paseword	-+	2. Uhlosik Pattern	-	3. Pastword Protection
User	admin			
Password				word that has 8 to 32 It can be a combination of
Confirm Password				mber(s) and symbol(s) t two kinds of them
Prompt Owestion				not use special symbols
				Next

Figure 5-1

Step 2 Configure the password information for admin. For details, see Table 5-1.

Parameter	Description
User	By default, the user is admin .
Password	In the Password box, enter the password for admin.
	The new password can be set from 8 characters through 32
Confirm Password	characters and contains at least two types from number, letter and
	special characters (excluding"", """, ";", ":" and "&").
	In the Prompt Question box, enter the information that can remind
	you of the password.
Prompt Question	NOTE NOTE
	On the login interface, click 📠, the prompt will display to help you
	find back the password.

Table 5-1

Step 3 Click Next.

The unlock pattern setting interface is displayed. See Figure 5-2.

Device Initialization				
1. Enter Password			+	3. Password Protection
	Pleas	e draw the unlock p	attern.	
				Back Skip

Figure 5-2

<u>Step 4</u> Draw a unlock pattern.

After the setting is completed, the password protection settings interface is displayed. See Figure 5-3.

D NOTE

- The pattern that you want to set must cross at least four points.
- If you do not want to configure the unlock pattern, click Skip.
- Once you have configured the unlock pattern, the system will require the unlock pattern as the default login method. If you skip this setting, enter the password for login.

Device Initialization				
		2. Unlock Pattern		3. Paseword Protection
Email Address Security Questions Question 1 Answer Question 2 Attower	What is your fa		pdale in time ?	rd, please input property or
Question 3 Answer	What is the nar	ne of your favorite fru	17	
				Save

Figure 5-3

<u>Step 5</u> Configure the protection parameters for password. For details, see Table 5-2.
 After configuration, if you forgot the password for admin user, you can reset the password through the reserved email address or security questions. For details about resetting the password, see "0 Resetting Password."
 If you do not want to configure the settings, disable the email address and security questions functions on the interface.

Password Protection Mode	Description
Email Address	Enter the reserved email address. In the Email Address box, enter an email address for password reset. In case you forgot password, enter the security code that you will get from this reserved email address to reset the password of admin.
Security Questions	Configure the security questions and answers. In case you forgot password, enter the answers to the questions can make you reset the password.
III NOTE	

If you want to configure the email or security questions fucntion later or you want to change the configurations, select **Main Menu > ACCOUNT > USER**.

Table 5-2

<u>Step 6</u> Click **Save** to complete the settings.

The End-User License Agreement interface is displayed.

- Step 7 Select the I have read and agree to all terms check box.
- Step 8 Click Next.

The **Startup Wizard** interface is displayed. For details about quick settings during startup, see "5.1.3.3 Resetting Password

5.1.3 Resetting Password

You can reset the password by the following methods when you forgot the password for admin account.

- If the password reset function is enabled, you can use mobile phone to scan the QR code to reset the password. For details, see "5.1.3.2 Resetting Password on Local Interface."
- If the password reset function is disabled, there are two situations:
 - If you configured security questions, you can find back the password by the security questions.
 - If you did not configure the security questions, you can only use the reset button on the mainboard to restore the Device to factory default.

D NOTE

Not all models are provided with reset button.

5.1.3.1 Enabling Password Reset Function

<u>Step 1</u> Select Main Menu > SYSTEM > SECURITY > System Service, the System Service interface is displayed. See Figure 5-4.

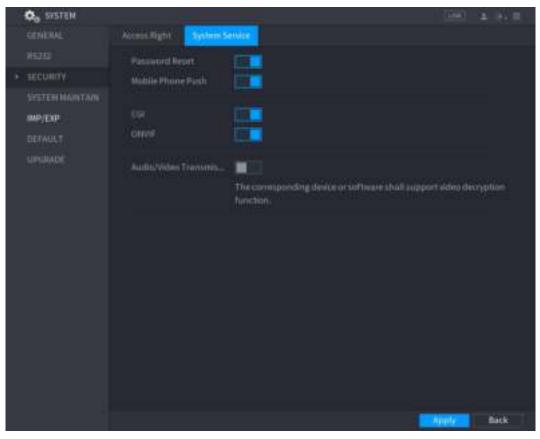


Figure 5-4

5.1.3.2 Resetting Password on Local Interface

Step 1 Enter the login interface.

- If you have configured unlock pattern, the unlock pattern login interface is displayed. See Figure 5-5. Click **Forgot Pattern**, the password login interface is displayed. See Figure 5-6.
- If you did not configure unlock pattern, the password login interface is displayed. See Figure 5-6.

LU NOTE

On the unlock pattern login interface, click **Switch User** to login; or on the password login interface, in the **User Name** list, select other users to login.




Figure 5-5

SYSTEM LOGI	4		2
User Name	admin		8
Password			٣
	OK Cancel	l	

Figure 5-6

Step 2 Click

- If you did not set the reserved email address, the email entering interface is displayed. See Figure 5-8. Enter the email address, and then click **Next**, the **Prompt** message interface is displayed. See Figure 5-7.
- If you have set the reserved email address, the **Prompt** message interface is displayed. See Figure 5-7.

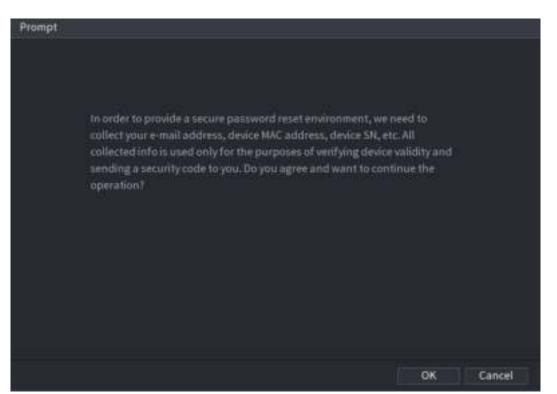



Resett	he password				
	Reset Type	QR Code			
	Email Address		To result parameters planet	s inque) property or vari	Addin un Simples
				Next	Gancel


Figure 5-8

Step 3 Click OK.

The Reset Password interface is displayed. See Figure 5-9.

D NOTE

After clicking **OK**, the system will collects your information for password reset, and the information includes but not limited to email address, MAC address, and device serial number. Please read the prompt carefully before clicking **OK**.

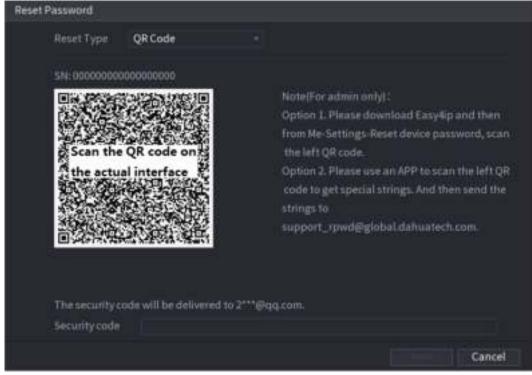



<u>Step 4</u> Reset the password.

QR code

Follow the onscreen instructions to get the security code in your reserved email address. In the **Security code** box, enter the security code.



- You can get the security code twice by scanning the same QR code. If you need to get the security code once again, please refresh the interface.
- Please use the security code received in your email box to reset the password within 24 hours; otherwise the security code becomes invalid.
- Security questions
- On the Reset the password interface as shown in Figure 5-8, in the Reset Type list, select Security Questions, the Security Questions interface is displayed, see Figure 5-10.

📖 NOTE

If you did not configure the security questions before, in the **Reset Type** list, there will be no **Security Questions**.

2) In the **Answer** box, enter the correct answers.

Reset Password	
Reset Type	Security Questions -
Question 1 Answer	
Question 2 Answer	
Question 3 Answer	
	Next Cancel

Figure 5-10

Step 5 Click Next.

The new password resetting interface is displayed. See Figure 5-11.

Reset Password	
Reset paraword of (activita)
New Password	
	Use a password that has 8 to 32 characters, it can be a combination of letter(s), number(s) and symbol(s) with at least two kinds of them. (please do not use special symbols like 1=1:6)
Confirm Password	
	Save Cancel

Figure 5-11

- <u>Step 6</u> In the **New Password** box, enter the new password and enter it again in the **Confirm Password** box.
- <u>Step 7</u> Click **Save**. The password resetting is started.

After resetting is completed, a pop-up message is displayed.

Step 8 Click OK.

A pop-up message is displayed asking if you want to sync the password with the remote devices, see Figure 5-12.

- Click **Cancel**, the resetting is finished.
- Click **OK**, the Sync Info interface is displayed. See Figure 5-12.

set the password			
Reset password	of (admin)		
New Password	******	Use a password th	
Clanfirm Passa	Message		mbck(s) with at
	Do you want to sync Pas device connecting via th		
	OK	Cancel	
			Save Cancel

Figure 5-12

D NOTE

This message appears only when there are digital channels instead of complete analog channels.

nc In	ła			
inishi	nd i			
_				
2	Channel	IP Address	Results	
		192.168.9.155	Password Succeed	
		192.168.9.59	Password:Succeed	
				Finished
				Filtished

Figure 5-13

5.1.3.3 Using Reset Button on the Mainboard


You can always use the reset button on the mainboard to reset the Device to the factory default.

📖 NOTE

Not all models are provided with reset button.

- <u>Step 1</u> Disconnect the Device from power source, and then remove the cover panel. For details about removing the cover panel, see "2.2 Installing HDD."
- <u>Step 2</u> Find the reset button on the mainboard, and then press and hold the reset button for 5 seconds to 10 seconds. See Figure 5-14 for the location of the reset button.

Figure 5-14 Reset button

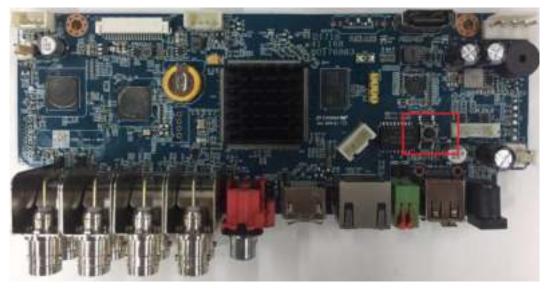

<u>Step 3</u> Reboot the Device.


After the Device is rebooted, the settings have been restored to the factory default. You can start resetting the password.

5.1.4 Setting Up with the Startup Wizard

5.1.4.1 Entering Startup Wizard

The Startup Wizard helps you configure the basic settings to set up the Device.

After you have initialized the Device, the **Startup Wizard** interface is displayed. See Figure 5-15.

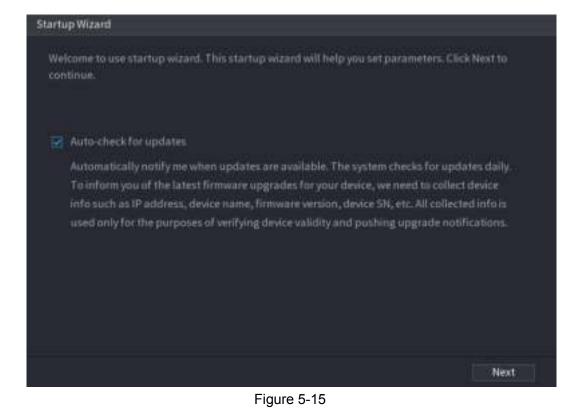

📖 NOTE

- If you select the **Auto-check for updates** check box, the system will notify you automatically when updates are available.
- After the auto-check function is enabled, to notify you to update timely, the system will collect the information such as IP address, device name, firmware version, and device serial number. The collected information is only used to verify the legality of the Device and push upgrade notices.
- If you clear the Auto-check for updates check box, the system will not perform automatic checks.

5.1.4.2 Configuring General Settings

You can configure the general settings for the Device such as Device name, language, and settings for instant playback.

You can also configure general settings by selecting **Main Menu > SYSTEM > GENERAL > General**.

<u>Step 1</u> On the **Startup Wizard** interface, click **Next**.

The **General** interface is displayed. See Figure 5-16.

General				
Device Name	XVR			
Device No.	8			
Language	ENGLISH			
Video Standard	NTSC			
Instant Play(Min.)	5			
Auto Logout(Min.)	10	Monitor	r Channel(s) wi	ien L
IPC Time Sync				
IPC Time Sync Period (hour)	24			
Navigation Bar				
Mouse Sensitivity		• + 850		
			Back	Next

Figure 5-16

<u>Step 2</u> Configure the general settings parameters. See Table 5-3.

Parameter	Description
Device Name	In the Device Name box, enter the Device name.
Device No.	In the Device No. box, enter a number for the Device.
Language	In the Language list, select a language for the Device system.
Video Standard	In the Video Standard list, select PAL or NTSC according to your actual situation.
Instant Play (Min.)	In the Instant Play box, enter the time length for playing back the recoded video. The value ranges from 5 to 60. On the live view control bar, click the instant playback button to play back the recorded video within the configured time.
Auto Logout (Min.)	In the Auto Logout box, enter the standby time for the Device. The Device automatically logs out when it is not working for the configured time period. You need to login the Device again. The value ranges from 0 to 60. 0 indicates there is not standby time for the Device. Click Monitor Channel(s) when logout . You can select the channels that you want to continue monitoring when you logged out.
IPC Time Sync	Syncs the Device time with IP camera.
IPC Time Sync Period (hour)	In the IPC Time Sync Period box, enter the interval for time sync.
Navigation Bar	Enable the navigation bar. When you click on the live view screen, the navigation bar is displayed.
Mouse Sensitivity	Adjust the speed of double-click by moving the slider. The bigger the value is, the faster the double-clicking speed must be.

Table 5-3

5.1.4.3 Configuring Date and Time Settings

You can configure the system time, choose the time zone, set the daylight saving time, and enable the NTP server.

You can also configure date and time settings by selecting **Main Menu > SYSTEM > GENERAL > Date&Time**.

<u>Step 1</u> After you have configured the general settings, on the **General** interface, click **Next**. The **Date&Time** interface is displayed. See Figure 5-17.

	1 3 6
Date&Time	
Sustan Time	2019 02 08 15 27 26
System Time	2018 - 02 - 08 15 : 37 : 36
System Zone	(GMT+08:00)Beijing,Urumqi,Singapore v
Date Format	YYYY MM DD -
Date Separator	• •
Time Format	24-HOUR -
DST	📃 💿 Week 🔾 Date
Start Time	Jan • 1st • Su • 05:00
End Time	Jan - 1st - Mo - 00:00
NTP	
Server	time.windows.com Manual Update
Port	123
Interval(Min.)	60
	Back Next

Figure 5-17

<u>Step 2</u> Configure the settings for date and time parameters. See Table 5-4.

Parameter	Description
	In the System Time box, enter time for the system.
	Click the time zone list, you can select a time zone for the system, and
	the time in adjust automatically.
System Time	
	Do not change the system time randomly; otherwise the recorded video
	cannot be searched. It is recommended to avoid the recoding period or
	stop recording first before you change the system time.
System Zone	In the System Zone list, select a time zone for the system.
Date Format	In the Date Format list, select a date format for the system.
Date Separator	In the Date Separator list, select a separator style for the date.
Time Format	In the Time Format list, select 12-HOUR or 24-HOUR for the time
	display style.
DST	Enable the Daylight Saving Time function. Click Week or click Date .
Start Time	Configure the start time and end time for the DST.

Parameter	Description
End Time	
NTP	Enable the NTP function to sync the Device time with the NTP server.
Server	In the Server box, enter the IP address or domain name of the corresponding NTP server. Click Manual Update , the Device starts syncing with the server immediately.
Port	The system supports TCP protocol only and the default setting is 123.
Interval (Min.)	In the Interval box, enter the amount of time that you want the Device to sync time with the NTP server. The value ranges from 0 to 65535.

Table 5-4

5.1.4.4 Configuring Network Settings

You can configure the basic network settings such as net mode, IP version, and IP address of the Device.

You can also configure network settings by selecting **Main Menu > NETWORK > TCP/IP**.

<u>Step 1</u> After you have configured the date and time settings, on the **Date&Time** interface, click **Next**.

NETWORK					
Net Mode	Multi-address		Default Ethernet	Ethernet Port1	
Ethernet Card	Ethernet Port1		IP Version	IPv4	
MAC Address					
DHCP					
IP Address	192 . 168 . 20 . 1	3			
Subnet Mask	255 , 255 , 0 , 0				
Default Gateway	192 , 168 , 0 , 1				
DNS DHCP					
Preferred DN5	8.8.8.8				
Alternate DNS	8 . 8 . 4 . 4				
MTU	1500				
				Back	Next

The NETWORK interface is displayed. See Figure 5-18

Figure 5-18

Step 2 Configure the settings for network parameters. See Table 5-5.

Parameter Description

Parameter	Description
Net Mode	 Multi-address: Two Ethernet ports work separately through either of which you can request the Device to provide the services such as HTTP and RTSP. You need to configure a default Ethernet port (usually the Ethernet port 1 by default) to request the services from the device end such as DHCP, Email and FTP. If one of the two Ethernet ports is disconnected as detected by networking testing, the system network status is regarded as offline. Fault Tolerance: Two Ethernet ports share one IP address. Normally only one Ethernet port is working and when this port fails, the other port will start working automatically to ensure the network connection. When testing the network status, the network is regarded as offline only when both of the two Ethernet ports are disconnected. The two Ethernet ports are used under the same LAN. Load Balance: Two network status, the network is regarded as offline only when both of the two Ethernet ports are disconnected. The two Ethernet ports are used under the same LAN. Load Balance: Two network status, the network is regarded as offline only when both of the two Ethernet ports are disconnected. The two Ethernet ports are used under the same LAN. Load Balance: Two network status, the network is regarded as offline only when both of the two Ethernet ports are disconnected. The two Ethernet ports are used under the same LAN. More testing the network status, the network is regarded as offline only when both of the two Ethernet ports are disconnected. The two Ethernet ports are used under the same LAN.
Default Ethernet Port	In the Ethernet Card list, select an Ethernet port as a default port. This setting is available only when the Multi-address is selected in the Net Mode list.
IP Version	In the IP Version list, you can select IPv4 or IPv6 . Both versions are supported for access.
MAC Address	Displays the MAC address of the Device.
DHCP	 Enable the DHCP function. The IP address, subnet mask and default gateway are not available for configuration once DHCP is enabled. If DHCP is effective, the obtained information will display in the IP Address box, Subnet Mask box and Default Gateway box. If not, all values show 0.0.0.0. If you want manually configure the IP information, disable the DHCP function first. If PPPoE connection is successful, the IP address, subnet mask, default gateway, and DHCP are not available for configuration.
IP Address	Enter the IP address and configure the corresponding subnet mask and
Subnet Mask	default gateway.
Default Gateway	IP address and default gateway must be in the same network segment.
DNS DHCP	Enable the DHCP function to get the DNS address from router.
Preferred DNS	In the Preferred DNS box, enter the IP address of DNS.

Parameter	Description
Alternate DNS	In the Alternate DNS box, enter the IP address of alternate DNS.
MTU	 In the MTU box, enter a value for network card. The value ranges from 1280 byte through 1500 byte. The default is 1500. The suggested MTU values are as below. 1500: The biggest value of Ethernet information package. This value is typically selected if there is no PPPoE or VPN connection, and it is also the default value of some routers, network adapters and switches. 1492: Optimized value for PPPoE. 1468: Optimized value for DHCP. 1450: Optimized value for VPN.
Test	Click Test to test if the entered IP address and gateway are interworking.

Table 5-5

5.1.4.5 Configuring P2P Settings

You can add the Device into your cell phone client or the platform to manage.

You can also configure P2P function by selecting **Main Menu > NETWORK > P2P**.

D NOTE

Make sure the DVR is connected into the Internet, and if yes, in the **Status** box of the P2P interface, it shows **Online**.

<u>Step 1</u> After you have configured the network settings, on the **NETWORK** interface, click **Next**.



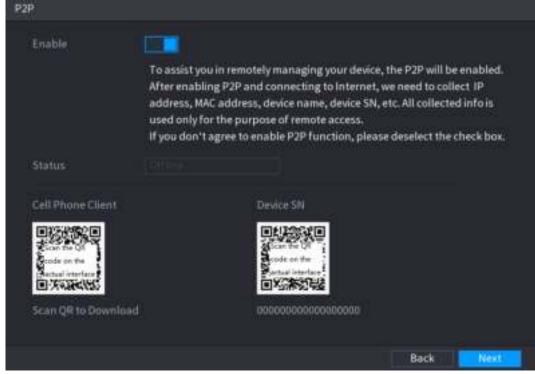


Figure 5-19

Step 2 Enable the P2P function.

D NOTE

After the P2P function is enabled and connected to the Internet, the system will collects your information for remote access, and the information includes but not limited to email address, MAC address, and device serial number.

You can start adding the device.

- Cell Phone Client: Use your mobile phone to scan the QR code to add the device into the Cell Phone Client, and then you can start accessing the Device.
- Platform: Obtain the Device SN by scanning the QR code. Go to the P2P management platform and add the Device SN into the platform. Then you can access and manage the device in the WAN. For details, please refer to the P2P operation manual.

D NOTE

You can also enter the QR code of Cell Phone Client and Device SN by clicking

on the top right of the interfaces after you have entered the Main Menu.

To use this function, take adding device into Cell Phone Client as an example.

Adding Device into Cell Phone Client

- <u>Step 1</u> Use your cell phone to scan the QR code under Cell Phone Client to download the application.
- Step 2 On your cell phone, open the application, and then tap

The menu is displayed. You can start adding the device.

- 1) Tap Device Manager.
 - The **Device Manager** interface is displayed. See Figure 5-20.

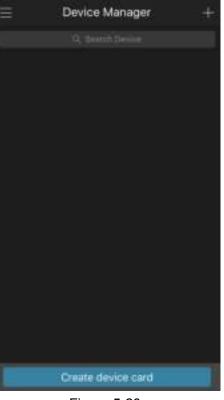


Figure 5-20

2) Tap **I** on the top right corner.

The interface requiring device initialization is displayed. A pop-up message reminding you to make sure the Device is initialized is displayed.

- 3) Tap **OK**.
 - ◇ If the Device has not been initialized, Tap **Device Initialization** to perform initializing by following the onscreen instructions.
 - \diamond If the Device has been initialized, you can start adding it directly.
- 4) Tap Add Device.

The Add Device interface is displayed. See Figure 5-21.

D NOTE

You can add wireless device or wired device. The Manual takes adding wired device as an example.

<	P2P	
Register Mode:		P2P
Name		
\$N:		×
Username:		admin
Password:		
Live Preview:		Extra >
Playback:		Extra >
Stert	Live Preview	

Figure 5-21

5) Tap **P2P**.

The **P2P** interface is displayed. See Figure 5-22.

<	P2P	
Register Mode:		P2P
Norme		
SN:		26
Username		admin
Password:		
Live Preview:		Extra >
Playback:		Extra >
Stort	Live Preview	

Figure 5-22

6) Enter a name for the DVR, the username and password, scan the QR code under **Device SN**.

7) Tap Start Live Preview.

The Device is added and displayed on the live view interface of the cell phone. See Figure 5-23.



Figure 5-23

5.1.4.6 Configuring Encode Settings

You can configure the settings of main stream and sub stream for the Device.

The Encode interface is displayed. See Figure 5-24.

You can also configure encode settings by selecting **Main Menu > CAMERA > ENCODE > Encode**.

<u>Step 1</u> After you have configured the P2P settings, on the **P2P** interface, click **Next**.

Channel	11192				
Main Stream			Sub Stream		
Smart Codec			Video		
Type	General		Туре	Sub Stream 1	
Compression	H.265		Compression	H.265	
Resolution	1920x1080(10	180P) -	Resolution	352x288(CIF)	
Frame Rate(FPS)	25		Frame Rate(FPS)	15	
Bit Rate Type	CBR		Bit Rate Type	CBR	
I France Interval	15		I Frame Interval	15	
Bit Rate(Kb/S)	2048		Bit Rate(Kb/S)	320	
	More Setting			More Setting	

Figure 5-24

Step 2 Configure the settings for the main/sub streams parameters. See Table 5-6.

Parameter	Description		
Channel	In the Channel list, select the channel that you want to configure the		
	settings for.		
	Enable the smart codec function. This function can reduce the video		
Smart Codec	bit stream for non-important recorded video to maximize the storage		
	space.		
	• Main Stream: In the Type list, select General , MD (Motion		
Туре	Detect), or Alarm .		
	Sub Stream: This setting is not configurable.		
	In the Compression list, select the encode mode.		
	• H.265: Main profile encoding. This setting is recommended.		
	H.264H: High profile encoding. Low bit stream with high		
Compression	definition.		
	H.264: Main profile encoding.		
	• H.264B: Baseline profile encoding. This setting requires higher bit		
	stream compared with other settings for the same definition.		
	In the Resolution list, select resolution for the video.		
Resolution	The maximum video resolution might be different dependent on your		
	device model.		

Parameter	Description
	Configure the frames per second for the video. The higher the value,
	the clearer and smoother the image will become. Frame rate changes
Frame Rate	along with the resolution.
(FPS)	Generally, in PAL format, you can select the value from 1 through 25;
(113)	in NTSC format, you can select the value from 1 through 30. However,
	the actual range of frame rate that you can select depends on the
	capability of the Device.
	In the Bit Rate Type list, select CBR (Constant Bit Rate) or VBR
Bit Rate Type	(Variable Bit Rate). If you select CBR , the image quality cannot be
	configured; if you select VBR, the image quality can be configured.
Quality	This function is available if you select VBR in the Bit Rate List.
Quanty	The bigger the value is, the better the image will become.
I Frame Interval	The interval between two reference frames.
	In the Bit Rate list, select a value or enter a customized value to
Bit Rate (Kb/S)	change the image quality. The bigger the value is, the better the
	image will become.
Video	Enable the function for sub stream.
	Click More Setting , the More Setting interface is displayed.
Audio Encode	Audio Encode: This function is enabled by default for main
	stream. You need to manually enable it for sub stream 1. Once
	this function is enabled, the recorded video file is composite
Audio Source	audio and video stream.
	• Audio Source: In the Audio Source list, you can select LOCAL
	and HDCVI.
	COCAL: The audio signal is input from Audio In port.
Audio Format	\diamond HDCVI: The audio signal is input from HDCVI camera.
Audio Format	• Audio Format: In the Audio Forma t list, select a format that you
	need.

Table 5-6

5.1.4.7 Configuring Snapshot Settings

You can configure the basic snapshot settings such as quantity of snapshot each time, channel(s) to take snapshot, and image size and quality of snapshot.

You can also configure general settings by selecting **Main Menu > CAMERA > ENCODE > Snapshot**.

For more information about snapshot settings, see "5.8 Configuring Snapshot Settings." <u>Step 1</u> After you have configured the encode settings, on the **Encode** interface, click **Next**.

The **SNAPSHOT** interface is displayed. See Figure 5-25.

SNAPSHOT				
Manual Snap	1 -	/Time		
Channel	1 -			
Mode	General -			
Image Size	352x288(CIF) -			
Image Quality	4 -			
Interval	1 Second -			
Default Copy			Back	Next

Figure 5-25

Step 2 Configure the settings for the snapshot parameters. See Table 5-7.

Parameter	Description	
Manual Snap	In the Manual Snap list, select how many snapshots you want to take	
	each time.	
Channel	In the Channel list, select the channel that you want to configure the	
	settings for.	
Mode	In the Mode list, select type of snapshots.	
Image Size	In the Image Size list, select a value for the image.	
Image Quality	Configure the image quality by 6 levels. The higher the level, the	
	better the image will become.	
Interval	Configure or customize the snapshot frequency.	
— · · · —		

Table 5-7

5.1.4.8 Configuring Basic Storage Settings

You can configure the settings for the situations when HDD is full, file length and time length of recorded video, and the settings if to auto-delete the old files.

You can also configure basic storage settings by selecting **Main Menu > STORAGE > BASIC**. <u>Step 1</u> After you have configured the encode settings, on the **SNAPSHOT** interface, click

Next.

The **BASIC** interface is displayed. See Figure 5-26.

BASIC				
HDD Full	Overwrite -			
Pack Mode	Time Length v	60	Min.	
Auto-Delete Old Files	Never *			
			Back	Next

Figure 5-26

<u>Step 2</u> Configure the basic storage settings parameters. See Table 5-8.

Parameter	Description	
HDD Full	Configure the settings for the situation when all the read/write discs are full, and there is no more free disc.	
	Select Stop Record to stop recording	
	• Select Overwrite to overwrite the recorded video files always	
	from the earliest time.	
Pack Mode	Configure the time length and file length for each recorded video.	
Auto-Delete Old Files	Configure whether to delete the old files and if yes, in the Auto-Delete	
	Old Files list, select Customized to configure the time length for how	
	long you want to keep the old files.	

Table 5-8

5.1.4.9 Configuring Recorded Video Storage Schedule

You can configure the schedule for the recorded video such as channels to record, alarm settings, and the armed period.

You can also configure recorded video storage settings by selecting **Main Menu > STORAGE > SCHEDULE > Record**.

<u>Step 1</u> After you have configured the basic storage settings, on the **BASIC** interface, click **Next**.

The **Record** interface is displayed. See Figure 5-27.

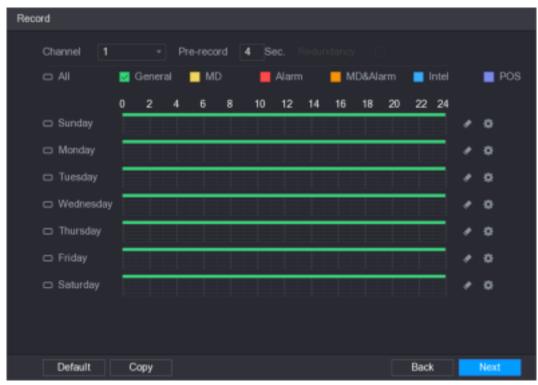


Figure 5-27

Step 2 Configure the record settings parameters. See Table 5-9.

Parameter	Description	
Channel	In the Channel list, select a channel to record the video.	
Pre-record	In the Pre-record list, enter the amount of time that you want to start	
	the recording in advance.	
	If there are several HDDs installed to the Device, you can set one of	
	the HDDs as the redundant HDD to save the recorded files into	
	different HDDs. In case one of the HDDs is damaged, you can find the	
	backup in the other HDD.	
	• Select Main Menu > STORAGE > HDD MANAGER, and then	
	set a HDD as redundant HDD.	
	• Select Main Menu > STORAGE > SCHEDUE > Record, and	
	then select the Redundancy check box.	
Redundancy	\diamond If the selected channel is not recording, the redundancy	
Reduitdancy	function takes effect next time you record no matter you	
	select the check box or not.	
	\diamond If the selected channel is recording, the current recorded	
	files will be packed, and then start recording according to the	
	new schedule.	
	R NOTE	
	 Not all models support this function. 	
	 The redundant HDD only back up the recorded videos but not 	
	snapshots.	
Event type	Select the check box of the event type which includes General , MD	
	(motion detect, video loss, tempering, diagnosis), Alarm (IoT alarms,	
	local alarms, alarms from alarm box, IPC external alarms, IPC Offline	
	alarms), MD&Alarm , Intel (IVS events, face detection), and POS .	

Parameter	Description		
	Define a period during which the configured recording setting is		
Period	active.		
	The system only activates the alarm in the defined period.		
Сору	Click Copy to copy the settings to other channels.		
	Table 5-9		

- <u>Step 3</u> Define the video recording period by drawing or editing. By default, it is active all the time.
 - Define the period by drawing.
 - 1) Select the check box of event type. See Figure 5-28.



- 2) Define a period. The system supports maximum six periods.

 - ♦ Define for several days of a week: Click 🛄 before each day one by one, the

icon switches to 🔤. You can define the period for the selected days

simultaneously.

3) On the timeline, drag to define a period. The Device starts recoding the selected event type in the defined period. See Figure 5-29.



Figure 5-29

The color bar indicates the event type that is effective in a defined period:

 Recording priority in case of event types are overlapped: MD&Alarm > Alarm > Intel > MD > General.

- Select the check box of event type, and then click for the defined period.
- When selecting MD&Alarm, the respective check box of MD and Alarm will be cleared.
- Define the period by editing. Take Sunday as an example.
- 1) Click

The **Period** interface is displayed. See Figure 5-30.

Period								
Garrent Die	m Sun	day.						
Period 1	00-00	- 24:00	General	CIMD	2.44m (MOS-Name	1.100	E POB
Percet 2	00:00	- 24:00	I EGmmi	IT MD	Diam 1	MO6Alers		POB
Period 3	00:00	24,00	General	CIMD:	CANNE - C	MOSAWIE		E POS
Penol 4	00:00	- 24:00	General		TIANS I	MDBAlam		E P06
Percetti	90:00	- 241.00	Gineral		CARE 1	MERAN	100	POS .
Percell	00:00	- 24:00	General		CAR I	MOSAin	1000	P05
Copy All								
Bunday		Monday	Tueslin (Weittesday	r C Therettey	Fildler		NTINY
								Apply Cancel

Figure 5-30

- 2) Enter the time frame for the period and select the event check box.
 - \diamond There are six periods for you to set for each day.
 - ♦ Under Copy, select All to apply the settings to all the days of a week, or select specific day(s) that you want to apply the settings to.
- 3) Click **Apply** to save the settings.

<u>Step 4</u> Click **Apply** to complete the settings.

- 📖 NOTE
- Click **Copy** to copy the settings to other channels.
- After configuring the recording schedule settings, you need to perform the following operations to start recording according to the defined schedule.
 - Enable the alarm event and cofigure the settings for the recording channel.
 For details, see "5.10 Alarm Events Settings."
 - You need to enable the recording function, see "5.9.1 Enabling Record Control."

5.1.4.10 Configuring Snapshot Storage Schedule

You can configure the storage schedule for the snapshot such as channels to take snapshot, alarm settings, and the armed period.

You can also configure snapshot storage settings by selecting **Main Menu > STORAGE > SCHEDULE > Snapshot**. <u>Step 1</u> After you have configured the video recording settings, on the **Record** interface, click **Next**.

Snapshot Channel General Alurm: CD All MD. MD&Alarm Intel 10 16 18 20 22 24 2 6 8 4 CI Sunday C Monday a CI Tuenday CI Wednesday 0 C1 Thursday ø O C Saturday C Default Copy Back Finished

The **SNAPSHOT** interface is displayed. See Figure 5-31.

Figure 5-31

<u>Step 2</u> Configure the snapshot settings parameters. See Table 5-10.

Parameter	Description		
Channel	In the Channel list, select a channel to take a snapshot.		
Select the check box of the event type which includes General ,			
Event type	Alarm, MD&Alarm, Intel, and POS.		
	Define a period during which the configured snapshot setting is active.		
Period	For details about defining a period, see "5.1.4.9 Configuring Recorded		
	Video Storage Schedule."		
Сору	Click Copy to copy the settings to other channels.		

Table 5-10

Step 3 Click Finished.

A pop-up message is displayed.

Step 4 Click OK.

The live view screen is displayed. The setting up with startup wizard is completed. You can start using the Device.

5.2 Live View

After you logged in the Device, the live view is displayed. See Figure 5-32. The number of channels displayed depends on your model.

To enter the live view screen from other interfaces, click used on the top right of the screen.



Figure 5-32

5.2.1 Live View Screen

You can view the live video from the connected cameras through each channel on the screen.

- By default, the system time, channel name and channel number are displayed on each channel window. This setting can be configured by selecting Main Menu > CAMERA > OVERLAY.
- The figure in the bottom right corner represents channel number. If the channel position is changed or the channel name is modified, you can recognize the channel number by this figure and then perform the operations such as record query and playback.

For the icons displayed on each channel, see Table 5-11.

lcon	Function				
ľ	Indicates recording status. This icon displays when the video is being recorded.				
*	This icon displays when the motion detection occurs in the scene.				
?	This icon displays when the video loss is detected.				
8	This icon displays when the channel monitoring is locked.				
	T 11 5 44				

Table 5-11

©<u>⊐</u>ª TIPS

To switch the position of two channels, point to one of the two channels, and then drag the window to the other channel.

5.2.2 Live View Control bar

The live view control bar provides you access to perform the operations such as playback, zoom, real-time backup, manual snapshot, voice talk, adding remote devices, and streams switch.

When you move the pointer to the top middle position of a channel window, the live view control bar is displayed. See Figure 5-33 for analog channel and Figure 5-34 for digital channel.

If there is not operation for six seconds after the control bar is displayed, the control bar hides automatically.



Figure 5-33



Figure 5-34

1Instant Play4Manual Snap7Siren2Digital Zoom5Mute8Audio Talk3Real-time Backup6White Light9Camera Registration	No.	Function	No.	Function	No.	Function
Real-time 6 White Light 9 Camera Registration	1	Instant Play	4	Manual Snap	7	Siren
1.3 1 6 White Light 1.9 Camera Registration	2	Digital Zoom	5	Mute	8	Audio Talk
	3		6	White Light	9	Camera Registration

Table 5-12

5.2.2.1 Instant Playback

You can play back the previous five minutes to sixty minutes of the recorded video.

By clicking **b**, the instant playback interface is displayed. The instant playback has the following features:

- Move the slider to choose the time you want to start playing.
- Play, pause and close playback.
- The information such as channel name and recording status icon are shielded during instant playback and will not display until exited.
- During playback, screen split layout switch is not allowed.
- To change the playback time, select **Main Menu > SYSTEM > GENERAL**, in the **Instant Play** box, enter the time you want to play back. See Figure 5-35.

Oo SYSTEM			100 1 P+ 10
GENERAL	Central Dale&Time		
BBDD BECUNITY SYSTEM MAINTAIN MITEOP DEFAULT UPGRACE	Device Nature Device No. Longuage Video Standard Instant Play(Mrk.) IPC: Time Sync IPC: Time Sync IPC: Time Sync Newgatian Dire Newgatian Dire Newgatian Dire	XVR B ChQLEH MAL S 2 2 2 4 24	Monitor Channel(s) when logoot
			Keety Tuck

Figure 5-35

5.2.2.2 Digital Zoom

You can enlarge a specific area of the image to view the details by either of the following two ways.

Click [1], the icon switches to [2]. Hold down the left mouse button to select the area

you want to enlarge. The area is enlarged after the left mouse button is released.

Point to the center that you want to enlarge, rotate the wheel button to enlarge the area.

- For some models, when the image is enlarged in the first way described previously, the selected area is zoomed proportionally according to the window.
- When the image is in the enlarged status, you can drag the image toward any direction to view the other enlarged areas.
- Right-click on the enlarged image to return the original status. •

5.2.2.3 Real-time Backup

You can record the video of any channel and save the clip into a USB storage device.

By clicking Level, the recording is started. To stop recording, click this icon again. The clip is automatically saved into the connected USB storage device.

5.2.2.4 Manual Snapshot

You can take one to five snapshots of the video and save into a USB storage device.

By clicking [10], you can take snapshots. The snapshots are automatically saved into the

connected USB storage device. You can view the snapshots on your PC.

III NOTE

To change the quantity of snapshots, select **Main Menu > CAMERA > ENCODE > Snapshot**, in the Manual Snap list, select the snapshot quantity.

5.2.2.5 Mute (Analog channel only)

You can mute the video sound by clicking . This function is supported in single-channel view.

5.2.2.6 White Light (Supported on camera with white light function)

Click I to manually control the camera to turn on the white light function.

5.2.2.7 Siren (Supported on camera with siren function)

Click Click to manually control the camera to generate alarm sound.

5.2.2.8 Bidirectional Talk (Digital channel only)

You can perform the voice interaction between the Device and the remote device to improve efficiency of emergency. This function is supported only when the remotely connected IPC device supports bidirectional talk.

- Click , the icon switches to , the bidirectional talk of the remote device is turned on. The bidirectional talk of other digital channels is disabled.
- Click with to cancel the bidirectional talk. The bidirectional talk of other digital channels is resumed.

5.2.2.9 Remote Devices (Digital channel only)

You can view the information of remote devices and add new remote devices to replace the current connected devices.

By clicking **Let**, the **Camera Registration** interface is displayed. For details about adding the remote devices, see "5.6 Configuring Remote Devices."

5.2.3 Navigation Bar

You can access the functions to perform operations through the function icons on the navigation bar. For example, you can access Main Menu and switch window split mode. See Figure 5-36.

📖 NOTE

The navigation bar is disabled by default. It does not appear in the live view screen until it is enabled. To enable it, select **Main Menu > SYSTEM > GENERAL**, enable the Navigation Bar, and then click **Apply**.



Figure 5-36

Icon	Function
	Open Main Menu.
4	Expand or condense the navigation bar.
	Select view layout.

lcon	Function
Ð	Go to the previous screen.
Œ	Go to the next screen.
t]	Enable tour function. The icon switches to
-	Open the PTZ control panel. For details, see "5.4 Controlling PTZ Cameras."
Ø	Open the Color Setting interface. For details, see "5.2.5 Color Setting."
	This function is supported only in single-channel layout.
Q	Open the record search interface. For detail, see "5.9 Playing Back Video."
A	Open the EVENT interface to view the device alarm status. For details, see "5.21.3 Viewing Event Information."
9 *	Open the CHANNEL INFO interface to display the information of each channel.
9 74	Open the CAMERA REGISTRATION interface. For details, see "5.6.1 Adding Remote Devices."
.	Open the NETWORK interface. For details, see "5.16.1 Configuring Network Settings."
Ø	Open the HDD MANAGER interface. For details, see "5.19.3 Configuring HDD Manager."
Ü	Open the USB MANAGER interface. For details about USB operations, see "5.15.2 Backing up Files", "5.21.2 Viewing Log Information", "5.20.4 Exporting and Importing System Settings", "5.20.6 Upgrading the Device."

5.2.4 Shortcut Menu

You can quickly access some function interfaces such as main menu, record search, PTZ setting, color setting and select the view split mode.

Right-click on the live view screen, the shortcut menu is displayed. See Figure 5-37. For details about the functions of shortcut menu, see Table 5-14.

D NOTE

After you access any interface through shortcut menu, you can return to the previous screen by right-clicking on the current screen.

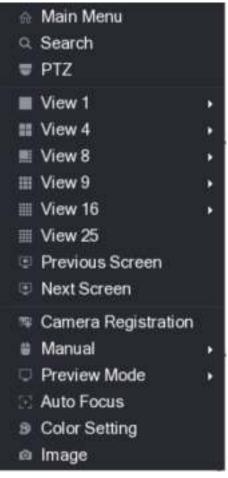


Figure 5-37

Function	Description			
Main Menu	Open Main Menu interface.			
Search	Open the PLAYBACK interface where you can search and play			
Search	back record files.			
PTZ	Open the PTZ interface.			
View Loveut	Configure the live view screen as a single-channel layout or			
View Layout	multi-channel layout.			
Previous Screen	Click Previous Screen to go to the previous screen. For example, if			
Next Screen	you are using 4-split mode, the first screen is displaying the			
Next Screen	channel 1-4, click Next screen , you can view channel 5-8.			
	Open the CAMERA REGISTRATION interface. For details, see			
Camera Registration	"5.6 Configuring Remote Devices			
	Adding Remote Devices."			
	• Select Record , you can configure the recording mode as			
Manual	Auto or Manual, or stop the recording. You can also enable or			
Mariua	disable snapshot function			
	• Select Alarm Out, you can configure alarm output settings.			
	• Select General , the layout of live view screen is as default.			
Preview Mode	• Select Show Face List, the detected face snapshots are			
	displayed in the bottom of the live view screen.			

Function	Description	
	Point to the channel window and right-click on it to open the	
	shortcut menu, and then click Auto Focus.	
Auto Focus	D NOTE	
	Not all cameras support this function.	
Color Sotting	Open the COLOR interface where you can adjust the video image	
Color Setting	color.	
Image	Click to modify the camera properties.	

5.2.5 Color Setting

You can adjust the video image color effect such as sharpness, brightness, and contrast. The parameters are different according to the connected camera type. Take analog channel as an example.

In the live view screen, right-click on the analog channel to see the shortcut menu, and then select **Color Setting**, the **COLOR** interface is displayed. See Figure 5-38.

For details, see "5.5.1 Configuring Image Settings."

Period	Period 1			
Effective Time	00:00	- 24:00		
Seturation	0	+	50	
Brightness	0	Ŧ	50	
Contrast	0	:4	50	
Hue	0	+	50	
Sharpness	0	+	đ.	
Color Mode	Standard			
EQ	-0	.*	Ø	0 a
Position	•	+	16	

Figure 5-38

Parameter	Description		
Period	Divide 24 hours into two periods and configure the corresponding		
	color settings.		
Effective Time	Enable the function and then set the effective time for each period.		

Parameter	Description
	Adjust the sharpness of image edge. The bigger the value is, the
Sharpness	more obvious the image edge, and the noise is also greater.
	The value ranges from 1 to 15. The default value is 1.
Huo	Adjust the hue of image. The value ranges from 0 to 100. The
Hue	default value is 50.
	Adjust the image brightness. The value ranges from 0 to 100. The
	default value is 50.
	The bigger the value is, the brighter the image will become. You
Brightness	can adjust this value when the image as a whole looks dark or
	bright. However, the image is likely to become dim if the value is
	too big.
	The recommended range is between 40 and 60.
	Adjust the image contrast. The bigger the value is, the more
	obvious the contrast between the light area and dark area will
	become. You can adjust this value when the contrast is not
Contrast	obvious. However, if the value is too big, the dark area is likely to
Contract	become darker and the light area over exposed. If the value is too
	small, the image is likely to become dim.
	The value ranges from 0 to 100. The default value is 50. The
	recommended range is between 40 and 60.
	Adjust the color shades. The bigger the value, the lighter the color
	will become. This value does not influence the general image
Saturation	lightness.
	The value ranges from 0 to 100. The default value is 50. The
	recommended range is between 40 and 60.
	In the Color Mode list, you can select Standard, Soft, Bright,
	Colorful, Bank, Customized 1, Customized 2, Customized 3,
Color Mode	and Customized 4.
	The sharpness, hue, brightness, contrast and saturation will adjust
	automatically according to the selected color mode.
	Enhance the image effect. Adjust the effect value.
	Click , image is adjusted to the optimized effect
50	automatically.
EQ	Click the current effect setting will be locked.
	~
	Only HD analog channel supports this function.
	Adjust the display position of the image in the channel window. The
	value indicates pixel. The default value is 16.
Position	D NOTE
	This function is only supported by analog channel.

Parameter	Description		
	You can customize four color modes.1. Click Customized. The Customized Color interface is		
Customized	 displayed. 2. In the Color Mode list, select Customized 1, for example. Then configure the settings for sharpness, hue, brightness, contrast and saturation. If you select All, the configuration will applies to all four customized color modes. 		
	3. Click OK .		
	4. On the COLOR interface, in the Color Mode list, you can		
	select the customized color mode.		

5.2.6 Live View Display

5.2.6.1 Configuring Display Settings


You can configure the display effect such as displaying time title and channel title, adjusting image transparency, and selecting the resolution.

<u>Step 1</u> Select Main Menu > DISPLAY > Display.

The **DISPLAY** interface is displayed. See Figure 5-39.

E DISFLAY				tinel a seal
+ DISPLAY	Mantschen		Extra Scient	
VIEW	- AND - SECTION -		Carrie School	
TOUR (Differt.	VEAHDMI 1/Make ave	Enale 🔳	
ZERO-CHANNEL	B	Time Tide	Out Part .	
TV ADAMET		Charmel Tide:	Besidation Concerns	
		Original Resil		
		IVS Falls Previow		
	Heartedatelensing	-0		
	Researchist	1280x1024		
	Preview Mode	Show Face List		
				Asyly Back

Figure 5-39



Parameter	Description
-----------	-------------

Parameter		Description
Out Port		Indicates the main screen port.
		Select the Time Title check box, the current system time
	Time Title	displays in each channel window in live view screen. To hide
		the time, clear the check box.
		Select the Channel Title check box, the channel name,
	Channel Title	channel number and recording status display in each channel
		window in live view screen. To hide the time, clear the check
		box.
	Original Rate	Select the Original Rate check box, the video image displays
	_	in its actual size in the channel window.
	IVS Rule	Select the IVS Rule Preview check box to enable IVS rule
	Preview	preview function.
Main		Configure the transparency of the graphical user interface
Screen	Transparency	(GUI). The higher the value, the more transparent the GUI
		becomes.
		Select resolution for the video. The default resolution for VGA
		port and HDMI port is 1280×1024.
	Resolution	NOTE NOTE
		Some of the resolution options might not be supported on the
		HDMI port.
	Preview Mode	General: No information is displayed on the channel
		window.
		Show Face List: Displays the detected face snapshots
		taken as a result of face detection on the bottom of the
		live view screen.
		LUI NOTE
		Not all models support this function.
	Frabla	Enable extra screen function. After this function is enabled,
	Enable	you can select which port as extra screen port, and the other
		port automatically becomes the main screen port.
		Select the VGA port or HDMI port as the port connected by a
Ester	Out Port	secondary monitor. For example, if you select HDMI port as
Extra		the extra screen port, the VGA port automatically becomes the main screen port.
Screen		Select resolution for the video. The default resolution for VGA
		port and HDMI port is 1280×720.
	Resolution	
	Resolution	
		Some of the resolution options might not be supported on the
<u> </u>		HDMI port.
	_	not display on the extra screen.
		ne extra screen function, both the VGA port and HDMI port
	ay the same image	

5.2.6.2 Configuring Viewing Layout

You can configure the view layout in the live view screen.

<u>Step 1</u> Select Main Menu > DISPLAY > VIEW.

The View Setting interface is displayed. See Figure 5-40.

🗐 DISPLAY				LME ± 0.8
DISPLAY	View Setting			
> VIEW	- now county			
TOUR				
ZERO-CHANNEL		2 -		4 *
TV ADJUST				
		6 -		8 -
		10 *	11 *	
	13 -	14	15 -	16 -
				Apply Back

Figure 5-40

<u>Step 2</u> Configure the view layout by clicking the layout buttons on the bottom. See Figure 5-41.



Figure 5-41

For example, click and select **9-16**, the view layout changes immediately, see Figure 5-42.

🗐 DISPLAY				LME ± 0. E
DISPLAY				
VIEW	non comp			
				10 -
		9 -		11 -
	16 -		14 *	13 -
	## ## ## ## ##			
				Realized David
				Apply Back

Figure 5-42

<u>Step 3</u> Adjust the position of channels if needed.

In the channel list, for example, in the channel 9 list, you can select 10, and then the channel 9 and channel 10 exchange positions.

<u>Step 4</u> Click **Apply** to complete the settings. The live view screen displays the same layout as configured in this section.

5.2.6.3 Configuring Zero-Channel Settings

You can view several video sources on one channel on the web end.

Step 1 Select Main Menu > DISPLAY > ZERO-CHANNEL.

The **ZERO-CHANNEL** interface is displayed. See Figure 5-43.

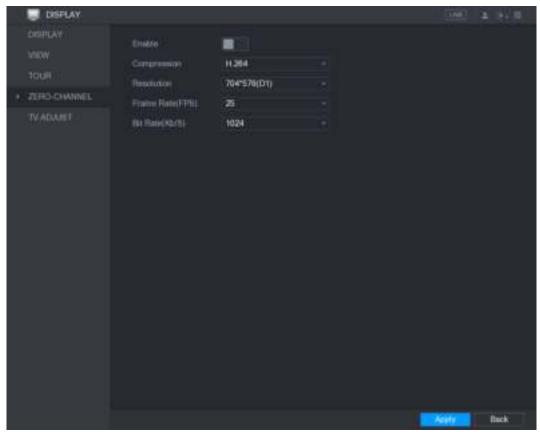


Figure 5-43

<u>Step 2</u> Configure the settings for the zero-channel parameters. See Table 5-17.

Parameter	Description
Enable	Enable zero-channel function.
Comprossion	In the Compression list, select the video compression standard
Compression	according to the device capability. The default is H.265.
Resolution	In the Resolution list, select the video resolution. The default is
	704×576 (D1).
Frame Rate	Select a value between 1 and 25 for PAL standard, and between 1
	and 30 for NTSC standard. The actual arrange is decided and
(FPS)	selected dependent on the Device capability.
Bit Rate (Kb/S)	The default value is 1024Kb/S. The actual arrange is decided and
	selected dependent on the Device capability and frame rate.

Table 5-17

Step 3 Click Apply to save the settings.

In the live interface on the web, click **Example 1999** to select one of the multi-channel modes, and then you can view the local video image.

5.2.6.4 Configuring TV



Not all models support this function.

You can adjust the border margins in top, bottom, left and right directions as well as the brightness of the monitor connected to the Video out port of the Device.

Step 1 Select Main Menu > DISPLAY > TV ADJUST.

The **TV ADJUST** interface is displayed. See Figure 5-44.

DISFLAY			1041 a 9+30
DEPLAY NOW TOUR 2000-CHANNEL + TV ADJUST	Top Margan Datase Margan Latt Margan Right Margan Brightness	-0 -0 -0 -0	
	Default		Assety Back

Figure 5-44

<u>Step 2</u> Configure the parameters according to your actual situation.

<u>Step 3</u> Click **Apply** to complete the settings.

5.2.7 Configuring Tour Settings

You can configure a tour of selected channels to repeat playing videos. The videos display in turn according to the channel group configured in tour settings. The system is playing one channel group for a certain period and then automatically changes to the next channel group. <u>Step 1</u> Select **Main Menu > DISPLAY > TOUR**.

The **TOUR** interface is displayed. There are Main Screen tab and Extra Screen tab, see Figure 5-45 and Figure 5-46.

DISFLAY				1041 a 2+30
DISPEAY	MainStreen			
VIEW	Enable	100		
+ tous	interval(Sec.)	4		
ZERO-CHANNEL				
	Waters Detainst	View 1		
TV ADAMET	Alem	View 1		
	Window Spill	View 1		
	16	0	anna Group	
	In the second			
	2 4 2			
	10 210			
	12 412			3
	A44	Modity Delete	Moveup Move down	
				Acety Back

Figure 5-45

LI DISPLAY						
DISPLAY	MakiSibeen	Bitra Schime				
	Employ	1 65				
1008	interval(Sec.)					
ZERO-CHUNNES.	Window Optil	View 1				
TV ADARET	10 v 2 v 2 3 v 2 4 v 4 6 v 6 7 v 7 8 v 8 8 v 8 8 v 8 9 v 9 10 v 9 1	III Modely Def	Charand Group	Move down		
						1600
					Ketty	flack

Figure 5-46

<u>Step 2</u> Configure the settings for the tour parameters for both Main Screen and Extra Screen. See Table 5-18.

Parameter	Description		
Enable	Enable tour function.		
Interval (Sec.)	Enter the amount of time that you want each channel group displays on the screen. The value ranges from 5 seconds to 120 seconds, and the default value is 5 seconds.		
Video Detect, Alarm	Select the View 1 or View 8 for Motion Detect tour and Alarm Tour (system alarm events).		
Window Split	In the Window Split list, select View 1 , View 4 , View 8 , or other modes that are supported by the Device.		
Channel Group	 Display all channel groups under the current Window Split setting. Add a channel group: Click Add, in the pop-up Add Group channel, select the channels to form a group, and then click Save. Delete a channel group: Select the check box of any channel group, and then click Delete. Edit a channel group: Select the check box of any channel group and then click Modify, or double-click on the group. The Modify Channel Group dialog box is displayed. You can regroup the channels. Click Move up or Move down to adjust the position of channel group. 		

<u>Step 3</u> Click **Apply** to save the settings.

©—^{___}TIPS

- On the top right of the live view screen, use the left mouse button or press Shift to switch between (image switching is allowed) and (image switching is not allowed) to turn on/off the tour function.
- On the navigation bar, click Level to enable the tour and click Level to disable it.

Adding a Channel Group

Step 1 Click Add.

The Add Group interface is displayed. See Figure 5-47.



Figure 5-47

<u>Step 2</u> Select the channels that you want to group for tour. See Figure 5-48.

D NOTE

If you want to select more than one channel, in the **Window Split** list, do not select **View 1**.


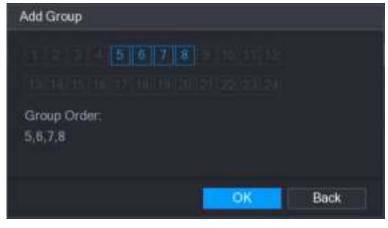


Figure 5-48



Modifying a Channel Group

Double-click on a channel group, the **Modify Channel Group** interface is displayed. See Figure 5-49.

You can modify channel group and click **OK** to complete the settings.

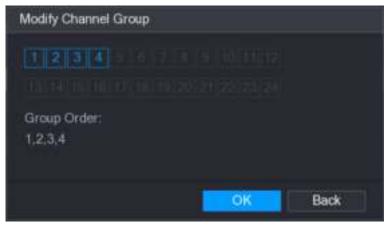


Figure 5-49

5.3 Entering Main Menu

Right-click on the live view screen, the shortcut menu is displayed, Click Main Menu and then login the system. The Main Menu is displayed, see Figure 5-50.

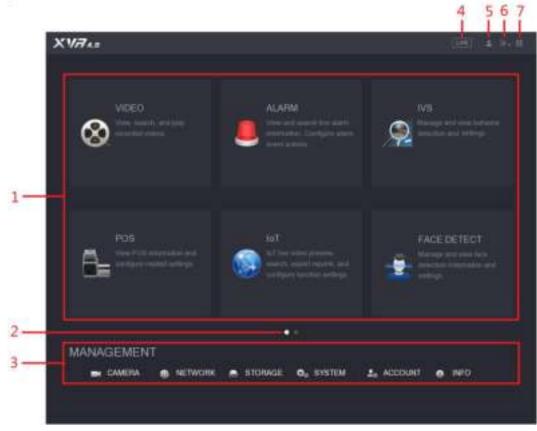


Figure 5-50

No.	Icon	Description			
1	Function	 Includes eight function tiles: VIDEO, ALARM, IVS, POS, IoT, AI, BACKUP, DISPLAY, and AUDIO. Click each tile to open the configuration interface of the tile. VIDEO: Search for and play back the recorded video saved on the Device. ALARM: Search for alarm information and configure alarm event actions. IVS: Configure the behavior detections by drawing rules for detecting tripwire, intrusion, abandoned objects, and missing objects. POS: You can connect the Device to the POS (Point of Sale) machine and receive the information from it. FACE DETECT: Configure the human faces detection settings and search detected human faces. IoT: View, search and export the temperature and humidity data of camera, connect sensors and wireless siren, and configure the alarm event linkage settings. BACKUP: Search and back up the video files to the external storage device such as USB storage device. DISPLAY: Configure the display effect such as displaying content, image transparency, and resolution, and enable the zero-channel function. AUDIO: Manage audio files and configure the playing schedule. The audio file can be played in response to an alarm event if the voice prompts function is enabled. 			
2	Switch icon	indicates the current page of main menu. Click to switch to the next page.			
3	Configura tion menu	Includes six configurations through which you can configure camera settings, network settings, storage settings, system settings, account settings, and view information.			
4	Live	Click to go to the live view screen.			
5	*	When you point to . , the current user account is displayed.			
6	₽.,	Click elect Logout, Reboot, or Shutdown according to your actual situation.			

No.	lcon	Description		
7	0-10 1-10	 Displays Cell Phone Client and Device SN QR Code. Cell Phone Client: Use your mobile phone to scan the QR code to add the device into the Cell Phone Client, and then you can start accessing the Device from your cell phone. Device SN: Obtain the Device SN by scanning the QR code. Go to the P2P management platform and add the Device SN into the platform. Then you can access and manage the device in the WAN. For details, please refer to the P2P operation manual. You can also configure P2P function in the local configurations. See "5.1.4.5 Configuring P2P Settings." 		

5.4 Controlling PTZ Cameras

PTZ is a mechanical platform that carries a camera and a protective cover and performs overall control remotely. A PTZ can move in both horizontal and vertical direction to provide all-around view to the camera.

Before operating PTZ, please assure the network connection between PTZ and the Device.

5.4.1 Configuring PTZ Connection Settings

You need to configure the PTZ connection settings before use.

- Local connection: RS485 Port for connecting Speed Dome or coaxial cable for connecting coaxial camera.
- Remote connection: local area network.

<u>Step 1</u> Select Main Menu > CAMERA > PTZ.

The **PTZ** interface is displayed. See Figure 5-51.

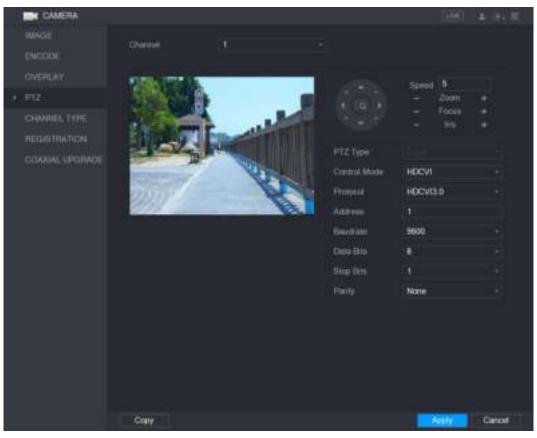


Figure 5-51

<u>Step 2</u> Configure the settings for the PTZ connection parameters. See Table 5-20.

Parameter	Description		
Channel	In the Channel list, select the channel that you want to connect the PTZ		
Channel	camera to.		
	Local: Connect through RS485 port or coaxial cable.		
PTZ Type	Remote: Connect through network by adding IP address of PTZ		
	camera to the Device.		
	In the Control Mode list, select Serial or HDCVI. For HDCVI series		
Control Mode	product, please select HDCVI. The control signal is sent to the PTZ		
	through the coaxial cable. For the serial mode, the control signal is sent to		
	the PTZ through the RS485 port.		
Protocol	In the Protocol list, select the protocol for the PTZ camera, for example,		
FIOLOCOI	select HDCVI3.0.		
	In the Address box, enter the address for PTZ camera. The default is 1.		
	D NOTE		
Address	The entered address must be the same with the address configured on		
	the PTZ camera; otherwise the PTZ camera cannot be controlled from		
	the Device.		
Baudrate	In the Baudrate list, select the baudrate for the PTZ camera. The default		
Dauurate	is 9600.		
Data Bits	The default is 8.		
Stop Bits	The default is 1.		
Parity The default is NONE.			

Table 5-20

 Step 3
 Click Apply to save the settings.

 Image: Note Click Copy to copy the settings to other channels.

5.4.2 Working with PTZ Control Panel


PTZ control panel performs the operations such as directing camera in eight directions, adjusting zoom, focus and iris settings, and quick positioning.

Basic PTZ Control Panel

Right-click on the live view screen and then select **PTZ**. The PTZ control panel is displayed. See Figure 5-52.



Figure 5-52

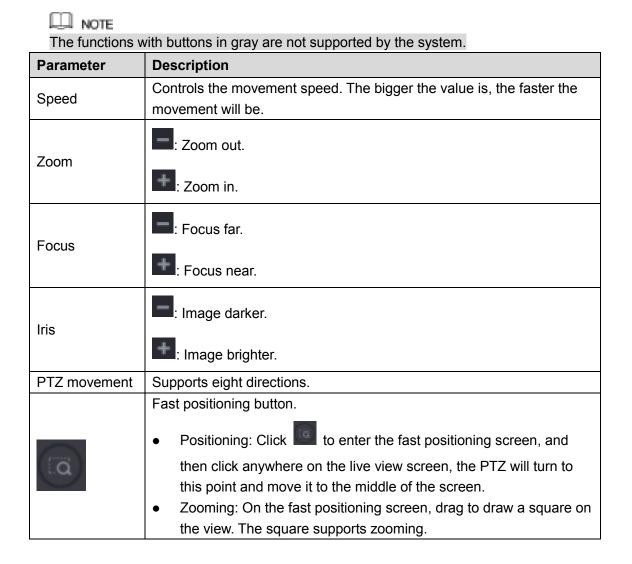

Parameter	Description					
	\diamond Dragging upward is to zoom out, and dragging downward is t					
	zoom in.					
	\diamond The smaller the square, the larger the zoom effect.					
	III NOTE					
	Not all models support this function and can only be controlled through					
	mouse operations.					
	Click Click click, you can control the four directions (left, right, up, and down)					
	PTZ movement through mouse operation.					
•	Click to open the expanded PTZ control panel.					
Table 5-21						

Expanded PTZ Control Panel

options. See Figure 5-53.

On the basic PTZ control panel, click **I** to open the expanded PTZ control panel to find more

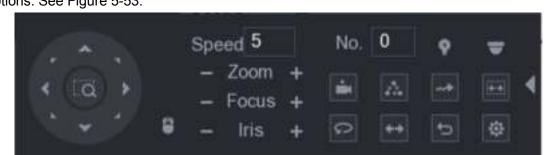


Figure 5-53

D NOTE

- The functions with buttons in gray are not supported by the system.
- Right-click once to return to the interface of PTZ basic control panel.

lcon	Function	lcon	Function
i	Preset	C,	Auto Pan
A.	Tour	+	Flip
*	Pattern	ſ	Reset
++	Autoscan		Click the AUX Config icon to open the PTZ functions settings interface.
Ŷ	AUX Switch	Þ	Click the Enter Menu icon to open the MENU OPERATION interface.

Table 5-22

5.4.3 Configuring PTZ Functions

5.4.3.1 Configuring Presets

Step 1 On the Expanded PTZ Control Panel, click

The Preset interface is displayed. See Figure 5-54.



Figure 5-54

- Step 2 Click the direction arrows to the required position.
- <u>Step 3</u> In the **Preset** box, enter the value to represent the required position.
- <u>Step 4</u> Click **Setting** to complete the preset settings.


5.4.3.2 Configuring Tours

Step 1 On the Expanded PTZ Control Panel, click

The **PTZ** interface is displayed.

Step 2 Click the **Tour** tab.

The Tour tab is displayed. See Figure 5-55.

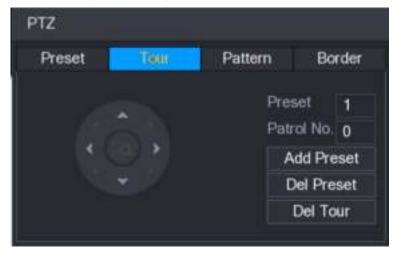



<u>Step 3</u> In the **Patrol No**. box, enter the value for the tour route.

- <u>Step 4</u> In the **Preset** box, enter the preset value.
- Step 5 Click Add Preset.

A preset will be added for this tour.

D NOTE

- You can repeat adding more presets.
- Click **Del Preset** to delete the preset for this tour. This operation can be repeated to delete more presets. Some protocols do not support deleting.

5.4.3.3 Configuring Patterns

Step 1 On the Expanded PTZ Control Panel, click

The **PTZ** interface is displayed.

<u>Step 2</u> Click the **Pattern** tab.

The Pattern interface is displayed. See Figure 5-56.



Figure 5-56

- <u>Step 3</u> In the **Pattern** box, enter the value for pattern.
- <u>Step 4</u> Click **Start** to perform the directions operations. You can also go to the PTZ Control Panel to perform the operations of adjusting zoom, focus, iris, and directions.
- <u>Step 5</u> On the **PTZ** interface, click **End** to complete the settings.

5.4.3.4 Configuring AutoScan

Step 1 On the Expanded PTZ Control Panel, click

The **PTZ** interface is displayed.

- Step 2 Click the Border tab.
 - The Border interface is displayed. See Figure 5-57.



Figure 5-57

<u>Step 3</u> Click the direction arrows to position the left and right borders.

5.4.4 Calling PTZ Functions

After you have configured the PTZ settings, you can call the PTZ functions for monitoring from the Expanded PTZ Control Panel. See Figure 5-58.



Figure 5-58

5.4.4.1 Calling Presets

- <u>Step 1</u> On the Expanded PTZ Control Panel, in the **No.** box, enter the value of the preset that you want to call.
- <u>Step 2</u> Click to call the preset.
- <u>Step 3</u> Click again to stop calling the preset.

5.4.4.2 Calling Tours

- <u>Step 1</u> On the Expanded PTZ Control Panel, in the **No.** box, enter the value of the tour that you want to call.
- Step 2 Click to call the tour.
- Step 3 Click again to stop calling the tour.

5.4.4.3 Calling Patterns

- <u>Step 1</u> On the Expanded PTZ Control Panel, in the **No.** box, enter the value of the pattern that you want to call.
- Step 2 Call **I** to call the pattern.

The PTZ camera moves according to the configured pattern repeatedly.

Step 3 Click again to stop calling the pattern.

5.4.4.4 Calling AutoScan

- <u>Step 1</u> On the Expanded PTZ Control Panel, in the **No.** box, enter the value of the border that you want to call.
- Step 2 Click

The PTZ camera performs scanning according to the configured borders.

Step 3 Click again to stop auto scanning.

5.4.4.5 Calling AutoPan

Step 1 On the Expanded PTZ Control Panel, click et a start moving in horizontal direction.

Step 2 Click again to stop moving.

5.4.4.6 Using AUX Button

On the Expanded PTZ Control Panel, click I, the AUX setting interface is displayed. See

Figure 5-59.

- In the **Direct Aux** list, select the option that corresponds to the applied protocol.
- In the **Aux Num** box, enter the number that corresponds to the AUX switch on the decoder.

AUX			
Direct Aux			
NONE	On	Off	
Aux Num			
104	On	Off	

Figure 5-59

5.4.5 Calling OSD Menu

For the coaxial camera, you can call the OSD menu through the Expanded PTZ Control Panel. See Figure 5-58.

Step 1 On the Expanded PTZ Control Panel, click

The **MENU OPERATION** interface is displayed. See Figure 5-60.



Figure 5-60

Step 2 Click Enter.

The OSD menu is displayed. See Figure 5-61.



Figure 5-61

- <u>Step 3</u> On the **MENU OPERATION** interface, click the arrow button to select the onscreen parameters.
- <u>Step 4</u> Click **Enter** to complete the settings.

5.5 Configuring Camera Settings

5.5.1 Configuring Image Settings

You can configure the image settings such as saturation, contrast, brightness, sharpness for each connected camera.

<u>Step 1</u> Select Main Menu > CAMERA > IMAGE.

The **IMAGE** interface is displayed. See Figure 5-62 for analog channel and Figure 5-63 for digital channel.

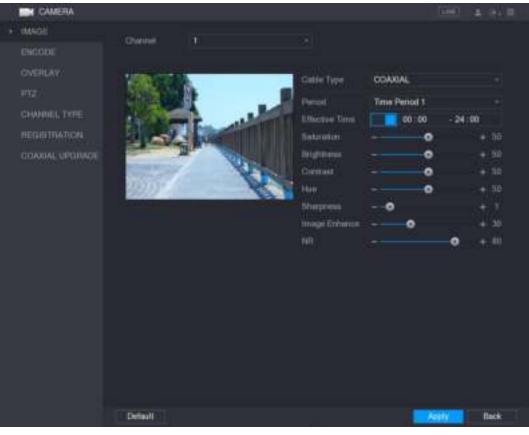


Figure 5-62

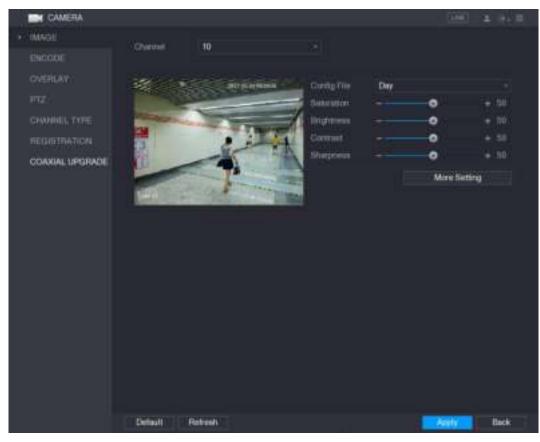


Figure 5-63

<u>Step 2</u> Configure the settings for the image parameters. See Table 5-23. On the digital channel interface, click **More Setting** to display more parameters.

Parameter	Description				
Channel	In the Channel list, select the channel that you want to configure.				
	In the Cable Type list, select the cable type that the camera uses.				
Cable Type	D NOTE				
51	Not all models support this function.				
	In the Period list, select a time period for the image settings. The				
Period	image settings will be only used during the selected period.				
	Enable the effective function.				
Effective Time	In the Effective Time box, enter the start time and end time for the				
	period you selected.				
	Adjusts the color shades. The bigger the value, the lighter the color				
	will become. This value does not influence the general image				
Saturation	lightness.				
	The value ranges from 0 to 100. The default value is 50. The				
	recommended range is between 40 and 60.				
	Adjusts the image contrast. The bigger the value is, the more obvious				
	the contrast between the light area and dark area will become. You				
	can adjust this value when the contrast is not obvious. However, if the				
Contrast	value is too big, the dark area is likely to become darker and the light				
Contrast	area over exposed. If the value is too small, the image is likely to				
	become dim.				
	The value ranges from 0 to 100. The default value is 50. The				
	recommended range is between 40 and 60.				
	Adjusts the image brightness. The bigger the value is, the brighter the				
	image will become. You can adjust this value when the image as a				
Brightness	whole looks dark or bright. However, the image is likely to become dim				
Digitalooo	if the value is too big.				
	The value ranges from 0 to 100. The default value is 50. The				
	recommended range is between 40 and 60.				
Hue	Adjusts the hue of image. The value ranges from 0 to 100. The default				
	value is 50.				
	Adjusts the sharpness of image edge. The bigger the value is, the				
Sharpness	more obvious the image edge, and the noise is also greater.				
	The value ranges from 1 to 15. The default value is 1.				
Image Enhance	Adjusts the image definition. The bigger the value is, the clearer the				
	image will become, but there will be more noises.				
NR	Reduces the noises from image. The bigger the value is, the better				
	the image will become.				
	In the Config File list, select Day , Night , Normal , or Switch By				
	Period . The system configures the parameters correspondingly.				
Config Ella	Day: Apply the configuration during daytime.				
Config File	Night: Apply the configuration during nighttime.				
	Normal: Apply the configuration during day and night.				
	 Switch by Period: If you select this option, you need to configure the suprise time and support time where you are leasted 				
	the sunrise time and sunset time where you are located.				

Parameter	Description				
Mirror	Enable the function, the left and right side of the video image will be				
Mirror	switched. It is disabled by default.				
	This function specially applies to the image which frame rate is				
3D Denoise	configured as 2 at least. It reduces the noises by making use of the				
3D Denoise	information between two frames. The bigger the value is, the better				
	the effect.				
Flip	In the Flip list, you can select 180° to change the video image display.				
гир	By default, the setting is No Flip .				
Light	In the Light list, select Close or Enable to use the backlight				
сіўн	compensation or not.				
	Configure the white balance to adjust the general hue of the image.				
	The default setting is Auto .				
	Auto: Automatically apply white balance to different colors to				
Scene Mode	make the image color display normally.				
	Sunny: Apply the threshold value to sunny environment.				
	Night: Apply the threshold value to night.				
	• Customized: Manually adjust the Red Gain and Blue Gain values.				
	Configure the color and black&white mode of the image. This setting				
	is not affected by the configuration files. The default setting is Auto .				
	Color: The camera outputs color image only.				
	Auto: Depends on the camera, such as overall brightness and				
Day & Night	whether there is an IR light, either color image or black&white				
	image is output.				
	B/W: The camera outputs Black and white image only.				
	• By Time: The camera outputs image according to the configured				
	sunrise time and sunset time.				

<u>Step 3</u> Click **Apply** to complete the settings.

5.5.2 Configuring Encode Settings

Step 1 Select Main Menu > CAMERA > ENCODE > Encode.

The **Encode** interface is displayed. See Figure 5-64.

IN CAMERA	Error S	wanter .			(the)	4.918
ENCODE	Channel					
OVERLAY	Main Stream			Sub Stream		
	Timert Codec			Video		
CHANNEL TYPE	Type	Regular		Type	Sub Stream 1	
	Compression	11,265		Compression	H.265	
COAXIAL UPDITADE	Resolution	1920x1080(1	0806)-	Theoremation	3527240(CIF)	
	Frank Rate() 751	15		Frame Palat Phil	15	
	Bit Rate Type	CBR		Bit Note Type	CBR	
	I Filippe Interval	ts		T Pitator Interval	is:	
	Bit Rate(IQLS)	2048		Bt.Rum(Kb/5)	640	
		Mare Setting			More Setting	
		Consection of			THE REPORT OF	

Figure 5-64

<u>Step 2</u> Configure the settings for the main/sub streams parameters. See Table 5-24.

Parameter	Description				
Channel	In the Channel list, select the channel that you want to configure the				
	settings for.				
	Enable the smart codec function. This function can reduce the video				
Smart Codec	bit stream for non-important recorded video to maximize the storage				
	space.				
	• Main Stream: In the Type list, select General , MD (Motion				
Туре	Detect), or Alarm .				
	Sub Stream: This setting is not configurable.				
	In the Compression list, select the encode mode.				
	• H.265: Main profile encoding. This setting is recommended.				
	H.264H: High profile encoding. Low bit stream with high				
Compression	definition.				
	H.264: General profile encoding.				
	• H.264B: Baseline profile encoding. This setting requires higher bit				
	stream compared with other settings for the same definition.				
	In the Resolution list, select resolution for the video.				
Resolution	The maximum video resolution might be different dependent on your				
	device model.				

Parameter	Description					
	Configure the frames per second for the video. The higher the value,					
	the clearer and smoother the image will become. Frame rate changes					
Frame Rate	along with the resolution.					
	Generally, in PAL format, you can select the value from 1 through 25;					
(FPS)	in NTSC format, you can select the value from 1 through 30. However,					
	the specific range of frame rate that you can select depends on the					
	capability of the Device.					
Quality	This function is available if you select VBR in the Bit Rate List.					
Quality	The higher the value, the better the image will become.					
I Frame Interval	The interval between two reference frames.					
	In the Bit Rate list, select a value or enter a customized value to					
Bit Rate (Kb/S)	change the image quality. The bigger the value is, the better the					
	image will become.					
Video	Enable the function for sub stream.					
	Click More Setting, the More Setting interface is displayed.					
Audio Encode	Audio Encode: This function is enabled by default for main					
	stream. You need to manually enable it for sub stream 1. Once					
	this function is enabled, the recorded video file is composite					
	audio and video stream.					
Audio Source	Audio Source: In the Audio Source list, you can select LOCAL					
	and HDCVI.					
	\diamond LOCAL: The audio signal is input from Audio input port.					
	\diamond HDCVI: The audio signal is input from HDCVI camera.					
Audio Format	• Audio Format: In the Audio Format list, select a format that you					
	need.					

Table 5-24

<u>Step 3</u> Click **Apply** to complete the settings.

D NOTE

Click **Copy** to copy the settings to other channels.

5.5.3 Configuring Snapshot Settings

<u>Step 1</u> Select Main Menu > CAMERA > ENCODE > Snapshot. The Snapshot interface is displayed. See Figure 5-65.

_8	CAMERA			1116	A 19-10
		Encode Sour	ahit .		
	ENCODE	Manual Shap	1		
	OVERDAY.	Construction of the Constr			
	PTZ :	Chinnel			
	GHANNEL TYPE		General		
		Image Size	352*288(CIF)		
	COAKIAL UPDITACE	Invege Country	4		
			1 Second		
		Default Cop	¥	sili	llack

Figure 5-65

<u>Step 2</u> Configure the settings for the snapshot parameters. See Table 5-25.

Parameter	Description			
Manual Cross	In the Manual Snap list, select how many snapshots you want to take			
Manual Snap	each time.			
Channel	In the Channel list, select the channel that you want to configure the			
Channel	settings for.			
Mode	In the Mode list, you can select Human Face, Event, or General as			
MODE	the event type for which you want to take a snapshot.			
Image Size	In the Image Size list, select a value for the image.			
Image Quality	Configures the image quality by 6 levels. The higher the level, the			
Image Quality	better the image will become.			
Interval	Configures or customizes the snapshot frequency.			

Table 5-25

<u>Step 3</u> Click **Apply** to complete the settings.

D NOTE

Click **Copy** to copy the settings to other channels.

5.5.4 Configuring Overlay Settings

You can configure to display system time and channel name on each channel window in the live view screen.

<u>Step 1</u> Select Main Menu > CAMERA > OVERLAY > Overlay.

The **Overlay** interface is displayed. See Figure 5-66.

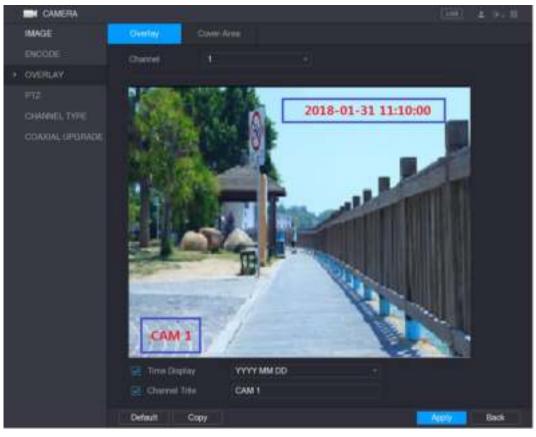


Figure 5-66

<u>Step 2</u> Configure the settings for the text overlay parameters. See Table 5-26.

Parameter	Description
Channel	In the Channel list, select the channel that you want to configure the
Channel	settings for.
	Select the Time Display check box to display the system time on
Time Display	each channel window in the live view screen.
	In the Time Display list, select time display style.
	Select the Channel Title check box to display the channel name on
Channel Title	each channel window in the live view screen.
	In the Channel Title box, enter the name for the selected channel.

Table 5-26

<u>Step 3</u> Click **Apply** to complete the settings.

D NOTE

Click **Copy** to copy the settings to other channels.

5.5.5 Configuring Covered Area Settings

Step 1 Select Main Menu > CAMERA > OVERLAY > Cover-Area.

The Cover-Area interface is displayed. See Figure 5-67.

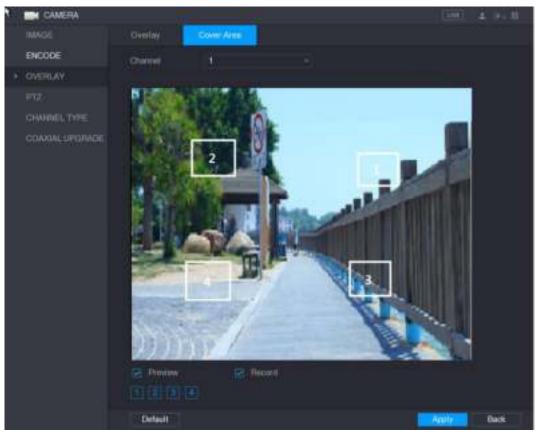


Figure 5-67

Step 2 Configure the settings for the covered area parameters. See Table 5-27.

Parameter	Description
Channel	In the Channel list, select the channel that you want to configure the
Channel	settings for.
	• Preview: Select the Preview check box to apply the configured
Preview	covered block to the selected channel window in the live view
FIEVIEW	screen.
	Record: Select the Record check box to apply the configured
	covered block to the selected channel window during recording.
	To configure covering block, do the following:
	1. Select the Preview check box or the Record check box, or select
Record	the both. The "1, 2, 3, 4" buttons are activated.
Record	2. Click the buttons to select blocks.
	3. A triangle solid black block is displayed. You can drag the block to
	the area that you want to cover and adjust the size of the block.
	4. You can configure total 4 covered blocks.
	T 5 07

Table 5-27

<u>Step 3</u> Click **Apply** to complete the settings.

5.5.6 Configuring Channel Type

You can configure the channel type as **Analog** or **IP** channel. <u>Step 1</u> Select **Main Menu > CAMERA > CHANNEL TYPE**.

CAMERA							(ine)	2 9-3
INDACHE	Channel			Analog				
ENCLOSE	1	AUTO	CM	AHD	CVIBS	OTHER		
OVERLAY:	2							
FT2:	1							
+ CHANNEL TYPE	5							
REGISTRATION	7	8						
CDAXIAL UPDIDAGE	9 10 11 12 13 14 15 16 17-28		e chaennell, yroo	can add one l	P channel IP	Charriel Schup 1	A REPORT OF LEVEL	
							Astr	flack

The CHANNEL TYPE interface is displayed. See Figure 5-68.



<u>Step 2</u> Configure the channels.

- Analog Channel: Select the transmission medium such as CVI, CVBS, and then follow the onscreen instructions to complete the settings.
- IP Channel: The Device provides expanded IP channels for your use. For example, the 17–24 channels in Figure 5-68 are expanded IP channels. To enable the IP channel, select from the last channel number 17–24 check box. Then follow the onscreen instructions to complete the settings.
- D NOTE
- The 17–24 channels are only for IP camera and the range changes dependent on the model you purchased.
- The channel selection for analog camera or IP camera are in sequence, for example, if you want to select channels for IP camera, you need to select the 17–24 check box first, and then you cannot jump to select the channel 15 directly until you have selected the channel 16.
- Step 3 Click Apply and follow the onscreen instructions to complete the settings.

5.5.7 Upgrading Coaxial Camera

Step 1 Select Main Menu > CAMERA > COAXIAL UPGRADE.

The **COAXIAL UPGRADE** interface is displayed. See Figure 5-69.

CAMERA				1041 A 14+10
100404				1000000000
ENCLOSE	Update File			Browee
OVERLAY	Deven(0/2)			
P12:	Channel	Process	System Version	Masulacture
CHANNEL TYPE			V1.003.0003.1.H.301	Dettain
REGISTRATION			V1.000.0002.3.9.201	Dahun
· COAXIAL UPDRACE				
				Start Opgrade
				CHEL VOW INC.

Figure 5-69

Step 2 Click Browse.

The Browse interface is displayed.

<u>Step 3</u> Select the upgrade file and then click **OK**.

The COAXIAL UPGRADE interface is displayed.

D NOTE

You need to insert the USB storage device that contains the upgrading files.

<u>Step 4</u> Select the check box of the channel that you want to upgrade.

Step 5 Click Start Upgrade.

If the upgrading is successful, the system pops up a message indicating the upgrading is completed. If the upgrading is failed, please check if the Device

5.6 Configuring Remote Devices

5.6.1 Adding Remote Devices



This function is available after you have configured the channel type as IP channel as described in previous section, see "5.5.6 Configuring Channel Type."

You can add remote devices by adding the IP address.

Select **Main Menu > CAMERA > REGISTRATION > Registration**, the **Registration** interface is displayed. See Figure 5-70.

- 5	CAMERA						106	4.91.0
	1446E	Egistration	Tiste		ile i	Uppride		
	ENCODE:	Oversident		Initialize		on Filter		IPC -
	OVERLAY FTZ GHANNEL TYPE		Galt .	Prentere	Status	.₽ <i>1</i>	Address	Mana
	REGISTRATION COASIAL UPDIMOE							
	Contract of Contractor							
		Device Search Addied Device					Add M	amual Add
		Charnel		Edit	Delete	Statut	iP Address	
			(Hendue)	bendwidts Totel b	ini the day is a s	10Migur 49 -	Import (Export

Figure 5-70

Parameter	Description					
Uninitialized	Enable the Uninitialized function, the uninitialized devices out of the					
Uninitialized	searched devices are displayed in the searched device list.					
Initialize	Select the uninitialized device from the uninitialized device list, and					
Initialize	the click Initialize to start initializing device.					
	In the Show Filter list, select the remote device type that you want to					
	display in the searched device list.					
	None: Display all types of devices.					
Show Filter	IPC: Display the front-end devices.					
	• DVR: Display all storage devices such as NVR, DVR and HCVR.					
	• OTHER: Display the devices that do not belong to IPC or DVR					
	type.					
Searched Device	Displays the searched devices. You can view the device information					
List	such as status, IP address.					
	Click Device Search , the searched devices display in the searched					
	device list.					
	To adjust the display sequence, in the title line, you can click the IP					
Device Coerch	address, Manufacturer, Type, MAC Address, Port, or Device Name					
Device Search	text. For example, click the IP address text, the sequence icon					
	IP Address is displayed.					
	C NOTE					
	"*" is displayed next to the added device.					
Add	In the Searched Device List area, select the device that you want to					
Auu	add.					

Parameter	Description
	Add the device by manually configuring settings such as IP address,
Manual Add	channel selection. For details, see "5.6.1.3 Adding Remote Devices
	Manually."
Added Device	Displays the added devices. You can edit and delete the device, and
List	view the device information.
Delete	Select the check box of the added device, and then click Delete to
Delete	delete the added device.
Import	Select the searched devices and then click Import to import the
Import	devices in batches.
Export	Select the added devices and then click Export . The exported
Export	devices information is saved into the USB storage device.

Table 5-28

5.6.1.1 Initializing Remote Devices

You can reset the password and IP address of the remote devices through initializing. <u>Step 1</u> Click **Device Search**.

The searched devices are displayed in the table.	See Figure 5-71.
--	------------------

CAMERA						ins	1 a 14 1
MAGE:	Repairment	Tinte		niken (Upprich		
	Universitations		Initialize	Titoo	wfilter		IPC -
OVERLAY:	-50	GR	Pressee	Status	IP Add	anna 11	Mar+
					19210		ALC: N
CHANNEL TYPE		1			152.36		
					110.36	8.1.123	
REGISTRATION					199.34	ai m	
COAXIAL UPDINADE		1			190.70	63,353	
		1			192.16	41114	
	Device Search Addied Device					Add	Manual Add
	Chern	-	Eabt	Defens	Status	IP Add	74188
				ininent: 415		Import	Export

Figure 5-71

<u>Step 2</u> Enable the Initialized function.

The uninitialized devices are displayed. See Figure 5-72.

CAMERA	-				100 A 19+ B
MADE	Manager 1 194	in Fin	-	Argenide .	
ENCODE	Generations .	Initialize	iller a	e Filter :	IPC -
OVERLAY/	1 540	Preview	Status	IP Address	Mana
	1 2	C.C.C.	-	102-108-1-108	Di
CHANNEL TYPE					
COAXIAL UPDIDADE					
	Device Search			Add	Manual Add
	Added Device				
	Channel	Edit	Deleter	Status (P	Address
	Distance D. Bearty	e hersteitte Totel	hardweith 61.50	Mentil Month	Export
					and the Constant

Figure 5-72

- <u>Step 3</u> Select the uninitialized device that you want to initialize.
- Step 4 Click Initialize.

The Enter Password interface is displayed. See Figure 5-73.

ENER FREEMENE		
8	Using current debrins parameterid and estimat entry	
	/11	Next

Figure 5-73

<u>Step 5</u> Configure the password and email information.

D NOTE

If you select the **Using current device password and email info** check box, the remote device automatically uses the current password and email information, so you do not need to set the password and email address again and can go to Step 6.

 Clear the Using current device password and email info check box. The password setting interface is displayed. See Figure 5-74.

Local Configurations 105



Figure 5-74

2) Configure the settings for the password setting parameters. See Table 5-29.

Parameter	Description
User	The default is admin.
Password	The new password can be set from 8 characters through 32
	characters and contains at least two types from number, letter and
	special characters (excluding"", """, ";", ":" and "&").
Confirm Password	Please enter a strong password according to the password strength
	bar indication.

Table 5-29

3) Click Next.

The **Password Protection** interface is displayed. See Figure 5-75.

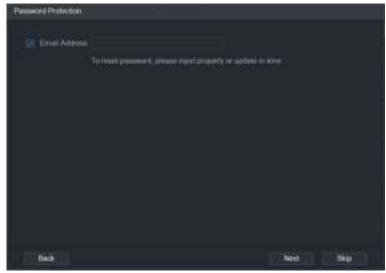


Figure 5-75

4) Select the **Email Address** box and enter the email address that you want to reserve for password reset in the future.

D NOTE

If you do not want to set the reserved email address, click Skip.

Step 6 Click Next.

The **NETWORK** interface is displayed. See Figure 5-76.

NETWORK		
Checkes Droice No.		
C DHOP		
STATIC		
IP Address	102 168 1 108	Incremental Value 1
Subnet Mask	255 . 255 . 255 . 0	
Default Gateway	192 168 1 1	
t IP Addres 1 102 Ioli 1		
Back		Neit Skip

Figure 5-76

- <u>Step 7</u> Configure the IP address.
 - Select the **DHCP** check box, you do not need to enter the IP address information, because the system will allocate one IP address to the remote device.
 - Select the **STATIC** check box, you need to enter the IP address, subnet mast, default gateway, and incremental value. The system will allocate the IP address to the remote devices by progressively increasing the last part of the IP address when initializing devices in batches.

D NOTE

When configuring IP address for multiple remote devices which were not in the same network segment, these remote devices will belong to the same network segment after configuration.

Step 8 Click Next.

The initializing is started. After the process is completed, see Figure 5-77.

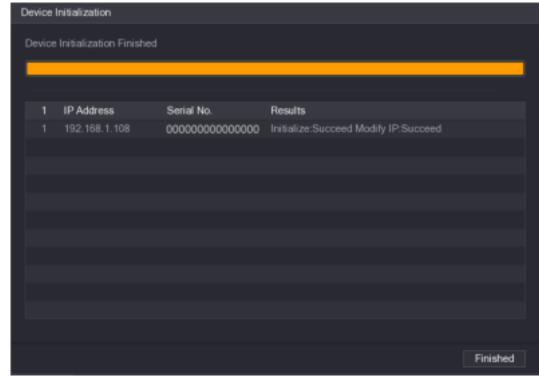


Figure 5-77

<u>Step 9</u> Click **Finished** to complete the settings.

5.6.1.2 Adding Remote Devices Automatically

<u>Step 1</u> On the **Registration** interface, click **Device Search** The searched devices are displayed. See Figure 5-78.

CAMERA						(in	1 x + 1
MAGE	Repetation	Tim			Upprob		
ENCODE	University		Initialize		boe Filter		IPC -
OVERLAY	50	Edit	Pressee	Status		IP Address	Mare
F020		1				1921083.19	
OWNER THE		1				1523183.11	
The second stream of the						1923641129	
 HEGISTRATION 						190.364.1.171	
COAKIAL UPDIDADE		1				190 108 1.151	
STATES AND A STATES		1				1923681.154	
	Device Search Addied Device					Add.	Manual Add
	Cherry	1	Edit	Deleter	Status	IP An	hens
			e torowith To	winner: 4	SOMew W	Import	Export

Figure 5-78

<u>Step 2</u> Select the check box of the device.

Step 3 Click Add.

The device is added into the Added Device area.

D NOTE

- You can also double-click the device to add it into the Added Device area.
- You can add devices in batches.

5.6.1.3 Adding Remote Devices Manually

Step 1 On the Registration interface, click Manual Add.

The Manual Add interface is displayed. See Figure 5-79.

Thannel	21	
Aanufacturer	Onvif	
P Address	192.168.0.0	
RTSP Port	554	
ITTP Port	80	
Jser Name	admin	
assword		
Remote Channel	1	
ecoder Buffer	Default	
incrypt		
🖲 Auto 🔘 TCP	UDP O MULTICAST	
🖲 Auto 🔘 TCP	O UDP O MULTICAST	

Figure 5-79

<u>Step 2</u> Configure the settings for the manual adding device parameters. See Table 5-30.

Parameter	Description
Channel	In the Channel list, select the channel that you want use on the
Channel	Device to connect the remote device.
Manufacturer	In the Manufacturer list, select the manufacturer of the remote
Manulacturer	device.
	In the IP Address box, enter the IP address of remote device.
IP Address	R NOTE
	The default is 192.168.0.0 which the system cannot connect to.
RTSP Port	The default value setting is 554. You can enter the value according to
	your actual situation.
HTTP Port	The default value setting is 80. You can enter the value according to

Parameter	Description					
	your actual situation.					
	If you enter other value, for example, 70, and then you should enter					
	70 after the IP address when logging in the Device by browser.					
User Name	Enter the user name of the remote device.					
Password	Enter the password of the user for the remote device					
Domoto Channel	Enter the remote channel number of the remote device that you want					
Remote Channel	to add.					
Decoder Buffer	In the Decoder Buffer list, select Default, Realtime, or Fluent.					
	• If the remote device is added through private protocol, the default					
	type is TCP .					
Drotocol Turoc	• If the remote device is added through Onvif protocol, the system					
Protocol Type	supports Auto, TCP, UDP, or MULTICAST.					
	• If the remote device is added through other manufacturers, the					
	system supports TCP and UDP .					
	If the remote device is added through Onvif protocol, selecting the					
Encrypt	Encrypt check box will provide encryption protection to the data being					
	transmitted.					

Table 5-30

<u>Step 3</u> Click **Apply** to save the settings.

D NOTE

- Only one device can be added manually at one time.
- Indicates successful connection and I indicates connection failed.

5.6.1.4 Modifying or Deleting Remote Devices

You can modify and delete the added devices.

• To modify the remote devices, do the following:

Step 1 Click or double-click a device.

The **Edit** interface is displayed. See Figure 5-80.

Edit		
Channel	10	
Manufacturer	Orwif	
IP Address	192 168 1 123	
RTSP Part	554	
HTTP Part	80	
User Nome	admin	
Paseword		
Remote Channel	1	
Decoder Buffer	Default	
🔹 Auto 🔘 TCP	O UDP C MULTICA	ST
Сору	OK	Back

Figure 5-80

- <u>Step 2</u> In the **Channel** list, select the channel that you want to modify settings for.
- <u>Step 3</u> Click **OK** to save the settings.
 - D NOTE

Click Copy to copy the user name and password to other channels.

- To delete one or more added devices, do the following:
 - \diamond Click **\Box** to delete one device
 - Select the check box of the devices that you want to delete, and then click **Delete**.

5.6.1.5 Modifying IP Address

You can modify a single IP address or multiple IP addresses of remote devices at the one time.

• To modify a single IP address, do the following:

Step 1 In the Searched Device list area, click for the device that you want to modify IP.

The Modify IP interface is displayed. See Figure 5-81.





- <u>Step 2</u> Configure the settings for IP address, subnet mask, default gateway, user name, and password.
- <u>Step 3</u> Enable the **Add** function to add the device into the **Added Device** area.
- Step 4 Click **OK** to save the settings.
- To modify IP address in batches, do the following:
- <u>Step 1</u> In the Searched Device list area, select the devices that you want to modify IP address in batches.



The Modify IP interface is displayed. See Figure 5-82.



Figure 5-82

- Step 3 Enable the **Batch Modify** function.
- <u>Step 4</u> Configure the settings for start IP address (the IP address is allocated in sequence), subnet mask, default gateway, user name, and password.
- Step 5 Enable the Add function to add the devices into the Added Device area.
- <u>Step 6</u> Click **Apply** to save the settings.

5.6.1.6 Exporting IP Address

You can export the added IP address to the USB storage device.

D NOTE

The exported information is saved in .csv file, which includes IP address, port number, channel number, manufacturer, user name, and password.

<u>Step 1</u> Insert the USB storage device to the USB port of the Device.

Step 2 Click Export.

The Browse interface is displayed. See Figure 5-83.

Browse					
Device Name	sdb1(USB USB)	- Refresh	Format		
Total Space	28.63 GB				
Free Space	27.04 GB				
Address					
Name		Size	Туре	Delete	
LOST DIR			Folder	意	
C Android			Folder		
- eir			Folder	10	
1234567			Folder	.8	
D NVR			Folder		
Screenshot_	20180523-133141.png	75.8 KB	File	5	1
File Backup Encry	ption				
New Folder			ОК	Back	

Figure 5-83

Step 3 Configure the save path.

<u>Step 4</u> Click **OK** to save the settings.

A pop-up message indicating "Successfully exported" is displayed.

Step 5 Click OK.

D NOTE

When exporting IP address, the **File Backup Encryption** check box is selected by default. The file information includes IP address, port, channel number, manufacturer, user name, and password.

- If you select the File Backup Encryption check box, the file format is .backup.
- If you clear the **File Backup Encryption** check box, the file format is .csv. In this case, there might be a risk of data leakage.

5.6.1.7 Importing IP Address

You can add remote devices by importing IP address information.

- <u>Step 1</u> Insert the USB storage device to the USB port of the Device.
- Step 2 Click Import.

The Browse interface is displayed. See Figure 5-84.

Browse				
Device Name	sda5(USB DISK)	Retresh		
Total Space	15.60 GB			
Free Space	15.60 GB			
Address	R.			
Name		Size	Туре	Delete
I P			Folder	8
📄 RemoteCor	ntig_20171103141044,cav	464 B	File	
-				
Conlig File				
			OX.	Back

Figure 5-84

- Step 3 Select the file that you want to import.
- <u>Step 4</u> Click **OK** to start importing.

After importing is completed, a pop-up message indicating "The import succeeded" is displayed.

D NOTE

If the IP address that you want to import already exists in the Device, the system will pop up a message to ask you whether to overwrite the existing content.

- Click **OK** to replace the existing one.
- Click Cancel to add it as a separate device in the Added Device area.

CAUTION

- You can edit the exported .csv file and be cautious not to change the file format; otherwise the file cannot be imported as it will be judged as invalid.
- The language of .csv file must match the Device language.
- The import and export through customized protocol is not supported.

5.6.2 Managing Remote Devices

You can view the status of remote devices and upgrade.

5.6.2.1 Viewing Status

You can view the device information such as connection status, IP address, motion detection, video loss detection, camera name, and manufacturer.

Select **Main Menu > CAMERA > REGISTRATION > Status**, the **Status** interface is displayed. See Figure 5-85.

CAMERA	_				1	1001 2 34 2
	Registration	Status	Panielee	Upprode		
	Device Status					
OVERLAY	Channel	Statute	IP Address	MD	Video Loss	Tampering
			192 148 1 128			
GRANDEL TYPE						
REGISTRATION						
COAXIAL UPDIMOE						
	•					

Figure 5-85

5.6.2.2 Viewing Firmware Information

You can view the device firmware information such as channel number, IP address, manufacturer, system version, video input, audio input, and alarm in.

Select **Main Menu > CAMERA > REGISTRATION > Firmware**, the **Firmware** interface is displayed. See Figure 5-86.

Statut Pegestion Tests Prime Light	-8	CAMERA				-		tine a	84 B -
CHERENY IN ACCESS MALINEAUX (pp 2) Applies Version Ver, AN PTZ CHANNEL, TYPE A REGISSIONAL UPDIDACE			Registration	Tinte	Fernives	- Upp	nidi		
		OVERLAY PTZ							*
(Partmett.)									
			Retrat						

Figure 5-86

5.6.2.3 Upgrading Remote Devices

<u>Step 1</u> Select Main Menu > CAMERA > REGISTRATION > Upgrade. The Upgrade interface is displayed. See Figure 5-87.

	CAMERA							106	A 191 H
		Reparation	The		Females	Upgrad	20 C		
		Device Lagrad	e@1)						
	OVERLAY	Channel	Status		System Version	Proce		grinde	Port
				192 168 1-12		To be sets	radot D	elect	
	CHANNEL TYPE								
18	REGISTRATION								
	COAXIAL UPDIMOE								
					The s	ipgrade	Manual Check	Online U	Pariel I

Figure 5-87

Step 2 Upgrade the device.

- File Upgrade
- 1) Insert a USB storage device containing the upgrade files into the USB port of the Device.
- 2) Select the devices that you want to upgrade.
- 3) Click File upgrade.

The File Upgrade interface is displayed.

- 4) Select the upgrading files and click **Apply**.
- Online Upgrade
- Click Detect or select the check box the device that you want to upgrade and click Manual Check.

The system starts detecting if there is a new version on the online server.

- 2) Select the check box of all the devices that have new version.
- 3) Click Online Upgrade.
- D NOTE
- The system will pop up a message to indicate if the upgrading is successful.
- You can use the Type list to filter the devices so that you can find the devices quickly.

5.7 Configuring Record Settings

You can record video manually or automatically and configure the recording settings to main stream and sub stream respectively.

5.7.1 Enabling Record Control



- Manual recording operation requires the user have the permission to access STORAGE settings.
- Check to ensure the HDD installed in the Device has been formatted properly.

To enter the record control interface, do the following:

<u>Step 1</u> Right-click on the live view screen, the shortcut menu is displayed. On the shortcut menu, select **Manual > Record Control**. The **RECORD** interface is displayed, see Figure 5-88.

RECORD							
Main Stream	AE	345	6 7 8	9 10 11	12 13 14	1 15 16	
Auto							
Menual							
Stop							
Sub Stream							
Agto							
Manual							
Stop							
Snapshot							
Enable							
Disable							
						4095	Back

Figure 5-88

<u>Step 2</u> Configure the settings for the record control parameters. See Table 5-31.

Parameter	Description					
Channel	Displays all the analog channels and the connected digital channels.					
Channel	You can select a single channel or select All.					
Record status	 Auto: Automatically record according to the record type and recording time as configured in the recording schedule. Manual: Keep general recording for 24 hours for the selected channel. Stop: Do not record. 					
Snapshot status	Enable or disable the scheduled snapshot for the corresponding channels.					

Table 5-31

Step 3 Click Apply.

5.7.2 Configuring Recorded Video Storage Schedule

You need to configure the storage schedule for the recorded video so that the recorded video can be saved. For details, see "5.1.4.9 Configuring Recorded Video Storage Schedule."

5.8 Configuring Snapshot Settings

5.8.1 Configuring Snapshot Trigger

The snapshot is divided into scheduled snapshot, event triggered snapshot, and face detection triggered snapshot. When the both are enabled, the event triggered snapshot has the priority.

- If there is no alarm event, the system performs scheduled snapshot.
- If there is any alarm event, the system performs event triggered snapshot.

5.8.1.1 Configuring Scheduled Snapshot

- <u>Step 1</u> Right-click on the live view screen, the shortcut menu is displayed.
- <u>Step 2</u> On the shortcut menu, select **Manual > Record Control**.

The **RECORD** interface is displayed.

<u>Step 3</u> In the **Snapshot** area, enable the snapshot for the channels if needed. See Figure 5-89.

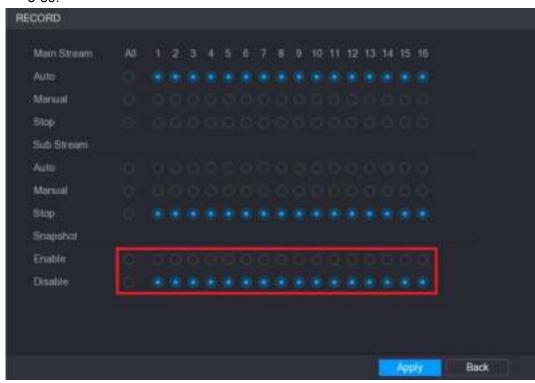


Figure 5-89

<u>Step 4</u> Select Main Menu > CAMERA > ENCODE > Snapshot.

The **Snapshot** interface is displayed.

<u>Step 5</u> In the **Mode** list, select **General**, and then configure other parameters. See Figure 5-90.

_\$	CAMERA			100 1 P+ 0
		Encode	uphin	
	ENCODE	Mentel Sings	11	
	OVERLAY:	Constantine of		
		Channel		
	GHANNEL TYPE		General	
		Image Stre	352*288(CIF)	
	COAXIAL UPDITAGE	Image Guildly	4	
			1 SPL	
		Default C	Xery.	Keyly Gasof

Figure 5-90

<u>Step 6</u> Click **Apply** to save the settings.

- If you have configured the snapshot schedule, the configuration has been completed.
- If you have not configured the snapshot schedule, see "5.1.4.10 Configuring Snapshot Storage Schedule."

5.8.1.2 Configuring Event Triggered Snapshot

<u>Step 1</u> Select **Main Menu > CAMERA > ENCODE > Snapshot**. The **Snapshot** interface is displayed.

<u>Step 2</u> In the **Mode** list, select **Event**, and then configure other parameters. See Figure 5-91.

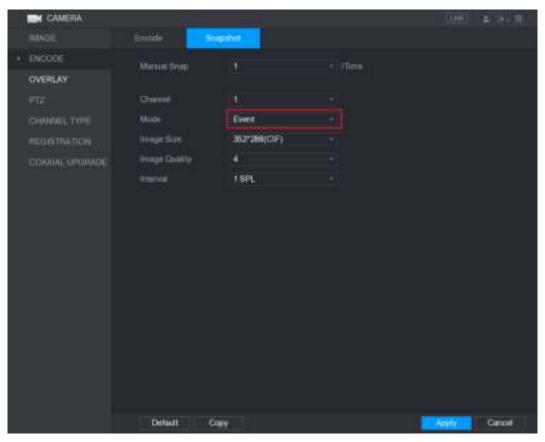


Figure 5-91

<u>Step 3</u> Select **Main Menu > ALARM > VIDEO DETECT**, and select the event type to configure, for example, select the **Motion Detect** tab. See Figure 5-92.

	LARM	-				Ę	LINE 1	A 191 B
ALAN	Millio 🚺	bisin Detect	eo Lora	Tampering	Chagnoein			
ALAN	MUNIPUTE	Channell	ă.		Region	Setting		
ALAN	MOUSEUT	Eriable MD	E		Unide PR			
+ VIDE	O DETECT		- Harrison (II		All parts			
Almo	INMALITY .	Feriod Alam:Out	Setting Setting		Avid-Dilbert	5	Bec.	
		Bhow Message	Alarm Lipit	-	D.Smillinel	- 1965	1.000	
		2 Neoard Channel						
		4772	Setting		Post Decord	10	Sec.	
		- Thir						
		Edingshok						
		Video Marca	BADE		1109			
		Viela Prorigan	None					
		Default Cop	v Tes			- Ki	ίζ.	Back

Figure 5-92

<u>Step 4</u> Select the **Snapshot** check box and select the corresponding channel.

Step 5 Click Apply.

5.8.1.3 Configuring Face Detection Triggered Snapshot

- <u>Step 1</u> Select Main Menu > CAMERA > ENCODE > Snapshot. The Snapshot interface is displayed.
- <u>Step 2</u> In the **Mode** list, select **Human Face**, and then configure other parameters. See Figure 5-93.

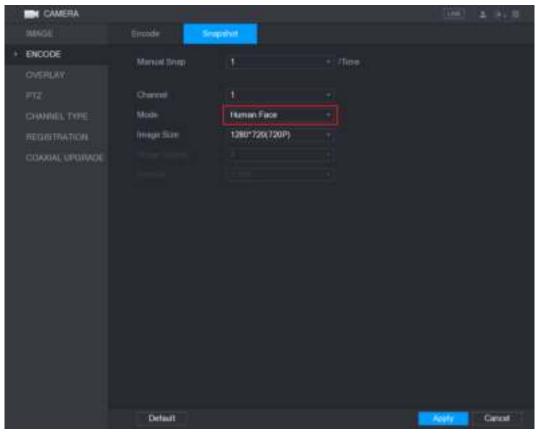


Figure 5-93

<u>Step 3</u> Select Main Menu > FACE DETECT > PARAMETERS > Human Face. The Human Face interface is displayed. See Figure 5-94.

2 FACE DETECT					A 194 M
UMART SEARCH	Harrist Face				
 DARAMETERS 	Charmii Enable		• Target Filler	Setting	
	Fluriod Alarm Cut Sensi Email	Setting Setting	Latith	10 Se	
	Precord Channel 1972	Setting	Post Recard	10 50	
	Ebiegatio				
	Visco Prorum	None .			
	Detault			Atti	flack

Figure 5-94

<u>Step 4</u> Select the **Snapshot** check box and select the corresponding channel. <u>Step 5</u> Click **Apply**.

5.8.2 Configuring Snapshot Storage Schedule

You need to configure the storage schedule for the snapshot so that the snapshot can be saved. For details, see "5.1.4.10 Configuring Snapshot Storage Schedule."

5.8.3 Backing up Snapshots to FTP

<u>Step 1</u> Select Main Menu > STORAGE > FTP.

_											
	STORAGE										
		Enable	-								
	SCHEDULE	- arringer									
	HDO MANAGER	Host IP	0_0	0 0	1						
	ADVANCE		21								
	9903A	Anonymity									
	HDD DETECT	Liber Name									
	HEC ENTIMATE	Patersont									
	FTP.	Results Devidery									
		File Langth(M)	.0								
		Image Libboar Intervet(Sec.)	2								
		Charver	11								
		Work Div	Wed			Alam	Intel	MD	Gener		
		Period 1	00:00	- 24 ; 00							
		Period 2	00 : 00	- 24 : 00							
		Default						- Kee		flack	
		and the second se							-		

The FTP interface is displayed. See Figure 5-95.

Figure 5-95

<u>Step 2</u> Enable the FTP function and configure the parameters. For details, see "5.19.6 Configuring FTP Storage Settings."

The snapshots will be uploaded to FTP for backup.

5.9 Playing Back Video

5.9.1 Enabling Record Control



- Manual recording operation requires the user have the permission to access STORAGE settings.
- Check to ensure the HDD installed in the Device has been formatted properly.

To enter the record control interface, do the following:

<u>Step 1</u> Right-click on the live view screen, the shortcut menu is displayed. On the shortcut menu, select **Manual > Record Control**. The **RECORD** interface is displayed, see Figure 5-96.

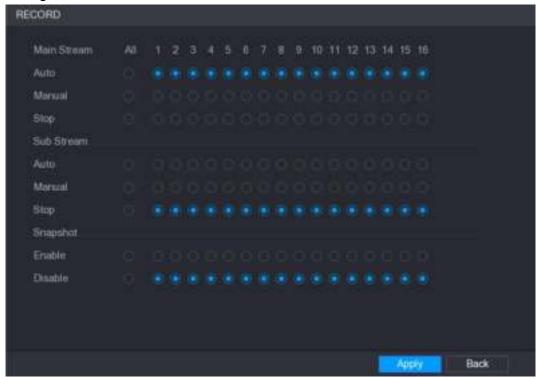


Figure 5-96

Step 2	Configure the settings for the reco	ord control parameters.	See Table 5-32.
<u> </u>	eeningure and eetange for and reed	na oona or paramotoro.	

Parameter	Description					
Channel	Displays all the analog channels and the connected digital channels.					
Channel	You can select a single channel or select All.					
	• Auto: Automatically record according to the record type and recording time as configured in the recording schedule.					
Record status	 Manual: Keep general recording for 24 hours for the selected channel. Stop: Do not record. 					
	Stop: Do not record. Enable or disable the scheduled snapshot for the corresponding					
Snapshot status	channels.					

5.9.2 Instant Playback

You can use the instant playback function to play back the previous five minutes to sixty minutes of the recorded video in any channel. For details about instant playback function, see "5.2.2.1 Instant Playback."

5.9.3 Main Interface of Video Playback

You can search for and play back the recorded video saved on the Device. Select **Main Menu > VIDEO**, the video search interface is displayed. See Figure 5-97.



Figure 5-97

No.	Function	Description					
		Display the searched recorded video or picture. It supports playing					
		in single-channel, 4-channel, 9-channel, and 16-channel					
		simultaneously.					
1	Display Window	III NOTE					
1		When playing back in a single channel mode, hold down the left					
		mouse button to select the area that you want to enlarge. The area					
		is enlarged after the left mouse button is released. To exit the					
		enlarged status, right-click on the image.					
2	Playback	Playback control buttons. For details about the control buttons, see					
2	Controls Bar	"5.9.3.1 Introducing Playback Controls."					

No.	Function	Description
3	Time Bar	 Display the type and time period of the current recorded video. In the 4-channel layout, there are four time bars are displayed; in the other view layouts, only one time bar is displayed. Click on the colored area to start playback from a certain time. In the situation when you are configuring the settings, rotate the wheel button on the time bar, the time bar is zooming in from 0. In the situation when playback is ongoing, rotate the wheel button on the time bar, the time bar is zooming from the time point where the playback is located. Time bar colors: Green indicates general type; Red indicates external alarm; Yellow indicates motion detection; Blue indicates intelligent events; Purple indicates POS events. For some models, when you are clicking on the blank area in the time bar, the system automatically jumps to the next time point where there is a recorded video located.
4	Play Status	Includes two playback status: Play and Stop .
5	Sync	Select the Sync check box to simultaneously play recorded videos of different channels in the same period in multi-channel view.
6	Record type	Select the check box to define the recording type to search for.
7	Search type	Select the content to play back: Record , PIC , Splice Playback . For details about the selecting search type, see "5.9.3.2 Selecting Search Type."
8	Calendar	Click the date that you want to search, the time bar displays the corresponding record. The dates with record or snapshot have a small solid circle under the date.
9	View Layout and Channel Selection	 In the CAM NAME list, select the channel(s) that you want to play back. The window split is decided by how you select the channel(s). For example, if you select one channel, the playback is displayed in the single-channel view; if you select two to four channels, the playback is displayed in the four-channel view. The maximum is eight channels. Click to switch the streams. Indicates main stream, and indicates sub stream.
10	Video Splice	Splice a section of recorded video and save it. For details about splicing a recorded video, see "5.9.3.3 Clipping Recorded Video."
11	Backup	Back up the recorded video files. For details, see "5.9.3.4 Backing up Recorded Video."

No.	Function	Description					
12	List Display	 This area includes Mark List and File List. Click the Mark List button, the marked recorded video list is displayed. Double-click the file to start playing. Click the File List button, the searched recorded video list is displayed. You can lock the files. For details, see "5.9.8 Using the File List." 					
13	Full Screen	Click to display in full screen. In the full screen mode, point to the bottom of the screen, the time bar is displayed. Right-click on the screen to exit full screen mode.					
14	Time Bar Unit	You can select 24hr, 2hr, 1hr, or 30min as the unit of time bar. The time bar display changes with the setting.					
	Table 5-33						

5.9.3.1 Introducing Playback Controls Bar

You can perform the operations such as control the speed of playback, add mark, and take snapshots through the playback controls bar. See Figure 5-98 and Table 5-34.



Figure 5-98

D NOTE

The play backward function and playback speed are dependent on the product version. The actual product shall govern. You can also contact the technical support to consult the hardware version information.

lcon	Function			
► 11	Play/Pause.			
 , 	During playing back, you can switch between play and pause.			
	Stop.			
-	During playing back, you can click the Stop button to stop playback.			
	Play Backward.			
	• During playing back, click the Play Backward button to backward			
∢ II	play the recorded video, the button switches to 🛄; click 🛄			
,	to stop playing backward.			
	• During playing back, click b to start playing forward.			

lcon	Function				
	Previous Frame/Next Frame.				
∢ , ▶	 When the playback is paused, click or click to play single-frame recorded video. When playing back single-frame recorded video, click to start playing forward. 				
	Slow Playback.				
₽	 During playing back, click is to set the speed of slow playback as SlowX1/2, SlowX1/4, SlowX1/8, or SlowX1/16. During fast playback, click is to slow down the speed of fast playback. 				
	Fast Playback.				
*	 During playing back, click to set the speed of fast playback as FastX2, FastX4, FastX8, or FastX16. 				
	• During slow playback, click at to speed up slow playback.				
	Previous Day/Next Day. Click or click to play the previous day or next day of the				
,					
• — •	current recorded video. Adjust volume of playback.				
*	Smart Search. For details about using the smart search, see "5.9.4 Smart Search."				
Ċ.	In the full screen mode, click I to take a snapshot and save into the USB storage device or mobile HDD.				
*	Add Mark for the recorded view. For details about adding mark, see "5.9.5 Marking and Playing Back Video."				
	Hide POS Hide. During single-channel playback, click to display or hide POS information on the screen.				
L					

Table 5-34

5.9.3.2 Selecting Search Type

You can search the recorded videos, splice, or snapshots from HDD or external storage device.

• **From R/W HDD**: Recorded videos or snapshots playback from HDD of the Device. See Figure 5-99.




Figure 5-99

• From I/O Device: Recorded videos playback from external storage device. See Figure 5-100.

Click Browse, select the save path of recorded video file that you want to play.

Double-click the video file or click **D** to start playing.



Figure 5-100

5.9.3.3 Clipping Recorded Video

During playback, clip sections of recorded video and save to the USB storage device. For the video clip interface, see Figure 5-101.





Step 1 Select a recorded video that you want to play.

- Click I to start playing from the beginning.
- Double-click anywhere in the time bar colored area to start playback.
- <u>Step 2</u> Click on the time bar to select the start time, and then click is to start clipping.
- Step 3 Click on the time bar to select the end time, and then click is to stop clipping.

Step 4 Click

The **BACKUP** dialog box is displayed. You can back up the files.

U NOTE

- You can clip the video of a single-channel or multiple channels.
- Maximum 1024 files can be backed up at one time.
- The files that are selected in the File List cannot be clipped.

5.9.3.4 Backing up Recorded Video

You can back up the recorded video file or splice video file into the USB storage device.

- <u>Step 1</u> Select the recorded video file that you want to back up. You can select the following two types of files:
 - Recorded video file: Click I, the File List area is displayed. Select the file(s) that you want to back up.
 - Splice video file. For details about splicing video file, see "5.9.3.3 Clipping Recorded Video."

Step 2 Click

The **BACKUP** dialog box is displayed. See Figure 5-102.

BACKUP						
13	Nam	e(Type) F	ree Space/Total S	pace	Device Status	
1	√ sdb5(USB	DISK)	15.60 GB/15.60 G		Ready	
2	CH Type	Start Time	End Time	Size(K)	B)	
1	V 1 R	17-11-08-01:00	00 17-11-08.02	2.00.00 184	47872	
2	2 1 B	17-11-08 02:00	100 17-11-08-03	100.00 184	470.32	
Space	Required / Spi	ace Remaining 3	.52 GB/15.60 GB	Backup	Clear	

Figure 5-102

Step 3 Click Backup.

D NOTE

If you do not want to back the file, clear the check box.

5.9.4 Smart Search

During playback, you can analyze a certain area to find if there was any motion detection event occurred. The system will display the images with motion events of the recorded video.

LU NOTE

Not all models support this function.

To use the Smart Search function, you need to enable the motion detection for the channel by selecting **Main Menu > ALARM > VIDEO DETECT > Motion Detect**.

To use the Smart Search function, do the following:

<u>Step 1</u> Select **Main Menu > VIDEO**, the video search interface is displayed.

<u>Step 2</u> In the **CAME NAME** list, select the channel(s) that you want to play.

Step 3 Click or double-click anywhere in the time bar colored area to start playback.

Step 4 Click



The grid is displayed on the screen.

D NOTE

- Only single-channel supports smart search.
- If multi-channels are selected, double-click on the channel window to display this channel only on the screen, and then you can start using smart search function.
- <u>Step 5</u> Drag the pointer to select the searching area.

LU NOTE

The grid area supports 22×18(PAL) and 22×15(NTSC).

Step 6 Click

The screen starts playing back the motional splices of recorded video for the selected searching area.

Step 7 Click to exit the playback.

5.9.5 Marking and Playing Back Video

You can mark the recording for somewhere important. Then you can easily find the marked recording by searching time and mark name.

Marking a Video

<u>Step 1</u> Select **Main Menu > VIDEO**, the video search interface is displayed.

Step 2 In the playback mode, click

The Add Mark dialog box is displayed. See Figure 5-103.

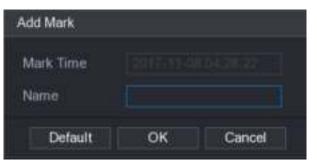


Figure 5-103

<u>Step 3</u> In the **Name** box, enter a name.

Step 4 Click OK.

This marked video file displays in the Mark List.

Playing Back Marked Video

III NOTE

This function is supported on single-channel playback. <u>Step 1</u> In the **CAME NAME** list, select one channel.



The Mark List interface is displayed. See Figure 5-104.

00 : 00 : 00	Q
1	
Mark Time Nam	e
03:19:30 123	
10:30:34 456	
Name	
Play time before the r	
0	Sec.
秀	5

Figure 5-104

<u>Step 3</u> Double-click the file that you want to play back.

To search the marked video by time, in the SEARCH box on the top of the interface,

enter the time, and then click

Playing Back Time before the Mark

You can configure to play N seconds of the marked video before the marked time.

<u>Step 1</u> In the **Name** box, enter the name of a marked video.

<u>Step 2</u> In the **Playback time before the mark** box, enter N seconds.

Step 3 Click

The playback starts from N seconds before the marked time.

📖 NOTE

If there is N seconds exist before the marked time, the playback starts from N seconds before the marked time. If there is not, it plays back as much as there is.

Managing Marked Video

In the Mark List interface, click , the Manager interface is displayed. See Figure 5-105.

Manage	H.				
Chann	el 🚺	5			
Start T	ime	2017 - 11 - 08	00 : 00 : 00		
End Tir	nie	2017 - 11 - 09	00:00:00		Search
2	CH	Mark Time		Name	
		2017-11-08	03:19:30	123	
2		2017-11-08	10:30:34	456	
Del	ete				Cancel

Figure 5-105

- Be default, it manages all the marked videos of the selected channel.
- To search the marked video, select channel number from the **Channel** list, enter time in **Start Time** box and **End Time** box, and then click **Search**.
- All the marked videos display in time order.
- To modify the name of marked video, double-click a marked video, the **Edit Mark** dialog box is displayed.
- To delete the marked video, select the marked video, and then click **Delete**.

D NOTE

After opening the **Manger** interface, the playback will pause until exiting this interface. If the marked video that was in playing back is deleted, the playback will start from the first marked video in the **Mark List**.

5.9.6 Playing Back Snapshots

You can search and play back the snapshots.

- Step 1 Select Main Menu > VIDEO, the video search interface is displayed.
- <u>Step 2</u> In the **Search Type** list, select **PIC**.
- Step 3 In the Channel list, select a channel number.
- <u>Step 4</u> In the **Calendar** area, select a date.

Step 5 Click

The system starts playing snapshots according to the configured intervals.

5.9.7 Playing Back Splices

You can clip the recorded video files into splices and then play back at the same time to save your time.

🛄 NOTE

Not all models support this function.

Step 1 Select Main Menu > VIDEO, the video search interface is displayed.

Step 2 In the Search Type list, select Splice Playback; In the Split Mode list, select 4, 9, or
 16. See Figure 5-106.




Figure 5-106

<u>Step 3</u> In the **Calendar** area, select a date.

<u>Step 4</u> In the **CAM NAME** list, select a channel.

NOTE

Only single-channel supports this function.

- Step 5 Start playing back splices. See Figure 5-107.
 - Click Late, the playback starts from the beginning.
 - Double-click anywhere on the time bar, the playback starts from where you click.




Figure 5-107

D NOTE

Every recorded video file must be at least five minutes. If a recorded video file is less than 20 minutes but still choose to split into four windows, the system will automatically adjust the windows quantity to ensure every splice is more than five minutes, and in this case it is possible that there are no images are displaying in some windows.

5.9.8 Using the File List

You can view all the recorded videos within a certain period from any channel in the File List.

- <u>Step 1</u> Select **Main Menu > VIDEO**, the video search interface is displayed.
- Step 2 Select a channel(s).
- Step 3 Click

The File List interface is displayed. See Figure 5-108.

10 07 m Q
StartTime Type
Contraction II
01:00:00 R
02:00:00 R
03:00:00 R
04:00:00 R
05:00:00 R
06:00:00 R
07:00:00 R
08:00:00 R
09:00:00 R
10:00:00 R
11:00:00 R
Start Time
17-11-08 00:00:00
End Time
17-11-08 01:00:00 Size(KB) 1847776
Situtop) (Satura

Figure 5-108

Step 4 Start playback.

- Click , the playback starts from the first file by default.
- Click any file, the system plays back this file.

D NOTE

- In the time box on the top of the file list interface, you can enter the specific time to search the file that you want to view.
- In the File List area, there are 128 files can be displayed.
- File type: R indicates general recorded video; A indicates recorded video with external alarms; M indicates recorded video with motion detection events; I indicates recorded video with intelligent vents.
- Click to return to the interface with calendar and CAM NAME list.

Locking and Unlocking the Recorded Video

• To lock the recorded video, on the **File List** interface, select the check box of the recorded

video, and then click . The locked video will not be covered.

• To view the locked information, click . the **FILE LOCKED** interface is displayed.

U NOTE

The recorded video that is under writing or overwriting cannot be locked.

 To unlock the recorded video, in the FILE LOCKED interface, select the video, and then click Unlock. See Figure 5-109.

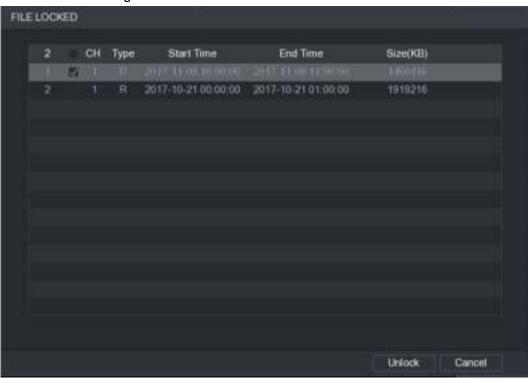


Figure 5-109

5.10 Alarm Events Settings

5.10.1 Alarm Information

You can search, view and back up the alarm information.

Step 1 Select Main Menu > ALARM > ALARM INFO.

The ALARM INFO interface is displayed. See Figure 5-110.

ALARMINED ALARMINEDUT ALARMIDUTEUT VICEO DETECT	Type Start Tene End Tane	All		
ALARMOUTPUT	Silect Terrie	2018-02-05 00:00 00		
	End Time	2018-02-00 00:00:00		
VEHICHITECT				wicith
	40 Log Time	Event	Flayback	
ABBOBIAALITY	36 2018-02-05	11:37:45 <video 7+<="" luss:="" td=""><td></td><td></td></video>		
	37 2010-02-00	11.37.40 - Wideo Lines 1 8-		
	38 2018-02-05	13.38.19 «Tangenng: 1»		
	38 2018-02-05	13.58.24 «Tangening: 1»		
	40 2018-02-05			
	41 2010-02-05	15 03:13 «Tampeting : 8+		
	40 2018-02-05	10.18.51 +VideoLines 2+		
	43 2018-02-05	15.18/51 Video Loss : 3+		
	44 2018-02.05	15:18:51 +Video Loon : 4+		
	45 2019 02:05	15.18.51 «Nuleo Lessi .11»		
	46 2018-02-05			
	47. 2010-02-05	15-18:51 No HEE		
	48 2016-02-05			

Figure 5-110

- <u>Step 2</u> In the **Type** list, select the event type; In the **Start Time** box and **End Time** box, enter the specific time.
- Step 3 Click Search.

The search results are displayed.

<u>Step 4</u> Click **Backup** to back up the search results into the external storage device.

D NOTE

- Click I to play the alarm event.
- Select an event and click **Details** to view the detailed information of the event.

5.10.2 Alarm Input Settings

Connect the alarm input and output ports by referring to "4.3 Connecting to Alarm Input and Output." You can configure the alarm settings for each channel individually or apply the settings to all channels and then save the settings.

5.10.2.1 Configuring Local Alarms

You can connect the alarm device to the alarm input port of the Device. When the alarm is activated on the alarm device, the alarm information will be uploaded to the Device, and then the Device outputs the local alarms in the way that you configure in this section.

Step 1 Select Main Menu > ALARM > ALARM INPUT > Local.

The Local interface is displayed. See Figure 5-111.

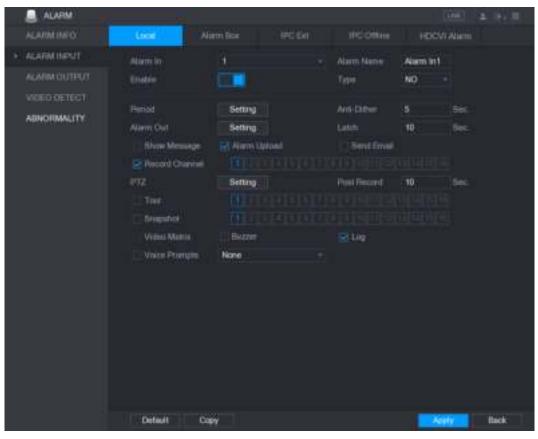


Figure 5-111

Ctop 2	Configura the	a attima a f	or the les		Coo Toble E 2E
Sleb Z	Connoure me	semnas i	or me ioc	ai alanns.	See Table 5-35.
0.00					

Parameter	Description
Alarm In	Select the channel number.
Alarm Name	Enter the customized alarm name.
Enable	Enable or disable the local alarm function.
Туре	In the Type list, select NO or select NC as the voltage output type.
	Click Setting to display setting interface.
Period	Define a period during which the motion detection is active. For details,
Fenou	see "Setting Motion Detection Period" section in "5.10.4.1 Configuring
	Motion Detect Settings."
Anti-Dither	Configure the event detection lasting time. The system records only
	one event during this period.
	Click Setting to display setting interface.
	General Alarm: Enable alarm activation through the alarm devices
	connected to the selected output port.
Alarm Out	External Alarm: Enable alarm activation through the connected
	alarm box.
	Wireless Siren: Enable alarm activation through devices
	connected by USB gateway or camera gateway.
	Set a length of time for the Device to delay turning off alarm after the
Latch	external alarm is cancelled. The value ranges from 0 seconds to 300
	seconds, and the default value is 10 seconds.
Show Message	Select the Show Message check box to enable a pop-up message in
Chow Message	your local host PC.

Parameter	Description
	Select the Alarm Upload check box to enable the system to upload the
Alarm Upload	alarm signal to the network (including alarm center) when an alarm
	event occurs.
	Select the Send Email check box to enable the system to send an
	email notification when an alarm event occurs.
Send Email	NOTE NOTE
	To use this function, make sure the email function is enabled in Main
	Menu > NETWORK > EMAIL.
	Select the channel(s) that you want to record. The selected channel(s)
	starts recording after an alarm event occurs.
Record Channel	NOTE NOTE
Record Channel	The recording for alarm and auto snapshot must be enabled. For
	details, see "5.1.4.9 Configuring Recorded Video Storage Schedule"
	and "5.9.1 Enabling Record Control."
	Click Setting to display the PTZ interface.
PTZ	Enable PTZ activation function. For each PTZ camera, select the
	preset that you want to be called when an alarm event occurs.
	Set a length of time for the Device to delay turning off recording after
Post Record	the alarm is cancelled. The value ranges from 10 seconds to 300
	seconds, and the default value is 10 seconds.
Tour	Select the Tour check box to enable a tour of the selected channels.
	Select the Snapshot check box to take a snapshot of the selected
	channel.
Snapshot	NOTE NOTE
	To use this function, select Main Menu > CAMERA > ENCODE >
	Snapshot, in the Mode list, select Event.
	Select the check box to enable the function. When an alarm event
	occurs, the video output port outputs the settings configured in "Main
Video Matrix	Menu > DISPLAY > TOUR."
	LU NOTE
	Not all models support this function.
Buzzer	Select the check box to activate a buzzer noise at the Device.
Log	Select the check box to enable the Device to record a local alarm log.
Voice Prompts	Select to enable audio broadcast/voice prompts in response to a local

<u>Step 3</u> Click **Apply** to complete the settings.

D NOTE

- Click **Default** to restore the default setting.
- Click **Copy**, in the **Copy** dialog box, select the additional channel(s) that you want to copy the local alarm settings to, and then click **Apply**.

5.10.2.2 Configuring Alarms from Alarm Box

You can connect the alarm box to the RS485 port of the Device. When the alarm is detected by the alarm box, the alarm information will be uploaded to the Device, and then the Device outputs the alarms in the way that you configure in this section.

alarm						LINE	A 191 B
ALARM INFO	Lini /	larm Bite	195 Gel	IFCOMIN	HOCK	Alarm	
ALARM INPUT	Alarm East			Statut			
AGMINICUTEUT	Alamin	1		Alama	Alarm in 49		
VISED DETECT	Enable			Typic	NO.		
ABROBALITY	Period Alarm Oct thew Meesinge	Setting Setting		Lanh	10	541.	
	Placed Charged						
	HTZ	Setting		Post Parcent	10		
	E fine						
	Enerstick						
	Video Marria	Reason		S top			
	Vana Pranama	None					
	Default				- 49	łi 👘	flack

<u>Step 1</u> Select Main Menu > ALARM > ALARM INPUT > Alarm Box. The Alarm Box interface is displayed. See Figure 5-112.

Figure 5-112

- <u>Step 2</u> In the **Alarm Box** list, select the alarm box number corresponding to the address number configured by the DIP switch on the Alarm Box.
- Step 3 In the Alarm In list, select the alarm input port on the Alarm Box.
- <u>Step 4</u> Configure the settings for other parameters of the Alarm Box. For details, see Table 5-35.
- <u>Step 5</u> Click **Apply** to complete the settings.

D NOTE

Click **Default** to restore the default setting.

5.10.2.3 Configuring Alarms from External IP Cameras

<u>Step 1</u> Select Main Menu > ALARM > ALARM INPUT > IPC Ext. The IPC Ext interface is displayed. See Figure 5-113.

alarm				ġ	101 A 14-10
ALARM INFO		rm Box Hit Kel	If COttee	HOCVE	Auren
ALARM INPLIT ALARM OUTFUT	Channell Enskie	•	Alarm Name Type	Alarm in 13 NO	
WEED DETECT	Period Alarm Out Show Message Piscont Channel	Setting Setting		5 10	BBC Nett
	artz Tree Drogobol	Setting	Post Record	10 0	5ei
	Video Malina	None -	S 10g		
	Default Cop	y Refresh		- Ki	flack

Figure 5-113

- Step 2 Configure the alarm input settings from the external IPC. For details, see Table 5-35.
- <u>Step 3</u> Click **Apply** to complete the settings.
 - D NOTE
 - Click Default to restore the default setting.
 - Click **Copy** to copy the settings to other channels.
 - Click **Refresh** to refresh configured settings.

5.10.2.4 Configuring Alarms for IP Camera Offline

You can configure the alarm settings for the situation when the IP camera is offline. <u>Step 1</u> Select Main Menu > ALARM > ALARM INPUT > IPC Offline. The IPC Offline interface is displayed. See Figure 5-114.

ALARM					1001 2 2+20
ALARM INFO		im Box IPC Ext	HC Other	HOCVI	Alarm
+ ALARM HPUT	Carnel	-13	-		
ALAMINACIUTECIT	Enable				
VICEO-DETECT					
ABROBINALTY	Alarm Out Show Messinge Vecent Channel	Setting R Anim Lipbond	Laten 12 Bend Ennel 12 CF TV (14 project)	10	les.
	4972	Setting	Post Record	10	Sec.
	1.100				
	Disgrafick				
	Video Marria	None	Sitog		
	Default Cos	4 I			ti Ilack

Figure 5-114

- Step 2 Configure the alarm input settings from the external IPC. For details, see Table 5-35.
- <u>Step 3</u> Click **Apply** to complete the settings.
 - D NOTE
 - Click **Default** to restore the default setting.
 - Click **Copy** to copy the settings to other channels.

5.10.2.5 Configuring Alarms from HDCVI Devices

Step 1 Select Main Menu > ALARM > ALARM INPUT > HDCVI Alarm.

The HDCVI Alarm interface is displayed. See Figure 5-115.

alarm				1	1041 1	14 B
ALARM INFO			495 Gel	IICOttee	HOCHIAIRE	
ALARM INPUT ALARM INPUT	Cani	A1				
VICED DETECT	t Emilie	Setting Status D	Channel 1 HDDVI	Type Vidinge Alerin - C	Nerve Int I HOCVI Volkge A	
					Sett	
						HALF.

Figure 5-115

 $\underline{Step \ 2} \quad \text{In the } \textbf{Channel list, select a channel or all.}$

Step 3 Click

The Setting interface is displayed. See Figure 5-116.

Setting				
Ассеня Туре	Camera Galeway	Access Point	Chri2-Airfly	
Туре	HDCVI Voltage Alarm	Name	Chn2 HDCVI Voltage A	
Period	Setting	PTZ	Setting	
Alami Out	Setting	Lakeh	10	Sec
Past Record	10	Sec Anti-Other	5	
Record CH				
Timapishot				
Tour				
Voice Prompts	None			
More Setting	Setting			
Default			OK.	Back

Figure 5-116

- <u>Step 4</u> Configure the settings for other parameters of the Alarm Box. For details, see Table 5-35.
- $\underline{Step 5} \quad Click \text{ } \textbf{OK} \text{ to complete the settings}.$

5.10.3 Alarm Output Settings

5.10.3.1 Configuring Alarm Output

When the Device activates alarms, the connected alarm device generates alarms in the way that you can configure in this section. You can connect to the output port of the Device or connect wirelessly.

- **Auto**: When an alarm event is triggered on the Device, the connected alarm device generates alarms.
- **Manual**: The alarm device is forced to keep generating alarms.
- **Stop**: The alarm output function is not enabled.
- Step 1 Select Main Menu > ALARM > ALARM OUTPUT > ALARM Out.

The ALARM OUTPU	T interface is displayed. See Figure 5-117.
AL ARM	

S Honor				
ALMIMINED	Alarm Out	Weile Light		
ADARATINITET	General Alarm			
ALAINE OUTPUT	Alaste Tapli Auto			
VIDEO DETRET	Manual Stop Datag Est. Alarm Alarm Dat Marm Type			
	Auro Marsut Stop Status			
	Alarts Rainana	OK.		
			Annte	Back

Figure 5-117

<u>Step 2</u>	Configure the	settings for	the alarm	output.	For details,	see Table 5-36.
---------------	---------------	--------------	-----------	---------	--------------	-----------------

Parameter		Description
General Alarm	Alarm Type	Select alarm type for each alarm output port.
General Alam	Status	Indicates the status of each alarm output port.
	Alarm Box	Select the alarm box number corresponding to the address
Ext. Alarm	Alanni bux	number configured by the DIP switch on the Alarm Box.
EXL AIAIIII	Alarm Type	Select the alarm type for each alarm output ports.
	Status	Indicates the status of each alarm output port.
Alarm Release		Click OK to clear all alarm output status.

Table 5-36

<u>Step 3</u> Click **Apply** to save the settings.

5.10.3.2 Configuring White Light

When the motion detection alarm is activated, the system links the camera to generate white light alarm.

NOTE To use this function, connect at least one white light camera to your Device. <u>Step 1</u> Select Main Menu > ALARM > ALARM OUTPUT > White Light.

The White Light interface is displayed. See Figure 5-118.

- 1	ALARM				1000 a 10+ 10
	ALAMMINED	Alarm Out Water	Light Sinn		
	ADAMONING	Channel	2		
1	ALAINE GUTPUT				
	VIDEO DETECT	Lands			
	AINORNALITY	Mode	Solid On Flat		
		Flash Frequency			
		Refresh			Apply Back
		- MALERSON		1	Control Control

Figure 5-118

Step 2 Configure the settings for the white light parameters. See Table 5-37.

Parameter	Description
Channel	In the Channel list, select a channel that is connected to a white
Channel	light camera.
	Set a length of time for the Device to delay turning off alarm after
Latch	the alarm is cancelled. The value ranges from 5 seconds to 30
	seconds, and the default value is 5 seconds.
Mode	Set the alarm mode of white light to be Solid on or Flash .
Electh Frequency	When setting the alarm mode of white light to be Flash , you can
Flash Frequency	select the flash frequency from Low, Middle, and High.

Table 5-37

<u>Step 3</u> Click **Apply** to complete the settings.

5.10.3.3 Configuring Siren

When the motion detection alarm is activated, the system links the camera to generate sound alarm.

```
D NOTE
```

To use this function, connect at least one camera that supports audio function.

```
Step 1 Select Main Menu > ALARM > ALARM OUTPUT > Siren.
```

```
The Siren interface is displayed. See Figure 5-119.
```

	ALARM						2.1	
	ALMININICI		WHIGH Light	Sillin				
	ADUBITINITET	Channel	2		Play			
()	ALARM OUTPUT							
	VIDEO RETRET	Lanih Audio Cip Volume Audio Cip Stog Upgrade File	30 Cip 1 High		Browse Start Upgrade			
		Refresh				univ	80	ck

Figure 5-119

<u>Step 2</u> Configure the settings for the siren parameters. See Table 5-38.

Parameter	Description
Channel	In the Channel list, select a channel that is connected to a camera
Channel	that supports audio function.
Play	Click Play to manually trigger
	Set a length of time for the Device to delay turning off alarm after
Latch	the alarm is cancelled. The value ranges from 5 seconds to 30
	seconds, and the default value is 5 seconds.
Audio Clip	Select the audio clip for the siren sound. The default setting is Clip
Audio Clip	1.
Volume	Select the volume for the audio clip. You can select the flash
volume	frequency from Low, Middle, and High.
	Import the upgrade audio file (.bin) to upgrade the alarm audio file
Update File	of the camera. For details, see "Upgrade Audio File of Camera
	."

<u>Step 3</u> Click **Apply** to complete the settings.

Upgrade Audio File of Camera

NOTE

This function is supported only on the local interface, and not supported on the web.

<u>Step 1</u> Prepare a USB device or other external storage device and plug it into the Device.

Step 2 Click Browse.

The **Browse** interface is displayed. See Figure 5-120.

Device Name	sdb5(USB USB)	- Refresh			
Total Space	15.62 GB				
Free Space	1431 GB				
Address					
Name		Size	Type	Delete	
m printf_251	\$5202053715.bd	1.0 105	tile		
E kmrg_prin	if_20180202093719kew	21.210			
iii pointf.txt		64t.0 KB			
R kning_prin	uf, tur	3.TKB			
printf_201	10202094124.txt	993.0			
in know man	f_36180202094124.txt	016	File		- 2

Figure 5-120

Step 3 Select the upgrade audio file (.bin).

Step 4 Click **OK** to return to the Siren interface.

Step 5 Click Start Upgrade to upgrade the alarm audio file of the camera.

5.10.4 Video Detection

Video detection adopts computer vision and image processing technology. The technology analyzes the video images to detect the obvious changes such as moving objects and blurriness. The system activates alarms when such changes are detected.

5.10.4.1 Configuring Motion Detect Settings

When the moving object appears and moves fast enough to reach the preset sensitivity value, the system activates the alarm.

To configure the motion detect settings, do the following:

<u>Step 1</u> Select Main Menu > ALARM > VIDIEO DETECT > Motion Detect. The Motion Detect interface is displayed. See Figure 5-121.

ALAIM					E.	LINE	2 34	
ALARMINED	Moson Detect	estim Tan	opering.	Gagninis				
ALMAN INFOT ALMAN COTTUE	Channel Enable MD			Region Enable PIR	Setting			
YIGEO DETECT	Period	Setting		Anti-Dither	s			
AINORMALITY	AlarmOut Shine Message Record Channel	Setting Alarm Upblad		Lanch Send Email	10			
	PTZ Tour Snapshot	Setting		Post Record	10			
	Buzzer			11 Log				
	Web Prumpts	None						
	White Ught	Siten						
	Default Co	iy I This			- Ain	¥.	Back	

Figure 5-121

<u>Step 2</u> Configure the settings for the motion detection parameters. See Table 5-39.

Parameter	Description			
Channel	In the Channel list, select a channel to set the motion detection.			
Region	Click Setting to define the motion detection region.			
Enable MD	Enable or disable the motion detection function.			
Enable PIR	 PIR function helps enhancing the accuracy and validity of motion detect. It can filter the meaningless alarms that are activated by the objects such as falling leaves, flies. The detection range by PIR is smaller than the field angle. PIR function is enabled by default if it is supported by the cameras. Enabling PIR function will get the motion detect to be enabled automatically to generate motion detection alarms; if the PIR function is not enabled, the motion detect just has the general effect. NOTE Only when the channel type is CVI, the PIR function can be enabled. If the camera does not support PIR function, it will be unusable. If the Device does not support PIR function, it will not be displayed on the interface. 			
Period	Define a period during which the motion detection is active.			
Anti-Dither	Configure the event detection lasting time. The system records only one event during this period.			

Parameter	Description
	Click Setting to display setting interface.
	General Alarm: Enable alarm activation through the alarm
	devices connected to the selected output port.
Alarm Out	• External Alarm: Enable alarm activation through the
	connected alarm box.
	Wireless Siren: Enable alarm activation through devices
	connected by USB gateway or camera gateway.
	Set a length of time for the Device to delay turning off alarm after
Latab	the external alarm is cancelled. The value ranges from 0 seconds
Latch	to 300 seconds, and the default value is 10 seconds. If you enter 0,
	there will be no delay.
Show Maaaaaa	Select the Show Message check box to enable a pop-up message
Show Message	in your local host PC.
	Select the Alarm Upload check box to enable the system to
Alarm Upload	upload the alarm signal to the network (including alarm center)
	when an alarm event occurs.
	Select the Send Email check box to enable the system to send an
	email notification when an alarm event occurs.
Send Email	D NOTE
	To use this function, make sure the email function is enabled in
	Main Menu > NETWORK > EMAIL.
	Select the channel(s) that you want to record. The selected
	channel(s) starts recording after an alarm event occurs.
Record Channel	NOTE NOTE
	The recording for motion detection and auto recording function
	must be enabled. For details, see "5.1.4.9 Configuring Recorded
	Video Storage Schedule" and "5.9.1 Enabling Record Control."
	Click Setting to display the PTZ interface.
	Enable PTZ activation function. For each PTZ camera, select the
PTZ	preset that you want to be called when an alarm event occurs.
	NOTE NOTE
	Motion Detect can only activate PTZ preset.
	Set a length of time for the Device to delay turning off recording
Post Record	after the alarm is cancelled. The value ranges from 10 seconds to
	300 seconds, and the default value is 10 seconds.
Tour	Select the Tour check box to enable a tour of the selected
IOUI	channels.
	Select the Snapshot check box to take a snapshot of the selected
	channel.
Snapshot	NOTE NOTE
	To use this function, select Main Menu > CAMERA > ENCODE >
	Snapshot, in the Mode list, select Event.

Parameter	Description
	Select the check box to enable the function. When an alarm event
	occurs, the video output port outputs the settings configured in
Video Matrix	Main Menu > DISPLAY > TOUR.
	NOTE NOTE
	Not all models support this function.
Buzzer	Select the check box to activate a buzzer noise at the Device.
	Select the check box to enable the Device to record a local alarm
Log	log.
Voice Dremate	Select to enable audio broadcast/voice prompts in response to a
Voice Prompts	motion detection event.
White Light	Select the check box to enable the white light alarm of the camera.
Siren	Select the check box to enable the sound alarm of the camera.

<u>Step 3</u> Click **Apply** to save the settings.

D NOTE

- Click **Default** to restore the default setting.
- Click **Copy**, in the **Copy** dialog box, select the additional channel(s) that you want to copy the motion detection settings to, and then click **Apply**.
- Click **Test** to test the settings.

Setting the Motion Detection Region

<u>Step 1</u> Next to **Region**, click **Setting**.

The region setting screen is displayed.

- <u>Step 2</u> Point to the middle top of the interface.
 - The setting interface is displayed. See Figure 5-122.

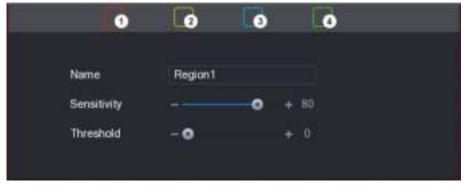


Figure 5-122

<u>Step 3</u> Configure the regions settings. You can configure totally four regions.

- 1) Select one region, for example, click 0.
- Drag on the screen to select the region that you want to detect. The selected area shows the color that represents the region.
- 3) Configure the parameters.

Parameter	Description		
Name	Enter a name for the region.		
Sensitivity	Every region of every channel has an individual sensitivity value.		
	The bigger the value is, the easier the alarms can be activated.		

Parameter	Description
Threshold	Adjust the threshold for motion detect. Every region of every channel
	has an individual threshold.

Figure 5-123

D NOTE

When anyone of the four regions activates motion detect alarm, the channel where this region belongs to will activate motion detect alarm.

- <u>Step 4</u> Right-click on the screen to exit the region setting interface.
- <u>Step 5</u> On the **Motion Detect** interface, click **Apply** to complete the settings.

Setting Motion Detection Period

📖 NOTE

The system only activates the alarm in the defined period.

<u>Step 1</u> Next to **Period**, click **Setting**.

The Setting interface is displayed. See Figure 5-124.



Figure 5-124

<u>Step 2</u> Define the motion detection period. By default, it is active all the time.

- Define the period by drawing.
 - Oefine for a specified day of a week: On the timeline, click the half-hour blocks to select the active period.
 - ♦ Define for several days of a week: Click 🛄 before each day, the icon

switches to E. On the timeline of any selected day, click the half-hour blocks

to select the active periods, all the days with 📟 will take the same settings.

♦ Define for all days of a week: Click **All**, all 🛄 switches to 📟. On the

timeline of any day, click the half-hour blocks to select the active periods, all the days will take the same settings.

• Define the period by editing. Take Sunday as an example.



The **Period** interface is displayed. See Figure 5-125.

Perind	
Current Date:	Buttiny
Percet 1	10 00 - 24 00
Period 2	.00:00 . 24:00
Firlot1	00.00 - 24:00
Print 4	00.00 - 24.00
Feetant5	00 00 - 24 00
Period 8	00-00 - 24:00
Copy	
An Sunday	🗇 Monday 🔄 Tuenday 🔄 Windrebalay 🖃 Thursday 📄 Tilday 📄 Salurday
	liek liek

Figure 5-125

- 2) Enter the time frame for the period and select the check box to enable the settings.
 - \diamond There are six periods for you to set for each day.
 - ♦ Under Copy, select All to apply the settings to all the days of a week, or select specific day(s) that you want to apply the settings to.
- 3) Click **OK** to save the settings.

<u>Step 3</u> On the **Motion Detect** interface, click **Apply** to complete the settings.

5.10.4.2 Configuring Video Loss Settings

When the video loss occurs, the system activates the alarm. To configure the motion detect settings, do the following:

Step 1 Select Main Menu > ALARM > VIDIEO DETECT > Video Loss.

The Video Loss interface is displayed. See Figure 5-126.

alarm					LINE	4.3	44 B
ALARM INFO	Motion Detect	60 Long	Degroein				
ALAVM INPUT	Carni						
ALMIM CUTFUT	Englin						
 Wate detect 							
ARROBALITY	Feriod	Setting	CAMANEDIME		Bex.		
	Alarm Out Show Message	Setting	Continue.	10	Sec.		
	Record Channel						
	172	Setting .	Posi Record	10	Sec.		
	LE TRUE						
	Elizability						
	Bisser	16 Mag					
	Visite Prorque	None					
	Default Cop	4			ŧ.	11e	celo:

Figure 5-126

<u>Step 2</u> To configure the settings for the video loss detection parameters, see "5.10.4.1 Configuring Motion Detect Settings."

D NOTE

For PTZ activation, different from motion detection, the video loss detection can activate PTZ preset, tour, and pattern.

<u>Step 3</u> Click **Apply** to complete the settings.

D NOTE

- Click **Default** to restore the default setting.
- Click **Copy**, in the **Copy** dialog box, select the additional channel(s) that you want to copy the motion detection settings to, and then click **Apply**.

5.10.4.3 Configuring Tampering Settings

When the camera lens is covered, or the video is displayed in a single color because of the causes such as sunlight status, the monitoring cannot be continued normally. To avoid such situations, you can configure the tampering alarm settings.

<u>Step 1</u> Select Main Menu > ALARM > VIDIEO DETECT > Tampering.

The Tampering interface is displayed. See Figure 5-127.

ALARM					ini .	1 (Fr 18
ALARMENTO	Motion Detect. Via	io Loin 📘 🖬 Tangan	Disgnosis			
ALAVMENPUT	Carnel	3				
ALARM OUTFUT	Enables			ä		
 VIDED DETECT 			and a subsection			
ABROBALITY	Period Alarm Out	Setting -	CAM AnaDather	0	Sec. Sec.	
	Show Message	Sel Alarm Lipitoni	Cont final	1785		
	Record Orannel					
	4172	Setting .	Post Record	10	Sec.	
	Li Terr					
	Dissection .					
	Buckley	PE Log				
	Viven Prorgan	None				
	Default Cop	¥		- - - - -	etv 👘	flock

Figure 5-127

<u>Step 2</u> To configure the settings for the tampering detection parameters, see "5.10.4.1 Configuring Motion Detect Settings."

D NOTE

For PTZ activation, different from motion detection, the video loss detection can activate PTZ preset, tour, and pattern.

<u>Step 3</u> Click **Apply** to complete the settings.

D NOTE

- Click **Default** to restore the default setting.
- Click **Copy**, in the **Copy** dialog box, select the additional channel(s) that you want to copy the motion detection settings to, and then click **Apply**.

5.10.4.4 Configuring Diagnosis Settings

D NOTE

This function can be used only when it is supported by the camera.

When the video appear the conditions such as blurry, overexposed, or the color changes, the system activates the alarm.

To configure the diagnosis settings, do the following:

<u>Step 1</u> Select Main Menu > ALARM > VIDIEO DETECT > Diagnosis.

The **Diagnosis** interface is displayed. See Figure 5-128.

 ALARM					106	A 191 M	
ALARMINEO	Motion Detext. Vial	o Lois Tampeng	Dagrosis				
AGAVANTHAPATE	Clanet						
ALMINIQUIEUT	Enable		Parie .	Setting			
VIDEO DETECT							
ARRORMALITY.	Period	Setting	Laten				
	Alarm Out Show Message	Setting -	Sent final	10	Sec.		
	Name	2 Lig	Contraction of the				
	Voice Promptie	None					
	Default			_		flack	
	Contractific .				elv .	HINCK	

Figure 5-128

- <u>Step 2</u> To configure the settings for the diagnosis parameters, see "5.10.4.1 Configuring Motion Detect Settings."
- <u>Step 3</u> Click **Apply** to complete the settings.

D NOTE

Click Default to restore the default setting.

Setting the Types for Diagnosing Targets

<u>Step 1</u> Next to **Rule**, click **Setting**.

The **Diagnosis** interface is displayed. See Figure 5-129.

Diagnosis		
Stripe	□ -=•	+ 30
Noise	□•	+ 30
Color Cast	0	+ 30
Out of Focus	E•	+ 30
Overexposure	Ei•	+ 30
	Apply	Back

Figure 5-129

<u>Step 2</u> Select the items that you want to diagnose and set the threshold (30 by default). See Table 5-40.

Parameter	Description
	A horizontal, vertical or diagonal stripe that might appear in the
Stripe	video because of device aging or electronic interruption. Such
	stripe brings visual interruption.
Noise	Video noises such as blurriness or quality reduction that is caused
NOISE	by optical distortion or device problem during camera shooting.
Color Cast	Variances in the normal proportions of RGB colors.
	Blurry video is caused during camera shooting, transferring and
Out of Focus	processing. Such condition is a common image quality reduction
	problem and defined as out of focus.
	The video brightness refers to the intensity of image pixel. The
Overexpecture	range is between 0 (the darkest black) and 255 (the brightest
Overexposure	white). If the brightness exceeds the threshold, the image is over
	exposed.
	The range is from 1 through 100. If the value after diagnosing is
Threshold	higher than what you set, the system activates the alarm to the
	corresponding diagnosing types such as stripe.

<u>Step 3</u> Click **Apply** to save the settings. The system returns to the **Diagnosis** interface.

<u>Step 4</u> Click **Apply** to complete the settings.

D NOTE

Click Default to restore the default setting.

5.10.5 System Events

You can configure the alarm output for three types of system event (HDD, Network, and User). When there is an abnormal system event occurs, the system activates alarms in the way that you configure in this section.

5.10.5.1 Configuring HDD Event Settings

Step 1 Select Main Menu > ALARM > ABNORMITY > HDD.

The HDD interface is displayed. See Figure 5-130.

alarm						ine i	A 191 H
ALARM INFO	100	HTWOR.					
ADAMMINIST	Event Type	No HDD					
AGARMICUTEUT	Enable						
VIED-DETECT							
+ ABNORMALITY	Alarm Out	Setting-		Laten	10		
Ĩ	Show Menage	Ri Alarm Lato	2	D Sent Enel	1.18	Sec.	
	2 Mare	 Usg 		Contraction of the			
	Voice Promptie	None					
							flack
					10	Seli	1100.0

Figure 5-130

Ctop 7	Configura the	a atting a far th	a LIDD avant	Coo Toble E 11
Sleb Z	Connoure me	seminos ior in	e ndd eveni.	See Table 5-41.
0.00		••••••••••••••••••••••••••••••••••••••	• • • • • • • • • • •	

Parameter	Description			
Event Type	In the Event Type list, select No HDD, HDD Error, or HDD No Space			
	as the event type.			
Enable	Enable or disable the HDD event detection function.			
	Click Setting to display setting interface.			
	General Alarm: Enable alarm activation through the alarm devices			
	connected to the selected output port.			
Alarm Out	External Alarm: Enable alarm activation through the connected			
	alarm box.			
	Wireless Siren: Enable alarm activation through devices			
	connected by USB gateway or camera gateway.			
	Set a length of time for the Device to delay turning off alarm after the			
Latch	external alarm is cancelled. The value ranges from 10 seconds to 300			
	seconds, and the default value is 10 seconds.			
Show Mossago	Select the Show Message check box to enable a pop-up message in			
Show Message	your local host PC.			
	Select the Alarm Upload check box to enable the system to upload the			
Alarm Upload	alarm signal to the network (including alarm center) when an alarm			
	event occurs.			

Parameter	Description					
	Select the Send Email check box to enable the system to send an					
	email notification when an alarm event occurs.					
Send Email	D NOTE					
	To use this function, make sure the email function is enabled in Main					
	Menu > NETWORK > EMAIL.					
Buzzer	Select the check box to activate a buzzer noise at the Device.					
Log	Select the check box to enable the Device to record a local alarm log.					
Vaiga Dramata	Select to enable audio broadcast/voice prompts in response to a HDD					
Voice Prompts	alarm event.					

<u>Step 3</u> Click **Apply** to complete the settings.

5.10.5.2 Configuring Network Event Settings

<u>Step 1</u> Select Main Menu > ALARM > ABNORMITY > Network.

The Network interface is displayed. See Figure 5-131.

ALARM	7				tine .	a. 19 - 10 -
ALA/IMTINFO	Nido 🚺	entroin. Diese				
ALAAM (MANT) ALAAM (QUTEU) WORD DETECT	Event Type Enable	Net Disconnection				
 ADBORMAGITY 	Alarm Out	Setting	Laten	10	Sec.	
	Show Message		in the constant of the constan			
		Riter	Post Record	10	Sec.	
	vaca Pronate	None :				
					Kelly 👘	Tlick

Figure 5-131

Step 2	Configure	the settings	for the N	letwork	event.	See	Table 5-42.

Parameter	Description
Event Type	In the Event Type list, select Net Disconnection, IP Conflicted, or
	MAC Conflicted as the event type.
Enable	Enable or disable the Network event detection function.

Parameter	Description				
	Click Setting to display setting interface.				
	General Alarm: Enable alarm activation through the alarm devices				
	connected to the selected output port.				
Alarm Out	External Alarm: Enable alarm activation through the connected				
	alarm box.				
	Wireless Siren: Enable alarm activation through devices				
	connected by USB gateway or camera gateway.				
	Set a length of time for the Device to delay turning off alarm after the				
Latch	external alarm is cancelled. The value ranges from 10 seconds to 300				
	seconds, and the default value is 10 seconds.				
Show Message	Select the Show Message check box to enable a pop-up message in				
Show wessage	your local host PC.				
	Select the Send Email check box to enable the system to send an				
	email notification when an alarm event occurs.				
Send Email	III NOTE				
	To use this function, make sure the email function is enabled in Main				
	Menu > NETWORK > EMAIL.				
Buzzer	Select the check box to activate a buzzer noise at the Device.				
Log	Select the check box to enable the Device to record a local alarm log.				
Voice Promote	Select to enable audio broadcast/voice prompts in response to a				
Voice Prompts	network alarm event.				

<u>Step 3</u> Click **Apply** to complete the settings.

5.10.5.3 Configuring User Event Settings

Step 1 Select Main Menu > ALARM > ABNORMITY > User.

The $\ensuremath{\textbf{User}}$ interface is displayed. See Figure 5-132.

alarim						LINE	2.94	8
ALA/M INFO	Nicio 👘	Nebiliti 📃	lar:					
ACAVIMINIPUT	Event Type	Hegal Login		Altemptos				
AGMINICUEFUT	Enable			Look Timer	5	Min		
VIDEO DETECT								
+ ADHORMALITY	Alarm Out	Setting -		Latet	10	Sec.		
	Uuzze	<u>e</u> tte		D.Smillinet				
	View Ptompto	None						
						Setti 👘	flack	

Figure 5-132

010			11	0 T.L. E 40
Step 2	Configure the	settings for the	User event.	See Table 5-43.

Parameter	Description				
Event Type	In the Event Type list, select Illegal Login.				
	Enable the user error detection function.				
Enable	If you do not enable this function, there will be no limit for wrong				
	password entry and the account cannot be locked because of the				
	wrong password.				
Attempt(s)	Set the maximum number of allowable wrong password entries. The				
Allempi(S)	account will be locked after your entries exceed the maximum number.				
Lock Time	Set how long the account is locked for. The value ranges from 1 minute				
LOCK TIME	to 60 minutes.				
	Click Setting to display setting interface.				
	General Alarm: Enable alarm activation through the alarm devices				
	connected to the selected output port.				
Alarm Out	External Alarm: Enable alarm activation through the connected				
	alarm box.				
	Wireless Siren: Enable alarm activation through devices				
	connected by USB gateway or camera gateway.				
	Set a length of time for the Device to delay turning off alarm after the				
Latch	external alarm is cancelled. The value ranges from 10 seconds to 300				
	seconds, and the default value is 10 seconds.				

Parameter	Description
	Select the Send Email check box to enable the system to send an
	email notification when an alarm event occurs.
Send Email	D NOTE
	To use this function, make sure the email function is enabled in Main
	Menu > NETWORK > EMAIL.
Buzzer	Select the check box to activate a buzzer noise at the Device.
Log	Select the check box to enable the Device to record a local alarm log.
Vaice Dramate	Select to enable audio broadcast/voice prompts in response to a user
Voice Prompts	account alarm event.

Step 3 Click Apply to complete the settings.

5.11 Configuring IVS Function

The IVS function processes and analyzes the images to extract the key information to match with the preset rules. When the detected behaviors match with the rules, the system activates alarms.

```
D NOTE
```

The IVS function and face detection function cannot be enabled at the same time.

5.11.1 Configuring Intelligent Settings

You can configure the intelligent settings for both analog cameras and IP cameras.

D NOTE

- Not all models support this function.
- Please disable the expanded IP channels first before using this function for analog cameras.
- <u>Step 1</u> Select Main Menu > IVS > INTELL SETTING.

The INTELL SETTING interface is displayed. See Figure 5-133.

<u>@</u> hs						100	a (6) (8)
SMART SEARCH	Charinet	1					
+ INTELLISETTING							
	0 Enable	Name	Туре	Draw	Trigger	Deleter	-
						entre L	Back

Figure 5-133

- <u>Step 2</u> In the **Channel** list, select the channel number that you want to configure the IVS function.
- Step 3 Click Add.

One line of rule is displayed. See Figure 5-134.

Q 115						1041 1	194 B
SMART SEARCH	Charatet	1					
• OUTELL SETTING							
	1: En	able Name	Type	Draw	Trigger	Delete	
		Pulei	Tripwire		0		
							-n1
	4.5						
						Adi	5711
2							
						week .	Back

Figure 5-134

- <u>Step 4</u> Configure the parameters for the rule that you selected.
- <u>Step 5</u> Select the check box of the rule to enable it.
- <u>Step 6</u> Click **Apply** to complete the settings.

5.11.1.1 Configuring Tripwire Rules

When the target object crosses the tripwire in the defined direction, the system activates alarms.

- The tripwire can be configured as a straight line or broken line.
- Supports detecting one-way or two-way tripwire crossing.
- Supports multiple tripwires in the same scenario to meet the complexity.
- Supports size filtering for target.

<u>Step 1</u> On the rule line that you added, in the **Type** list, select **Tripwire**. See Figure 5-135.

A INS		i.				ine	a (4) (8)
* INTELLISETTING	Channel	1					
	1 Enable	Name Bule1	Type Tripwire	Draw	Trigger O	Delete	2
						undv 💼	Back

Figure 5-135

Step 2 Draw a tripwire.

- 1) In the **Channel** list, select the channel that you want to configure the rules for.
- 2) Click .

The monitoring screen to configure the tripwire rules is displayed. See Figure 5-136 for analog camera and the IP camera without preset, and see Figure 5-137 for IP camera with preset.



Figure 5-136



Figure 5-137

3)	Configure the settings	for the parameters o	f drawing rules. See	Table 5-44.
----	------------------------	----------------------	----------------------	-------------

Parameter	Description	
Name Enter the customized rule name.		
Direction	Set the direction of the tripwire. You can choose A to B (left to	
Direction	right), B to A (right to left), and Both .	

Parameter	Description	
Filtering Target	Click to draw areas to filter the target. NOTE You can configure two filtering targets (maximum size and minimum size). When the target that is crossing the tripwire is smaller than the minimum size or larger than the maximum size, no alarms will be activated. The maximum size should be larger than	
	the minimum size. In the Preset list, select the preset that you want to configure the	
Preset	rule for.	

- 4) Drag to draw a tripwire. The tripwire can be a straight line, broken line or polygon.
- 5) Click **OK** to save the settings.
- Step 3 Click to set the actions to be triggered.

The **Trigger** interface is displayed. See Figure 5-138.

Trigger				
Period	Setting			
Alarm Dut.	Setting	Latth	10	
Show Message	Rarm Upload	C Send Email		
Record Channel				
1/12	Setting	Post Record	10	
Teur				
Snapshot				
C Borner		IB Log		
23 Voice Prompts.	None			
			00	Back

Figure 5-138

Step 4 Configure the triggering parameters. See Table 5-45.

Parameter	Description	
	Click Setting to display set interface.	
Period	Define a period during which the alarm linkage is active. For	
Penou	details, see "Setting Motion Detection Period" section in "5.10.4.1	
	Configuring Motion Detect Settings."	

Parameter	Description
	Click Setting to display setting interface.
	General Alarm: Enable alarm activation through the alarm
	devices connected to the selected output port.
Alarm Out	External Alarm: Enable alarm activation through the
	connected alarm box.
	Wireless Siren: Enable alarm activation through devices
	connected by USB gateway or camera gateway.
	Set a length of time for the Device to delay turning off alarm after
Latch	the external alarm is cancelled. The value ranges from 0 seconds
	to 300 seconds, and the default value is 10 seconds.
Show Magaza	Select the Show Message check box to enable a pop-up message
Show Message	in your local host PC.
	Select the Alarm Upload check box to enable the system to
Alarm Upload	upload the alarm signal to the network (including alarm center)
	when an alarm event occurs.
	Select the Send Email check box to enable the system to send an
	email notification when an alarm event occurs.
Send Email	D NOTE
	To use this function, make sure the email function is enabled in
	Main Menu > NETWORK > EMAIL.
	Select the channel(s) that you want to record. The selected
	channel(s) starts recording after an alarm event occurs.
Record Channel	NOTE NOTE
Record Channel	The recording for intelligence event and auto recording function
	must be enabled. For details, see "5.1.4.9 Configuring Recorded
	Video Storage Schedule" and "5.9.1 Enabling Record Control."
	Click Setting to display the PTZ interface.
PTZ	Enable PTZ activation function. For each PTZ camera, select the
	preset that you want to be called when an alarm event occurs.
	Set a length of time for the Device to delay turning off recording
Post Record	after the alarm is cancelled. The value ranges from 10 seconds to
	300 seconds.
Tour	Select the Tour check box and the channels to enable a tour of the
Tour	selected channels when an alarm event occurs.
	Select the Snapshot check box to take a snapshot of the selected
	channel when an alarm event occurs.
Snapshot	D NOTE
	To use this function, select Main Menu > CAMERA > ENCODE >
	Snapshot, in the Mode list, select Event.
	Select the check box to enable the function. When an alarm event
	occurs, the video output port outputs the settings configured in
Video Matrix	"Main Menu > Display > Tour."
	D NOTE
	Not all models support this function.
	Not all models support this function.

Parameter	Description
Buzzer	Select the check box to activate a buzzer noise at the Device when
Duzzei	an alarm event occurs.
Log	Select the check box to enable the Device to record a local alarm
Log	log when an alarm event occurs.
Voice Promote	Select the check box to enable audio broadcast in response to an
Voice Prompts	alarm event.
	— • • — • —

Table 5-45

<u>Step 5</u> Click **OK** to save the settings.

The INTELL SETTING interface is displayed.

Step 6 Select the **Enable** check box, and then click **Apply**.

The tripwire detecting function is active. When the target object crosses the tripwire in the defined direction, the system activates alarms.

5.11.1.2 Configuring Intrusion Rules

When the target enters and leaves the defined area, or the target appears in the defined area, the system activates alarms.

- You can define the shape and quantity of intrusion areas.
- Supports detecting the behaviors that enter and leave the intrusion areas.
- Supports detecting the behaviors that are moving in the intrusion areas. The quantity of areas and lasting time can be configured.
- Supports size filtering for target.

<u>Step 1</u> On the rule line that you added, in the **Type** list, select **Intrusion**. See Figure 5-139.

<u>@</u> tris						ind a	94.00
SMART SEARCH	Channel	1					
+ INTELL SETTING							
	2 Enable	Name	Type	Draw	Trigger	Delete -	
	- Linear	Pulei	Tripwire S	1	0	8	
			Intrusion		9		
						10	1 ////
1						Annia	Back

Figure 5-139

Step 2 Draw an area.

- 1) In the **Channel** list, select the channel that you want to configure the rules for.
- 2) Click

The monitoring screen to configure the intrusion rules is displayed. See Figure 5-140 for analog camera and the IP camera without preset, and see Figure 5-141 for IP camera with preset.



Figure 5-140



Figure 5-141

Parameter	Description					
Name	Enter the customized rule name.					
Action	Configure the actions that are defined as intrusion. You can select					
ACTION	the Appear check box and the Cross check box.					
Direction	In the Direction list, select the direction of crossing the configured					
Direction	area. You can select Enter&Exit, Enters, and Exits.					
Filtering Target	Click to draw areas to filter the target. NOTE You can configure two filtering targets (maximum size and minimum size). When the target that is crossing the tripwire is smaller than the minimum size or larger than the maximum size, no alarms will be activated. The maximum size should be larger than the minimum size.					
Preset	In the Preset list, select the preset that you want to configure the rule for.					

3) Configure the settings for the parameters of drawing rules. See Table 5-46.

Table 5-46

- 4) Drag to draw an area.
- 5) Click **OK** to save the settings.
- Step 3 Click to set the actions to be triggered. For details, see "5.11.1.1 Configuring Tripwire Rules."
- Step 4 Select the Enable check box, and then click Apply.

The intrusion detecting function is active. When the target enters and leaves the area, or the target appears in the defined area, the system activates alarms.

5.11.1.3 Configuring Abandoned Rules

When the object is placed in the defined detection area for more than the set time, the system activates alarms.

- You can define the shape and quantity of detecting areas.
- Period value can be configured.
- Supports size filtering for target.

<u>Step 1</u> On the rule line that you added, in the **Type** list, select **Abandoned**.

The Abandoned interface is displayed. See Figure 5-142.

SHART SEARCH Channel 1 • INTELL SETTING 3 1 3 Enable Name Type Draw Digger Delete F 1 Build Intrusion 2 Build B B B 1 Build Intrusion 2 B B B B B 2 Build B
inviteLL SETTING 3 Enable Name Type Draw Trigger Delete F 1 Pulet Tripwire A D B 2 Rulet Intrusion A D B
1 Rulez Tripwine - / D B 2 Rulez Intrusion - / D B
2 Rulid Intrusion 🗸 🖌 🖬 👘
Add
Auphy Back

Figure 5-142

Step 2 Draw an area.

1) In the **Channel** list, select the channel that you want to configure the rules for.



The monitoring screen to configure the abandoned rules is displayed. See Figure 5-143 for analog camera and see Figure 5-144 for IP camera.

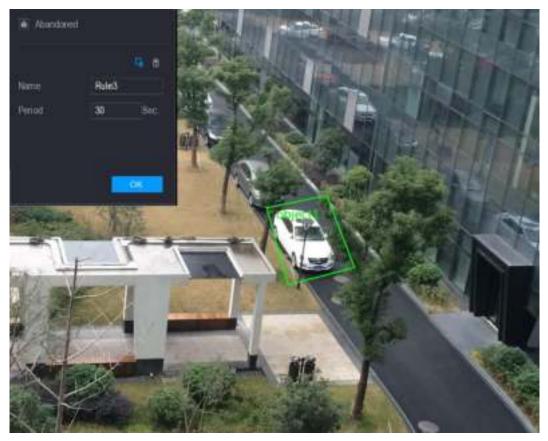


Figure 5-143

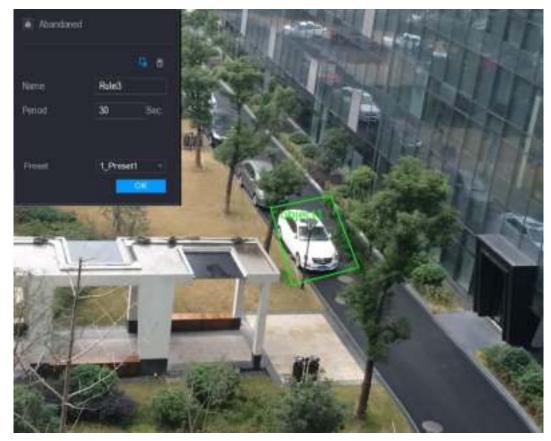


Figure 5-144

3) Configure the settings for the parameters of drawing rules. See Table 5-47.

Parameter

Description

Parameter	Description					
Name	Enter the customized rule name.					
Period	Configure the minimum time period for activating alarms by					
Period	detecting the abandoned objects.					
Filtering Target	Click to draw areas to filter the target. NOTE You can configure two filtering targets (maximum size and minimum size). When the target that is crossing the tripwire is smaller than the minimum size or larger than the maximum size, no alarms will be activated. The maximum size should be larger than the minimum size.					
Preset	In the Preset list, select the preset that you want to configure the					
110000	rule for.					

Table 5-47

- 4) Drag to draw an area.
- 5) Click **OK** to save the settings.
- Step 3 Click to set the actions to be triggered. For details, see "5.11.1.1 Configuring Tripwire Rules."
- <u>Step 4</u> Select the **Enable** check box, and then click **Apply**.

The abandoned object detecting function is active. When the object is placed in the defined detection area for more than the set time, the system activates alarms.

5.11.1.4 Configuring Missing Rules

When the target is taken away from the defined area exceeds the set time, the system activates alarms.

<u>Step 1</u> On the rule line that you added, in the **Type** list, select **Missing**.

The Missing interface is displayed. See Figure 5-145.

<u>,</u> @_№	_							[194] _=	94 B
	Channe		1						
+ INTELL SETTING	Channe								
	1141	Enable	Name	Type		Draw	Trigger	Deleter	
			Pulei	Tripwire			0		
			Bulez						
				Abandoned			é.		
	100		Hutel	Hising	1	1	0		
								44	
								Ada	

Figure 5-145

Step 2 Draw an area.

- 1) In the **Channel** list, select the channel that you want to configure the rules for.
- 2) Click

The monitoring screen to configure the missing rules is displayed. See Figure 5-146 for analog camera and the IP camera without preset, and see Figure 5-147 for IP camera with preset.

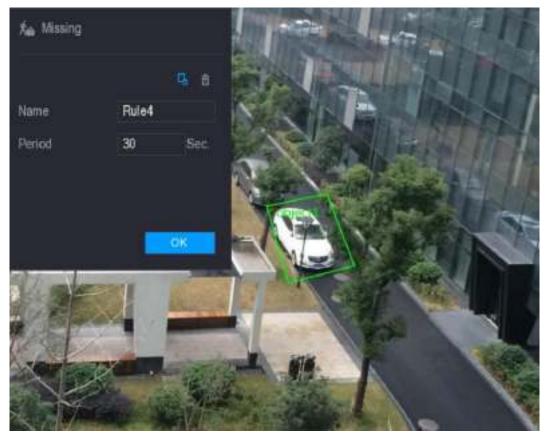


Figure 5-146

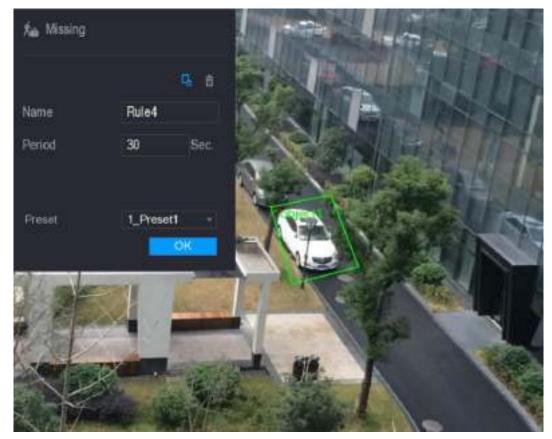


Figure 5-147

3) Configure the settings for the parameters of drawing rules. See Table 5-48.

Parameter Description

Parameter	Description					
Name	Enter the customized rule name.					
Period	Configure the minimum time period for activating alarms by					
Period	detecting the missing objects.					
Filtering Target	Click to draw areas to filter the target. NOTE You can configure two filtering targets (maximum size and minimum size). When the target that is crossing the tripwire is smaller than the minimum size or larger than the maximum size, no alarms will be activated. The maximum size should be larger than the minimum size.					
Preset	In the Preset list, select the preset that you want to configure the					
110000	rule for.					

Table 5-48

- 4) Drag to draw an area.
- 5) Click **OK** to save the settings.
- Step 3 Click to set the actions to be triggered. For details, see "5.11.1.1 Configuring Tripwire Rules."
- Step 4Select the Enable check box, and then click Apply.The missing object detecting function is active. When the target is taken away from the
defined area exceeds the set time, the system activates alarms.

5.11.2 Enabling the Intelligent Settings for IP Camera

📖 NOTE

- Not all IP cameras support this function.
- The interface might be different depending on the connected IP camera.

After configuring the intelligent settings for IP cameras (refer to "5.11.1 Configuring Intelligent Settings"), you still need to enable to apply the configurations. For example, you have configured the intelligent settings for IP camera as displayed in Figure 5-148, and then click **Apply** to save the settings.

D MS							1000	4.94.8
· WITELL SETTING	Owned		•					
MARTESAN								
	25	Type		Draw	Trigger	Defete	Freset	
		Trowne		4	0			
		Intrusion			8			
								Add
	Refresh						All	flack
	Hadronen						- 2410	1100.0

Figure 5-148

Step 1 Click SMART PLAN.

The **SMART PLAN** interface is displayed.

- <u>Step 2</u> In the **Channel** list, select the IP camera channel that you have configured the intelligent settings.
 - For the IP camera with preset, see Figure 5-149.

<u>@</u> 1/5				iii.	6 B	1 194 III -
INTELL SETTING	Charles 8	- Disset	Presett		A	-
 SMARTPLAN 	N. N.	- contradict -	- Communication		-	
	0 Prevet		Delete			
	(Petrick)			Apply	- j.	flack

Figure 5-149

• For the IP camera without preset, see Figure 5-150.

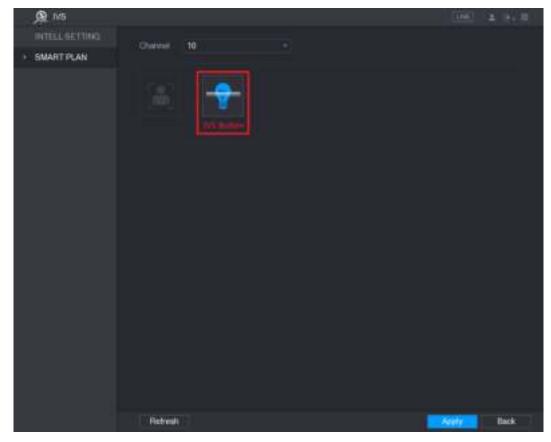


Figure 5-150

Step 3 Enable the IVS function.

- For the IP camera with preset, do the following:
- 1) In the **Preset** list, select **1_Preset1**.

📖 NOTE

All the presets that the IP camera has are displayed in the **Preset** list, and you just need to select the preset that you have configured the intelligent settings as shown in Figure 5-148.

2) Click Add.

The selected preset is displayed in the table and the IVS button and Face Detect button are displayed. See Figure 5-151.

<u>@</u> 145				141 E 9+ 10
INTELL SETTING	Charter 6	- Deser Open	ito al	Add
 BMARTPLAN 		Contract Contract		(
	t Prevet	Delete		
	🛨 🖾			
1				
	Refront			y Back

Figure 5-151

- 3) Select the line of **1_Preset1**.
- 4) Click IVS button to enable the intelligent settings to preset 1. The buttons is displayed in blue.
- 5) Click **Apply** to complete the settings.
- For the IP camera without preset, click the IVS button and then click **Apply** to complete the settings.

5.11.3 Using Smart Search

You can search for the intelligent events and display in graph or list.

<u>Step 1</u> Select Main Menu > IVS > SMART SEARCH.

The **SMART SEARCH** interface is displayed. See Figure 5-152.

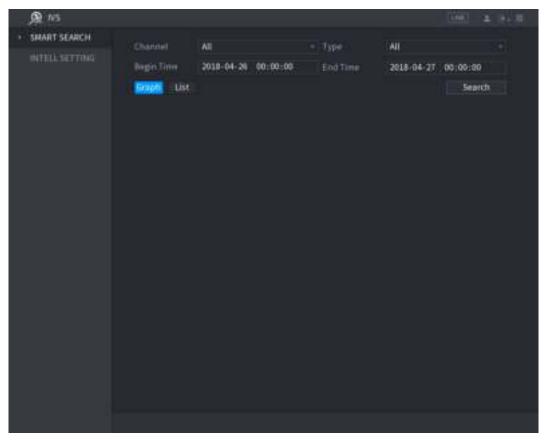


Figure 5-152

- <u>Step 2</u> In the **Channel** list, select the channel that you want to search for the events.
- <u>Step 3</u> In the **Type** list, select the event type that you want to search.
- <u>Step 4</u> In the **Begin Time** box and **End Time** box, enter the date and time.
- <u>Step 5</u> Select the display mode of the search results by clicking **Graph** or **List**.
- Step 6 Click Search.

The results that satisfy the searching conditions are displayed. See Figure 5-153 and Figure 5-154.

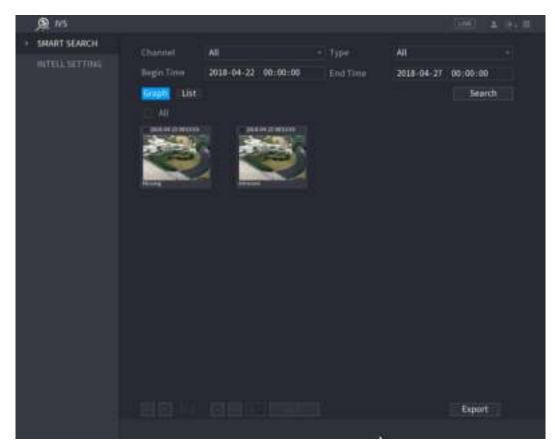


Figure 5-153



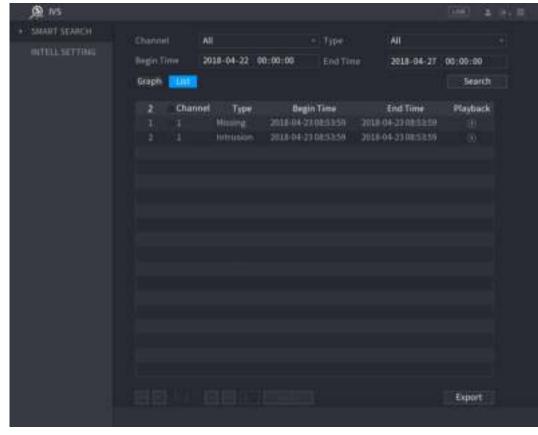


Figure 5-154



The video playback interface is displayed. See Figure 5-155.

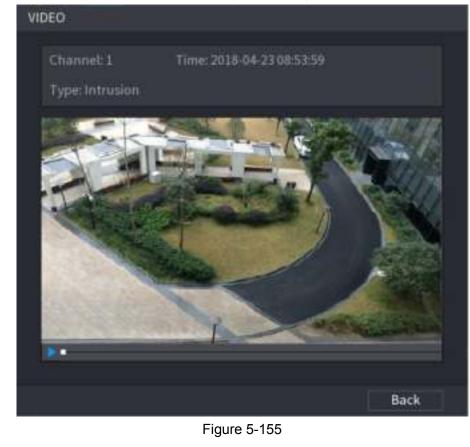

<u>Step 8</u> Click **L** to play back the recorded video.

Step 9 Click **Back** to stop the playback and return to the SMART SEARCH interface.

III NOTE

Click Export to export the recorded video files.

5.12 Configuring Face Detection

You can configure the face detection settings and search the detected faces in the defined time period.

- Not all models support this function.
- Only the analog channel 1 supports this function. The IP channel does not support this function.
- The IVS function and face detection function cannot be enabled at the same time.

5.12.1 Configuring Face Detection Settings

When the Device detects the human faces, the system activates alarms.

Step 1 Select Main Menu > FACE DETECT > PARAMETERS.

The Human Face interface is displayed. See Figure 5-156.

2 FACE DETECT				1000 ± ++ 10
UMAITT BEARCH	Harrist Face			
INNAIT SEARCH	Humm Floiz Charmi Enable Huriod Alarm Gut Show Mexange Precord Channel UTZ Trair	1	inale Latch Dont Fincard Post Fincard	Setting 10 Sec. 10 Sec.
	Video Mana	None T		
	Default			Kelly Back

Figure 5-156

010		1 11 ¹		-l - t t		See Table 5-49.
Sten Z	Contidure	the settings	for the tace	detection	narameters	See Janie 5-49
	Configure	the octaingo		actobilon	purumetero.	

Parameter	Description				
	In the Channel list, select the channel that you want to configure				
Observal	the face detection settings.				
Channel	R NOTE				
	Only the analog channel 1 supports this function.				
Enable	Enable or disable the face detection function.				
	Click Setting to draw areas to filter the target.				
	D NOTE				
Rule	You can configure two filtering targets (maximum size and				
	minimum size). When the target is smaller than the minimum size				
	or larger than the maximum size, no alarms will be activated. The				
	maximum size should be larger than the minimum size.				
	Define a period during which the detection is active.				
Period	For details, see "Setting Motion Detection Period" section in				
	"5.10.4.1 Configuring Motion Detect Settings."				
	Click Setting to display setting interface.				
	Enable alarm activation function. Select the alarm output port(s) to				
Alarm Out	which the peripheral alarm devices are connected. When an alarm				
	event occurs, the system links the peripheral alarm devices				
	connected to the selected output port.				
	Set a length of time for the Device to delay turning off alarm after				
Latch	the external alarm is cancelled. The value ranges from 0 seconds				
	to 300 seconds. If you enter 0, there will be no delay.				

Parameter	Description
ChaveMacaaaa	Select the Show Message check box to enable a pop-up message
Show Message	in your local host PC.
	Select the Alarm Upload check box to enable the system to
Alarm Upload	upload the alarm signal to the network (including alarm center)
	when an alarm event occurs.
	Select the Send Email check box to enable the system to send an
	email notification when an alarm event occurs.
Send Email	D NOTE
	To use this function, make sure the email function is enabled in
	Main Menu > NETWORK > EMAIL.
	Select the channel(s) that you want to record. The selected
	channel(s) starts recording after an alarm event occurs.
Record Channel	D NOTE
Record Channel	The recording for intelligence event and auto recording function
	must be enabled. For details, see "5.1.4.9 Configuring Recorded
	Video Storage Schedule" and "5.9.1 Enabling Record Control."
	Click Setting to display the PTZ interface.
PTZ	Enable PTZ activation function. For each PTZ camera, select the
	preset that you want to be called when an alarm event occurs.
	D NOTE
	Face Detect can only link PTZ preset.
	Set a length of time for the Device to delay turning off recording
Post Record	after the alarm is cancelled. The value ranges from 10 seconds to
	300 seconds.
Tour	Select the Tour check box to enable a tour of the selected
TOUL	channels.
	Select the Snapshot check box to take a snapshot of the selected
	channel.
	D NOTE
	To use this function, make sure the following settings are
Snapshot	configured:
	The snapshot function is enabled for motion detect alarms in
	Main Menu > STORAGE > SCHEDULE > Snapshot.
	• Select Main Menu > CAMERA > ENCODE > Snapshot, in
	the Mode list, select Human Face .
	Select the check box to enable the function. When an alarm event
	occurs, the video output port outputs the settings configured in
Video Matrix	"Main Menu > DISPLAY > TOUR."
	NOTE
	Not all models support this function.
Buzzer	Select the check box to activate a buzzer noise at the Device.
	Select the check box to enable the Device to record a local alarm
Log	log.

Parameter	Description
Voice Promote	Select to enable audio broadcast in response to a human face
Voice Prompts	detection event.

Table 5-49

<u>Step 3</u> Click **Apply** to complete the settings.

5.12.2 Searching for Detected Faces

D NOTE

To comply with relevant regulations, the faces have received fuzzy processing. <u>Step 1</u> Select **Main Menu > FACE DETECT > SMART SEARCH**.

The **SMART SEARCH** interface is displayed. See Figure 5-157.

2 FACE DETECT					1041 a 2+ 20
> SMART SEARCH	Human Face				
PARAMETERS	Begn Time	2018-05-02 80:00:0	0. End Time	2018-05-03	00 00 00 Search

Figure 5-157

- <u>Step 2</u> In the **Begin Time** box and **End Time** box, enter the time.
- <u>Step 3</u> Select the display by clicking **Graph** or clicking **List**.
- Step 4 Click Search.

The faces searched in the defined period are displayed. See Figure 5-158 or Figure 5-159.

D NOTE

Click **Export** to export the search results to the connected USB device.

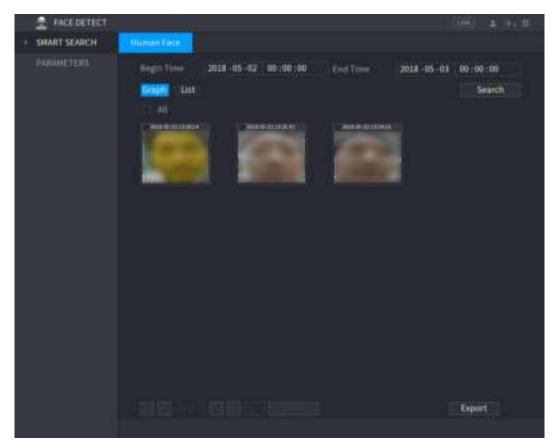


Figure 5-158

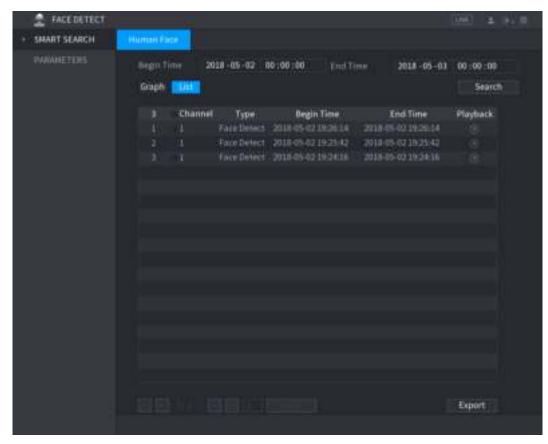


Figure 5-159

5.12.3 Playing the Detected Faces

<u>Step 1</u> On the displayed faces as shown in Figure 5-158, double-click on the face. The **VIDEO** interface is displayed. See Figure 5-160.

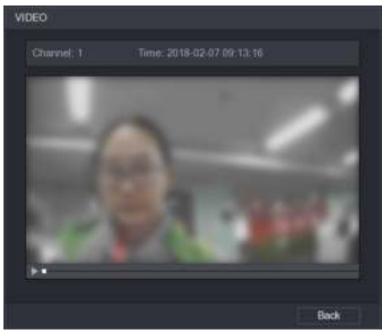


Figure 5-160

<u>Step 2</u> Click **I** to start playing the recorded detected face. <u>Step 3</u> Click **Back** to exit the playing interface and return to the faces displaying interface.

5.13 IoT Function

5.13.1 Configuring Sensor Settings

You can connect external sensors wirelessly through the Device with USB gateway or through connecting to a camera gateway. After connection, you can activate alarm events through external sensors.

5.13.1.1 Connecting Sensor through Device

NOTE
Only the Device with USB gateway supports this function.
Step 1 Select Main Menu > IoT > MANAGER > Sensor Pairing.
The Sensor Pairing interface is displayed. See Figure 5-161.

🕲 lat			1141 a 2+ 0
HEALTINE DEPLAT	Server Paling Temperature/Hu	Wreless Detector Wisless Silves	
SEARCHINFO	Access Type Al		
MANAGER			
	1 Edit Dente	Status Access Type Access Por	nt Type
			440

Figure 5-161

- <u>Step 2</u> In the Access Type list, select USB Gateway.
- Step 3 Click Add.

The Add interface is displayed. See Figure 5-162.

Add		
Access Type	USB Gateway	
Add Way	Pair	Pair
Access Point	USB Gateway-1	
Serial No.		
Name		
Туре		
Class		
Status		
		Back

Figure 5-162

Step 4 Click Pair.

The Device starts pairing with the sensor. After pairing is completed, see Figure 5-163.

Add		
Access Type	USB Gateway	
Add Way	Pair	Pair
Access Point	USB Gateway-1	
Serial No.	3J01837AAZ00008	
Name	USB-Panic Button-1	
Туре	Panic Button	
Class	Alarm In	
Status	Connected	
		Back

Figure 5-163

<u>Step 5</u> Click **Back** to exit the pairing interface.

The added sensor information is displayed. See Figure 5-164.

D NOTE					
Click to r	modify the se	nsor name;	click to	delete sensc	or information.
NEALTING DEPLAY	Service Paring	perstand Ha	nieus Denocue - Wra	eesa Sireer	(ind) 2 (+, 0
BEARCHINFO	Access Type	USB Gateway			
		Derese 1	itatus Access Typ		Type: Port future
	, Refeat				Aaa

Figure 5-164

5.13.1.2 Connecting Sensor through Camera with Gateway

D NOTE

Only the camera with gateway supports this function.

<u>Step 1</u> Select Main Menu > IoT > MANAGER > Sensor Pairing.

The Sensor Pairing interface is displayed. See Figure 5-165.

💿 lat						Tine 1	1 (Fr 10)
HEALTINE CREPLAY	Select Paring Turio	erature/Her	Wireless De	tector Wesley	iá Silven		
BEARCHINFO	Access Type Al						
► MANAGER							
	1 661	Dente	Status	Ассива Туре	Acons Post	Тури	
							Add

Figure 5-165

- <u>Step 2</u> In the Access Type list, select Camera Gateway.
- <u>Step 3</u> In the **Channel** list, select the channel that is connected to the camera.
- Step 4 Click Add.

The Add interface is displayed. See Figure 5-166.

Add		
Access Type	Camera Gateway	
Add Way	Pair	Pair
Access Point	Chn2-Air	
Serial No.		
Name		
Type		
Class		
Status		
		Back

Figure 5-166

Step 5 Click Pair.

The Device starts pairing with the sensor. After pairing is completed, see Figure 5-167.

Add	a, see ngure 5-107.	
Access Type	Camera Gateway	
Add Way	Pair	Pair
Access Point	Chn6-Air	
Serial No.	3J01837AAZ00008	
Name	Chn6-Panic Button-1	
Туре	Panic Button	
Class	Alarm In	
Status	Connected	
		Back

Figure 5-167

<u>Step 6</u> Click **Back** to exit the pairing interface.

The added sensor information is displayed. See Figure 5-168.



Click for modify the sensor name; click to delete sensor information.

HEALTING CREPLAY	Service Paring	Timpirature/Ha	doniem De	neere - Maria	in the second second	1161 2	et al
BEARCH INFO	1						
	Access Type	Camera Gateway		Channel	NI		
MANAGER							
		di Dente	Status	Ассива Туре	Acons Pont	Тури	
				Carnera Cal	Chydivianty	Danie Batton	a
						- 44	a

Figure 5-168

5.13.1.3 Configuring Alarm Linkage

<u>Step 1</u> Select Main Menu > IoT > MANAGER > Wireless Detector. The Wireless Detector interface is displayed. See Figure 5-169.

🕤 lat					1000 2 4+1	4 - L
HEALTINE CREPLY	(Y) Seiser Paring	Temperature/Het.	Withins Deletox	Wreless Steri		
SEARCHINED	Alterna Type	A				
 MANAGER 						
	t End	ie Setting Statue	Access Type Commit Caterway	Access Point . Cl=2-Arthy	Type Perc Batter	
					Agely the	k

Figure 5-169

Step 2 In the Access Type list, select USB, Camera, or All.

Step 3 Click

The **Setting** interface is displayed. See Figure 5-116.

Access Type	Camera Gateway	Access Point	Chri2-Airlly	
Туре	Panic Button	Name	Chn2-Panic Button-1	
Period	Setting	PTZ	Setting	
Alarm Out	Setting	Latert	10	Sec
Post Record	10	Sec. Anti-Other	5	Sec.
Record CH				
Snapshot				
Tour	ELECTRONIC STREET			
Voce Prompts	None			
More Setting	Setting			
Default			OK I	Back

Figure 5-170

<u>Step 4</u> Configure the settings for alarm linkage. For details, see Table 5-50.

Parameter	Description
Name	Enter the customized alarm name.

Parameter	Description
	Click Setting to display setting interface.
Period	Define a period during which the motion detection is active. For details,
	see "Setting Motion Detection Period" section in "5.10.4.1 Configuring
	Motion Detect Settings."
	Click Setting to display the PTZ interface.
PTZ	Enable PTZ activation function. For each PTZ camera, select the
	preset that you want to be called when an alarm event occurs.
	Click Setting to display setting interface.
	General Alarm: Enable alarm activation through the alarm devices
	connected to the selected output port.
Alarm Out	External Alarm: Enable alarm activation through the connected
	alarm box.
	Wireless Siren: Enable alarm activation through devices
	connected by USB gateway or camera gateway.
	Set a length of time for the Device to delay turning off alarm after the
Latch	external alarm is cancelled. The value ranges from 0 seconds to 300
	seconds, and the default value is 10 seconds.
	Set a length of time for the Device to delay turning off recording after
Post Record	the alarm is cancelled. The value ranges from 10 seconds to 300
	seconds, and the default value is 10 seconds.
Anti-Dither	Configure the event detection lasting time. The system records only
	one event during this period.
	Select the channel(s) that you want to record. The selected channel(s)
	starts recording after an alarm event occurs.
Record Channel	LLI NOTE
	The recording for alarm and auto snapshot must be enabled. For
	details, see "5.1.4.9 Configuring Recorded Video Storage Schedule"
	and "5.9.1 Enabling Record Control."
	Select the Snapshot check box to take a snapshot of the selected
Snapshot	channel.
	D NOTE
	To use this function, select Main Menu > CAMERA > ENCODE >
-	Snapshot, in the Mode list, select Event.
Tour	Select the Tour check box to enable a tour of the selected channels.
Voice Prompts	Select to enable audio broadcast/voice prompts in response to a local
	alarm event.

Parameter	Description			
More Setting	 Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. Buzzer: Select the check box to activate a buzzer noise at the Device. Video Matrix: Select the check box to enable the function. When an alarm event occurs, the video output port outputs the settings configured in "Main Menu > DISPLAY > TOUR." NOTE Not all models support this function. Send Email: Enable the system to send an email notification when an alarm event occurs. NOTE NOTE To use this function, make sure the email function is enabled in Main Menu > NETWORK > EMAIL. Log: Select the check box to enable the Device to record a local alarm log 			
Table 5-50				

<u>Step 5</u> Click **OK** to save the settings.

<u>Step 6</u> On the **Wireless Detector** interface, click **Apply** to complete the settings.

5.13.2 Configuring Temperature and Humidity Camera

You can view, search and export the temperature and humidity data of camera with such sensors and configure the alarm event settings.


To use this function, please make sure there is at least one camera with temperature and humidity sensor has been connected to the Device.

5.13.2.1 Enabling Detecting Function

You should enable the IoT function the first time when you enter this interface. <u>Step 1</u> On the main menu, select **IoT > MANAGER > Temperature/Humidity**. The **Temperature/Humidity** interface is displayed. See Figure 5-171.

© ⊌7		-	_			1001 ± 2+ 0
REALTING DEPLAY	Seiser Paring	Timore	anano/He	Witniess Detector	Wreinste Street	
GRANCHINED	-	Enable	Setting:	Access Point	Type	Detect Position Nam
 MANAGER 			0	(2in li		Clinii-Temperature
			0	Chin 0	Humidity	Clot-Nextap,1

Figure 5-171



🕤 lat					1001 2 P+ 0
HEALTINE CREPLAY	Seise Paing	Temperature/His	Witniem Detector	Wreinstä Sinen	
BEARCH1NFD	-	Enable Setting	Access Point	Тури	Detect Position Nam
► MANAGER		8 0	Dali	Tergerature	Chris-Tempetines
					Classication)
					11
					11
					1



The Device starts detecting the temperature and humidity data from the camera and display on the **Realtime Display** interface.

5.13.2.2 Viewing Temperature and Humidity Data

You can view the temperature and humidity data on the **Realtime Display** interface after the IoT function is enabled.

In the **Refresh Interval** box, select data refresh interval. For example, you can select **5 Sec**. You can also display the temperature and humidity data in graphical way by selecting the **Display Graph** check box to. See Figure 5-173 for humidity data in graphical way.

🕤 lat					1041 2 (F. 2)
REALTIME DISPLAY	Rebuilt Stierve	5 Sec			
SEARCH1NFD	Display Graph	Access Point	Tape	Detect Position Name	Current Valo
MARIAGER		Chrill	Temperature	Chol: Temperature-1	
	5				
	Temperature Chart				
	Clear			192	select .

Figure 5-173

Click Clear to delete the data.

5.13.2.3 Exporting Temperature and Humidity Data

You can export the temperature and humidity data in .BMP format. Take exporting humidity data as an example.

<u>Step 1</u> Prepare a USB device and plug it into the Device.

Step 2 On the Realtime Display interface, click the Humidity tab. See Figure 5-174.

🕤 lat					1141 a 2+ 2
REALTIME DISPLAY	Rebeds Science	5 Sec			
BEARCH INFO	Display Graph	Access Point Ohi 1	Type Tempinature	Dytect Position Name Chris Jengersture 1	Current Valo 2510
	Temperature Chart				
	Clear			1934	school .

Figure 5-174

- <u>Step 3</u> Click **Locked** to lock the data. The export button is enabled.
- <u>Step 4</u> Click **Export**. The system starts exporting the data. After exporting is finished, a **Message** dialog box is displayed.
- Step 5 Click OK.

You can find the exported data on your USB device.

5.13.2.4 Configuring Alarm Linkage


You can configure alarm linkage settings for temperature and humidity data.

5.13.2.4.1 Configuring Alarm Linkage for Temperature Data

<u>Step 1</u> On the main interface, select **IoT > MANAGER > Temperature/Humidity**. The **Temperature/Humidity** interface is displayed. See Figure 5-175.

🕤 lat		100				1000 a 9+ 8
REALTING DEPLAY	Seiser Palin	e: Treiser	anani/Her	Witniess Detector	Wreinste Street	
SEARCH INFO		Enable	Setting	Access Point	Type	Detect Position Nam
MANAGER			0	Cinti	Temperature	Clinii-Temperature
			0	Citin 0	Humidity	Chol-Humidity-1

Figure 5-175



The Setting interface is displayed. See Figure 5-176.

Securg					
Access Point			Type		
Detect Position Name	Chin5-Temperature-1		Preview Channel	¢.	
Event Type	High		Upper Limit	26 °C I	Emable 📕
Period	Setting		.91Z	Setting	
Alarm Out	Setting		Laton	10	Sec.
Post Record	10	Se	- Ann-Dither	5	Set.
E Record CH					
Snapshot					
Voice Prompts	None				
More Setting	Setting				
Default				Save	Back

Figure 5-176

Step 3 Configure the settings for alarm linkage. See Table 5-51.

Parameter	Description
Access Point	Indicates the channel that the camera is connected to.

Parameter	Description				
Туре	Temperature by default.				
Detect Position Name	Set the detect position name.				
Preview Channel	Select the channel that you want to preview to help monitor the channel of access point. This channel could be the channel of access point or any other channels according to your actual situation.				
Event Type	Select event type as High or Low , and set the upper and low temperature limit respectively. For example, select event type as				
Upper Limit	High and set upper limit as 28 , the alarm occurs when the temperature reaches 28°C.				
Enable	Enable the alarm function.				
Period	Define a period during which the alarm setting is active. For more information about setting the period, see "5.10.4.1 Configuring Motion Detect Settings."				
Alarm Out	 Click Setting to display setting interface. General Alarm: Enable alarm activation through the alarm devices connected to the selected output port. External Alarm: Enable alarm activation through the connected alarm box. Wireless Siren: Enable alarm activation through devices connected by USB gateway or camera gateway. 				
PTZ	Enable PTZ activation function. Click Setting to display the PTZ interface. For each PTZ camera, select the preset, tour, or pattern that you want to be called when an alarm event occurs.				
Latch	Set a length of time for the Device to delay turning off alarm after the external alarm is cancelled. The value ranges from 0 seconds to 300 seconds, and the default value is 10 seconds. If you enter 0, there will be no delay.				
Post Record	Set a length of time for the Device to delay turning off recording after the alarm is cancelled. The value ranges from 10 seconds to 300 seconds, and the default value is 10 seconds.				
Anti-Dither	Configure the event detection lasting time. The system records only one event during this period.				
Snapshot	Select the check box to take a snapshot of the selected channel. NOTE To use this function, make sure the snapshot is enabled motion detect alarms in Main Menu > STORAGE > SCHEDULE > Snapshot.				

Record CH Select the channel(s) that you want to record. The selected channel(s) starts recording after an alarm occurs. Image: Note the recording for IoT alarms and auto recording function must b enabled. For details, see "5.1.4.9 Configuring Recorded Video Storage Schedule" and "5.9.1 Enabling Record Control." Tour Select the check box to enable a tour of the selected channels. Image: Note To use this function, make sure the tour is enabled and configure in Main Menu > DISPLAY > TOUR. Voice Prompts Select to enable audio broadcast/voice prompts in response to a temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at th Device. • Video Matrix: Select the check box to enable the function. When an alarm event occurs, the video output port outputs to the selected channels.					
Record CH Image: Note The recording for IoT alarms and auto recording function must be enabled. For details, see "5.1.4.9 Configuring Recorded Video Storage Schedule" and "5.9.1 Enabling Record Control." Tour Select the check box to enable a tour of the selected channels. Tour NOTE Touse this function, make sure the tour is enabled and configure in Main Menu > DISPLAY > TOUR. Voice Prompts Select to enable audio broadcast/voice prompts in response to a temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at the Device. • Video Matrix: Select the check box to enable the function.					
Record CH The recording for IoT alarms and auto recording function must b enabled. For details, see "5.1.4.9 Configuring Recorded Video Storage Schedule" and "5.9.1 Enabling Record Control." Tour Select the check box to enable a tour of the selected channels. Tour NOTE To use this function, make sure the tour is enabled and configure in Main Menu > DISPLAY > TOUR. Voice Prompts Select to enable audio broadcast/voice prompts in response to a temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at the Device. • Video Matrix: Select the check box to enable the function.	channel(s) starts recording after an alarm occurs.				
The recording for IoT alarms and auto recording function must b enabled. For details, see "5.1.4.9 Configuring Recorded Video Storage Schedule" and "5.9.1 Enabling Record Control." Select the check box to enable a tour of the selected channels. Image: Note in Main Menu > DISPLAY > TOUR. Voice Prompts Select to enable audio broadcast/voice prompts in response to a temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at th Device. • Video Matrix: Select the check box to enable the function.					
Storage Schedule" and "5.9.1 Enabling Record Control." Tour Select the check box to enable a tour of the selected channels. Image: Note To use this function, make sure the tour is enabled and configure in Main Menu > DISPLAY > TOUR. Voice Prompts Select to enable audio broadcast/voice prompts in response to a temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at the Device. • Video Matrix: Select the check box to enable the function.	e				
Tour Select the check box to enable a tour of the selected channels. Image: Tour Select the check box to enable a tour of the selected channels. Voice Prompts To use this function, make sure the tour is enabled and configure in Main Menu > DISPLAY > TOUR. Voice Prompts Select to enable audio broadcast/voice prompts in response to a temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at the Device. • Video Matrix: Select the check box to enable the function.	enabled. For details, see "5.1.4.9 Configuring Recorded Video				
Tour Image: Note To use this function, make sure the tour is enabled and configure in Main Menu > DISPLAY > TOUR. Voice Prompts Select to enable audio broadcast/voice prompts in response to a temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at the Device. • Video Matrix: Select the check box to enable the function.					
To use this function, make sure the tour is enabled and configure in Main Menu > DISPLAY > TOUR. Voice Prompts Select to enable audio broadcast/voice prompts in response to a temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at the Device. • Video Matrix: Select the check box to enable the function.					
To use this function, make sure the tour is enabled and configure in Main Menu > DISPLAY > TOUR. Voice Prompts Select to enable audio broadcast/voice prompts in response to a temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at th Device. • Video Matrix: Select the check box to enable the function.					
Voice Prompts Select to enable audio broadcast/voice prompts in response to a temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at the Device. • Video Matrix: Select the check box to enable the function.	To use this function, make sure the tour is enabled and configured				
Voice Prompts temperature alarm event. • Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. • Buzzer: Select the check box to activate a buzzer noise at the Device. • Video Matrix: Select the check box to enable the function.					
 Show Message: Select the Show Message check box to enable a pop-up message in your local host PC. Buzzer: Select the check box to activate a buzzer noise at the Device. Video Matrix: Select the check box to enable the function. 	3				
 enable a pop-up message in your local host PC. Buzzer: Select the check box to activate a buzzer noise at the Device. Video Matrix: Select the check box to enable the function. 					
 Buzzer: Select the check box to activate a buzzer noise at the Device. Video Matrix: Select the check box to enable the function. 					
Device.Video Matrix: Select the check box to enable the function.					
• Video Matrix: Select the check box to enable the function.	he				
When an alarm event occurs, the video output port outputs t					
	the				
settings configured in "Main Menu > DISPLAY > TOUR."					
More Setting					
Not all models support this function.					
 Send Email: Enable the system to send an email notification 	n				
when an alarm event occurs.					
LU NOTE					
To use this function, make sure the email function is enabled in	To use this function, make sure the email function is enabled in				
Main Menu > NETWORK > EMAIL.	Main Menu > NETWORK > EMAIL.				
Log: Select the check box to enable the Device to record a					
local alarm log.					

Table 5-51

<u>Step 4</u> Click **Save** to save the settings.

5.13.2.4.2 Configuring Alarm Settings for Humidity Data


You can configure the alarm event by setting the humidity data.

<u>Step 1</u> On the main interface, select **IoT > MANAGER > Temperature/Humidity**.

The **Temperature/Humidity** interface is displayed. See Figure 5-177.

BEALTINE DEPLAT Server Pairing Important effec Wreisen Denotati Wreisen Demotati SEARCH INFD 2 Debot Pairing Access Pairing Torportation 2 D Din 0 Torportation Divide Torportation 3 MANATOLICH D Divide Torportation Divide Torportation 2 D Divide Torportation Divide Torportation Divide Torportation 3 D Divide Torportation Divide Torportation Divide Torportation 3 D Divide Torportation Divide Torportation Divide Torportation 4 D Divide Torportation Divide Torportation Divide Torportation 4 D Divide Torportation Divide Torportation Divide Torportation 4 D Divide Torportation <	🕤 lut		-				100 A 2+ R
MANAGER	REALTING DEPLAY	Seise Paring	Timore	and the	Witniess Detector	Western Street	
MANANCER 1 O Chron II Terroratuutus Chron II Chron III Chron IIII Chron IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	SEARCH INFO	-	Crable	Selling	Access Part	Type	Detect Position Nam
	MANAGER						
					Chin 0	Humdity	Ched-Humidity 1

Figure 5-177



The Setting interface is displayed. See Figure 5-178.

Setting							
Access Paint			Туре				
Detect Position Name	Chindi-Humidity-1		Preview Channel	0			
Event Type	High Humidity		Upper Limit	60		Godie	
Period	Setting		PTZ	Se	tting:		
Nam: Out	Setting		Latch	10			Sec.
Post Record	10	Se	- Anti-Cittuer	5			Sec.
Record CH							
5 Snapshot							
🖂 Teur							
Voice Prompts	None						
More Setting	Setting						
Default					Sav		Back

Figure 5-178

<u>Step 3</u> Configure the settings for the following parameters. See Table 5-52.

Parameter	Description			
Access Point	Indicates the channel that the camera is connected to.			

Parameter	Description				
Туре	Humidity by default.				
Detect Position Name	Set the detect position name.				
Preview Channel	Select the channel that you want to preview to help monitor the channel of access point. This channel could be the channel of access point or any other channels according to your actual situation.				
Event Type	Select event type as High Humidity or Low Humidity , and set the upper and low humidity limit respectively. For example, select				
Upper Limit	event type as High Humidity and set upper limit as 60 , the alarm occurs when the humidity reaches 60%RH.				
Enable	Enable the alarm function.				
Period	Define a period during which the alarm setting is active. For more information about setting the period, see "5.10.4.1 Configuring Motion Detect Settings."				
Alarm Out	 Click Setting to display setting interface. General Alarm: Enable alarm activation through the alarm devices connected to the selected output port. External Alarm: Enable alarm activation through the connected alarm box. Wireless Siren: Enable alarm activation through devices connected by USB gateway or camera gateway. 				
PTZ	Enable PTZ activation function. Click Setting to display the PTZ interface. For each PTZ camera, select the preset, tour, or pattern that you want to be called when an alarm event occurs.				
Latch	Set a length of time for the Device to delay turning off alarm after the external alarm is cancelled. The value ranges from 0 seconds to 300 seconds, and the default value is 10 seconds. If you enter 0, there will be no delay.				
Post Record	Set a length of time for the Device to delay turning off recording after the alarm is cancelled. The value ranges from 10 seconds to 300 seconds, and the default value is 10 seconds.				
Anti-Dither	Configure the event detection lasting time. The system records only one event during this period.				
Snapshot	Select the check box to take a snapshot of the selected channel. NOTE To use this function, make sure the snapshot is enabled motion detect alarms in Main Menu > STORAGE > SCHEDULE > Snapshot.				

Parameter	Description					
	Select the channel(s) that you want to record. The selected					
	channel(s) starts recording after an alarm occurs.					
Record CH	D NOTE					
	The recording for IoT alarms and auto recording function must be					
	enabled. For details, see "5.1.4.9 Configuring Recorded Video					
	Storage Schedule" and "5.9.1 Enabling Record Control."					
	Select the check box to enable a tour of the selected channels.					
Tour	NOTE NOTE					
1001	To use this function, make sure the tour is enabled and configured					
	in Main Menu > DISPLAY > TOUR.					
Voice Prompts	Select to enable audio broadcast/voice prompts in response to a					
	temperature alarm event.					
	Show Message: Select the Show Message check box to					
	enable a pop-up message in your local host PC.					
	Buzzer: Select the check box to activate a buzzer noise at the Device.					
	• Video Matrix: Select the check box to enable the function.					
	When an alarm event occurs, the video output port outputs the					
	settings configured in "Main Menu > DISPLAY > TOUR."					
Mana Oattina	D NOTE					
More Setting	Not all models support this function.					
	Send Email: Enable the system to send an email notification					
	when an alarm event occurs.					
	NOTE NOTE					
	To use this function, make sure the email function is enabled in					
	Main Menu > NETWORK > EMAIL.					
	Log: Select the check box to enable the Device to record a					
	local alarm log					
	Table 5 52					

Table 5-52

<u>Step 4</u> Click **Save** to save the settings.

5.13.2.5 Searching IoT Information

You can search and backup all your IoT data.

To back up the data, you should prepare a USB device and plug it into the Device. <u>Step 1</u> On the main interface, select **IoT > SEARCH INFO**. See Figure 5-179.

🕤 lat					[INK]	4.01.0
HEALTING DEPLAY	Access Frant	10		Overnity Type:	Unt	
SEARCH INFO	Туря	AL		Tintus.	AL	
	Start Time	2017-11-06		Erel Time	2017:12-04 00:00	
		0.000				Search
		Time	Aconsa Point	Туре	Detect Position No	ene C
						Backup

Figure 5-179

<u>Step 2</u> Configure the parameters settings. See Table 5-53.

Parameter	Description
Access Point	Indicates the channel that the camera is connected to.
Display Type	In the Display Type list, select List or Graph.
Tuno	Select the information type that you want to search. You can select
Туре	Humidity or Temperature.
	Select the information state that you want to search.
Status	This option is available when you select List in the Display Type
	list.
Start Time	Enter the start time and end time for the information that you want
End Time	to search.

Table 5-53

Step 3 Click Search.

The system starts search according to your parameters settings. After searching is finished, the result displays.

• For the data displayed in list, see Figure 5-180.

D NOTE

Click Go To to switch result pages.

REALTING DEPLAY	Access		19		Originy Type	1 Link	
SEARCH INFO							
	Type		A!		(Bringer	A.	
	litert Ter		2017-11-06	00:00:00	Evel Time	2017 12-00 00:00:00	
						Ser	dh.
							20.
	120		Tene	Aconsa Point	Type:	Detect Position Name	
			11.0721.5358	CTet 1	Hamidity	Christ Humidity-1	
		2017	1417211400	Chin 1	Temperature	Christ Temperature 1	
			1107211401		Hamilty	Christ-Humsday-T	
		2017-	11-07-211-14:00	Chris 1	Tertgenutian	Cherl-Temperature 1	
			11.07.21.14.10	chin 1	HATTINGTY	Chrit-Humshity-1	
		2017-	1-02-21:54:14	chert.	Hamiday	Chert-Hamilto-T	
		2017-	11-0721-1420		Hundry	Chin1-Hernidity-1	
		2017	11-07 21:10:04	Christ 1	Temperature	Chril-Temperature 1	
			11-07-21:16:00	001		Clinit-Temperature 1	
		3017-	11-07-21.10.07	Chief 1	Feature of the	Christ-Humakky-1	
			11-07-21:16-10			Clin1-Temperature-1	
		2017-	1/0721-18-17.	Owt	Hamidity	Chin1-Humidally-1	
			1.0721:18:28		Temperature	Christ-Tempmahates 1	
			13-07-21:10:27	Om 1	Hamidaty	Christ-Hamidity-1	
			11-07-21-16-36	Cheid .	Temperative	Christ Temperature 1	
		11.4	> 28 1	Golte		Bade	ND.

Figure 5-180

• For the data displayed in graph, see Figure 5-181.

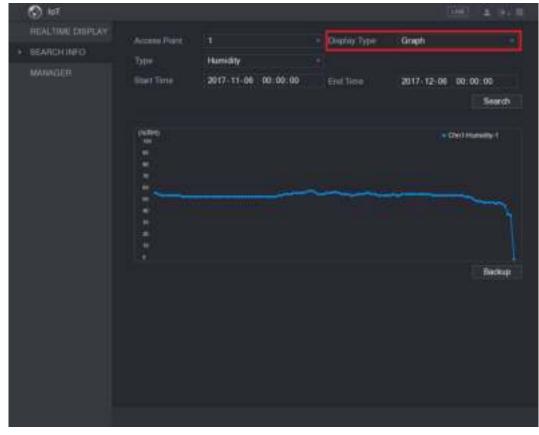


Figure 5-181

<u>Step 4</u> Click **Backup**. The system starts exporting the data.

After exporting is finished, a **Message** dialog box is displayed.

Step 5 Click OK.

You can find the exported data on your USB device.

5.13.3 Configuring Wireless Siren

You can connect the wireless siren to the Device, when there is an alarm event activated on the Device, the wireless siren generate alarms.

<u>Step 1</u> Select Main Menu > IoT > MANAGER > Wireless Siren.

The **Wireless Siren** interface is displayed. See Figure 5-182.

🕤 lat	7				(336)	1.0	+ 11	
HEALTINU DISPLAY	Seise Paling	Temperature/He	Witniess Detector	Writes Sine				
BEARCH INFO	USB Garroway							
F MANAGER	Minda							
	Auto							
	Margan							
	THE .							
	Gamera Gate	ent/						
	Muan							
	Auto							
	Mirrord							
	Step							
	Alarm Palatas	OK						
	Constitution of the second							
1								
					Apply	1	flack	

Figure 5-182

Step 2 Configure the settings for the wireless alarm output. For details, see Table 5-54.

Parameter	Description
	• Auto: Automatically activate alarm if the alarm output function
	for wireless siren is enabled for specific events. For example, if
USB Gateway,	you want to enable the alarm output through wireless siren for
Camera Gateway	motion detection, see "Alarm Output" parameter in Table 5-39.
	Manual: Activate alarm immediately.
	• Stop: Do not activate alarm.
Alarm Release	Click OK to clear all alarm output status of wireless siren.

Table 5-54

<u>Step 3</u> Click **Apply** to save the settings.

5.14 Configuring POS Settings

You can connect the Device to the POS (Point of Sale) machine and receive the information from it. This function applies to the scenarios such as supermarket POS machine. After connection is established, the Device can access the POS information and display the overlaid text in the channel window.

D NOTE

Playing POS information in the local playback and viewing the POS information in the live view screen only support single-channel mode. Displaying monitoring screen and playing back in the web support multi-channel mode.

5.14.1 Searching the Transaction Records

<u>Step 1</u> Select Main Menu > POS > POS SEARCH.

The POS SEARCH interface is displayed. See Figure 5-183.

- 9	P05								A 194 B
÷	POS SEARCH	Transaction file.					Search		
	POSISETUP	Shet Time		2017-10-08	00:00:00				
		End Time		2017-11-07	20:20:55				
			Tion	aution Tene		Trues	action No.	Play	Denaits

Figure 5-183

- <u>Step 2</u> In the **Transaction No.** list, enter the transaction number on your receipt printed out by POS machine.
- <u>Step 3</u> In the **Start Time** box and **End Time** box, enter the time period that you want to search the POS transaction information.
- <u>Step 4</u> Click **Search**. The searched transaction results display in the table.

5.14.2 Configuring POS Settings

<u>Step 1</u> Select Main Menu > POS > POS SETUP. The POS SETUP interface is displayed. See Figure 5-184.

P05				1 Intel	1 11 11	
FOR SEANCH		in the second se		-		
+ POSISETUP	POS Name	post.	 Grittle			
	2		Recent CH	0		
			Privacy Settap	0		
			Protocol Type	POS		
			Carenez Type	TCP.	• •	
	1		Character Encoding	UTF-R		
			Overlag Moore	TURN		
			Renewalk time out	100		
			Tarrie Display	120		
			Fontium	Medium		
			COLOR			
			POS lists			
			Transaction Start			
			Intraaction Epil			
			Line Delivering			
	Default			Addir	llack	

Figure 5-184

<u>Step 2</u> Configure the settings for the POS parameters. See Table 5-55.

Parameter	Description
	In the POS Name list, select the POS machine that you want to
POS Name	configures settings for. Click to modify the POS name.
	The POS name supports 21 Chinese characters or 63 English
	characters.
Enable	Enable the POS function.
Record CH	Select the channel(s) that you want to record. The selected channel(s) starts recording after an alarm occurs.
	The recording for POS alarms and auto recording function must
	be enabled. For details, see "5.1.4.9 Configuring Recorded Video
	Storage Schedule" and "5.9.1 Enabling Record Control."
Privacy Setup	Enter the privacy content.
Protocol Type	Select POS by default. Different machine corresponds to different protocol.

Parameter	Description			
Connect Type	In the Connect Type list, select the connection protocol type. Click , the IP Address interface is displayed.			
Connect Type	In the Source IP box, enter the IP address (the machine that is			
	connected to the Device) that sends messages.			
Convert	Select a character encoding mode.			
Overlay	In the Overlay list, Select Turn or ROLL .			
	When the network is not working correctly and cannot be			
Natural times and	recovered after the entered timeout limit, the POS information wil			
Network time out	not display normally. After the network is recovered, the latest			
	POS information will be displayed.			
	Enter the time that how long you want to keep the POS			
Time Display	information displaying. For example, enter 5, the POS information			
	disappear from the screen after 5 seconds.			
Font Size	In the Font Size list, select Small, Medium, or Big as the text			
FUIL SIZE	size of POS information			
COLOR	In the color bar, click to select the color for the text size of POS			
COLOR	information.			
POS Info	Enable the POS Info function, the POS information displays in the			
	live view screen.			
Transaction Start	Enter the transaction start observator and and observator			
Transaction End	Enter the transaction start character and end character.			
Line Delimiter	Enter the line delimiter that you want to use.			
	Table 5-55			

Table 5-55

<u>Step 3</u> Click **Apply** to complete the settings.

5.15 Configuring Backup Settings

5.15.1 Finding USB Device

When you inset a USB storage device into the USB port of the Device, the Device detects the USB storage device and pops up "Find USB device" interface, which provides you a shortcut to perform backup and upgrading operations. See Figure 5-185.

For details, see "5.15.2 Backing up Files", "5.21.2 Viewing Log Information", "5.20.4 Exporting and Importing System Settings", and "5.20.6 Upgrading the Device."

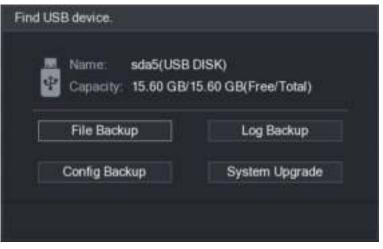


Figure 5-185

5.15.2 Backing up Files

You can back up the recorded videos and snapshots.

Step 1 Select Main Menu > BACKUP.

The **BACKUP** interface is displayed. See Figure 5-186.

BACKUP				1 and	E 14 194 18
+ BACKUP	Device Name Parts Record CH Start Time File Format	ead5(USB DISK) 1 2017-11-00 00:00:00 DAV	Format Browse Type End Time	15.60 GB/15.60 G Ali 2017: 11:06:09 Search	
		enel Type – Start Type	find Tono	Start/Gin	Beckup

Figure 5-186

Step 2 Configure the settings f	for the backup parameters.	See Table 5-56.
---------------------------------	----------------------------	-----------------

Parameter	Description
Device Name	In the Device Name list, select the device that you want to back up
	the files to.

Parameter	Description		
	Click Format, the Format interface is displayed.		
	• If the capacity of external storage device is less than 2TB, you		
Format	can select FAT32 or NTFS to format it.		
	If the capacity of external storage device is equal to or more		
	than 2TB, you can only select NTFS to format it.		
Path	Click Browse , the Browse interface is displayed. Select the route		
гаш	where you want to search for the files.		
Decend OI I	In the Record CH list, select the channel where you want to search		
Record CH	for the files.		
Туре	In the Type list, select the file type that you want to search.		
Start Time	Enter the start time and end time for the files that you want to		
End Time	search.		
File Format	In the File Format list, select the file format as DAV or MP4 that		
File Format	you want to search.		

Table 5-56

- <u>Step 3</u> Click **Search** to search the files that meet the configured settings. The searched results will display in the table.
- <u>Step 4</u> Select the files that you want to back up.
- Step 5 Click **Backup** to back up the selected files to the configured path.

Click Clear to remove all the searched results.

5.16 Network Management

5.16.1 Configuring Network Settings

You can ensure the network interworking between the Device and other devices through configuring the network settings.

5.16.1.1 Configuring TCP/IP Settings

You can configure the settings for the Device such as IP address, DNS according to the networking plan.

Select **Main Menu > NETWORK > TCP/IP**, the **TCP/IP** interface is displayed. See Figure 5-187. For details about parameter settings, see "5.1.4.4 Configuring Network Settings."

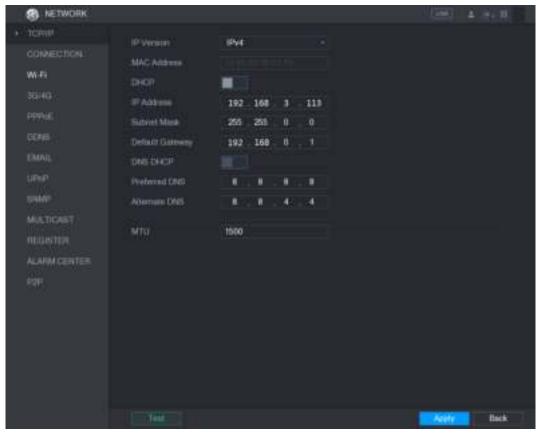


Figure 5-187

5.16.1.2 Configuring Port Settings

You can configure the maximum connection accessing the Device from Client such as WEB, Platform, and Mobile Phone and configure each port settings.

<u>Step 1</u> Select Main Menu > NETWORK > CONNECTION. The CONNECTION interface is displayed. See Figure 5-188.

S NETWORK				(100) & H+ R
time:	Mex Connection	128		
+ CONNECTION	TOP Part	37777	(1025-65535)	
36/40	UDP Pers HTTP Pert	37778 Ni	(1025-05036) (1-65535)	
99966 0046	HTMP Part	164	(1.40000)	
EMAQ.	POS Port HTTPS Enable	38800	(1025 - 65036)	
UPEP SNMP	HTTPS:Flat	443	(1-0555)	
MULTICAST NEGLISTER				
ALARM CENTER 699				
				Kerty Back

Figure 5-188

Step 2 Configure the settings for the connection parameters. See Table 5-57.

The connection parameters except Max Connection cannot take effects until the Device has been restarted.

Parameter	Description
	The allowable maximum clients accessing the Device at the same
Max Connection	time, such as WEB, Platform, and Mobile Phone.
	Select a value between 1 and 128. The default value setting is 128.
TCP Port	The default value setting is 37777. You can enter the value
TOPPOIL	according to your actual situation.
UDP Port	The default value setting is 37778. You can enter the value
ODP POIL	according to your actual situation.
	The default value setting is 80. You can enter the value according
HTTP Port	to your actual situation.
ΠΠΡΡΟΙΙ	If you enter other value, for example, 70, and then you should enter
	70 after the IP address when logging in the Device by browser.
RTSP Port	The default value setting is 554. You can enter the value according
RISPFUIL	to your actual situation.
POS Port	Data transmission. The value range is from 1 through 65535. The
P05 P01	default value is 38800.
HTTPS Enable	Enable HTTPS.
HTTPS Port	HTTPS communication port. The default value setting is 443. You
	can enter the value according to your actual situation.

Table 5-57

<u>Step 3</u> Click **Apply** to complete the settings.

5.16.1.3 Configuring Wi-Fi Connection Settings

You can make wireless connection between the Device and the other devices in the same network through Wi-Fi settings, facilitating the devices connection and mobility.

Only the Device with Wi-Fi module supports this function.

Step 1 Select Main Menu > NETWORK > Wi-Fi.

The **Wi-Fi** interface is displayed. See Figure 5-189.

NETWORK							
TOMP	WHITAM	and the second					
CONNECTION :			-				
W-10		8510	Signal Int	ter te the	Wi Fr Working Info		
36/40		DOIN	Digital tra	a iskiy			
222 946					Durrent Hempot	No Connection	
0046					IP Address		
EMAG.					Supret Meet		
					Detaux Gateway		
area Select							
MULTICAST							
ALARM CENTER							
	Refresh					Kelli	Bick

Figure 5-189

Step 2 Configure the settings for the Wi-Fi connection parameters. See Table 5-58.

Parameter	Description
	Enable Wi-Fi Auto Connect.
Wi-Fi Auto Connect	After the Device is restarted, it will automatically connect to the
	nearest hotspot that had been connected successfully.
Refresh	Refresh the hotspot list. The self-adaption function such as adding
Reliesh	password is supported if such setting was once configured.
	In the hotpots list, select a hotspot, and then click Connect .
	To reconnect the same hotspot, disconnect first and then
Connect	reconnect.
	To connect to other hotspot, disconnect from the current
	connected hotspot first, and then connect to the other hotspot.
Disconnect	To disconnect from a hotspot, click Disconnect .

<u>Step 3</u> Click **Apply** to complete the settings.

After the Device is connected to a Wi-Fi hotspot, in the **Wi-Fi Working Info** area, the current hotspot, IP address, subnet mask, and default gateway are displayed.

5.16.1.4 Configuring 3G/4G Settings

You can connect a wireless 3G/4G module to the USB port of the Device and then access the Device with the IP address provided by the module.

📖 NOTE

Not all models support this function.

<u>Step 1</u> Connect the wireless 3G/4G module to the USB port of the Device.

Step 2 Select Main Menu > NETWORK > 3G/4G.

The **3G/4G** interface is displayed, see Figure 5-190.

RETWORK				inii a	194.00
CONNECTION:	101.11 44				
	Ethemet Carif	Te0	- 🗵 thick		
+ 30/4G	Network Type	TD-LTE			
PP946	APH .	3gret			
COME:	NUTE	NO_AUTH			
	Disi No.	1964			
uner setter				Der 1	
MULTICALITY	Wirelous Network				
	Module State		TP Address		
ALARM CENTER	SVM Ritates		Balanet Mask		
	PPP State	OFFLINE	Default Games		
				Xeli	flack

Figure 5-190

The 3G/4G interface is consisted of three areas:

- Area 1: Displays the signal strength.
- Area 2: Displays the module configurations.
- Area 3: Displays the connection state.

D NOTE

The information of Area 2 will display after the 3G/4G module is connected; while the information of Area 1 and Area 3 will display only after the 3G/4G function is enabled.

<u>Step 3</u> The Device starts identifying the wireless module and displays the recognized information for the parameters in Area 2. See Table 5-59.

Parameter	Description
Ethernet Card	Displays the name of Ethernet card.

Description
Displays the network type. Different type represents different supplier.
Displays the default APN number.
Displays the default dial No.
Authentication mode. You can select PAP , CHAP , or NO_AUTH .
-

Table 5-59

- <u>Step 4</u> Select the **Enable** check box.
- <u>Step 5</u> Click **Dial** to start connecting.

After the connection is established, the result is displayed in the **Wireless Network** area. See Figure 5-191.

	-			Man S. Line
NETWORK				(104) E 41-12
activity.	110400			
CONNECTION :				
Wi-Hi	Ethemet Cert	ReD	- 🔡 thatia	
+ 3B/40	Network Type	TD-LTE		
PP9946	CARN	3gret		
COMB .		NO_AUTH		
EMAG.	Dial No.	1964		
ume				
president?				Oscorrect
MULTICAST	Wireless Network			
NEGRITER	Module State		17 Address	182,168,59,294
ALAHM CENTER	C SVM (Name)		Balanet Mask	255.0.0.0
Party Contract of	PPP State	CHLINE	Default Geneway	182,148,59,215
010.				
				Kelly Back

Figure 5-191

<u>Step 6</u> Click **Apply** to complete the settings.

Supported 3G/4G Modules by the Device

- China Mobile 3G/4G: ZTE MF832S
- China Mobile 4G: ZTE MF832S
- China Unicom 3G: ZTE MF667S, HUAWEI E353U-1
- China Telecom 4G: HUAWEI EC122, ZTE AC2736
- NOTE
- If the Device is connected to China Telecom 3G/4G network, you can login the Device with the public IP address through the PC of public internet (The HTTP port is not configured as 80). If the Device is connected to China Unicom or China Mobile 3G network, which are defined as private network, therefore you cannot login the Device through PC that is connected to public internet.

- The Ethernet card names that are displayed on the 3G/4G interface are not constant, and they could be ppp5, ppp6, ppp7 or ppp8 and are different depending on the USB2.0 port on the Device that is connected to the 3G module.
- If you dial to connect to 3G/4G network, you have to keep trying till succeeded. The default
 gateway could be switched depending on the priority of Ethernet cards.
- The China Unicom and China Mobile 3G/4G modules in USB flash disk style do not support EDGE mode for the moment.

5.16.1.5 Configuring PPPoE Settings

PPPoE is another way for the Device to access the network. You can establish network connection by configuring PPPoE settings to give the Device a dynamic IP address in the WAN. To use this function, firstly you need to obtain the user name and password from the Internet Service Provider.

<u>Step 1</u> Select Main Menu > NETWORK > PPPoE.

The **PPPoE** interface is displayed. See Figure 5-192.

RETWORK	-		1000 4	14 H.	
TOMP CONNECTION WLFD 35140	Enable User Name Passeerd				
Point CLAR CLAR	P Addess				
		1	Kejly	flack	

Figure 5-192

- <u>Step 2</u> Enable the PPPoE function.
- <u>Step 3</u> In the **User Name** box and **Password** box, enter the user name and password accordingly provided by the Internet Service Provider.
- <u>Step 4</u> Click **Apply** to complete the settings. The system pops up a message to indicate the successfully saved. The IP address appears on the PPPoE interface. You can use this IP address to access the Device.

NOTE When the PPPoE function is enabled, the IP address on the **TCP/IP** interface cannot be modified.

5.16.1.6 Configuring DDNS Settings

When the IP address of the Device changes frequently, the DDNS function can dynamically refresh the correspondence between the domain on DNS and the IP address, ensuring you access the Device by using the domain.

Preparing for Configuration

Please confirm if the Device supports the DDNS Type and log in the website provided by the DDNS service provider to register the information such as domain from PC located in the WAN.

- If DDNS belongs to Quick DDNS type, domain registration is not needed.
- If DDNS belongs to other type, you need to login the DDNS website to register the information such as user name, password, and domain name.

D NOTE

After you have registered and logged in the DDNS website successfully, you can view the information of all the connected devices under this user name.

Configuring Steps

Step 1 Select Main Menu > NETWORK > DDNS.

The **DDNS** interface is displayed. See Figure 5-193.

RETWORK				and I	A 194 10
	Enable		tion, third-party terver may	onlie(typus)	lenice
WUH SEAG PPPAG COHS CHAIL OPHIP SAMP MULTICAST RESISTER ALANN CENTER FOF	00NS Type mist IP Damith Name User Name Password Interval	both. Dynams DONS members dyndros org			
				Andy	Back

Figure 5-193

Step 2 Configure the settings for the DDNS parameters.

EnableImage: Note After enable After enable Device infor Type and a • Type: • Type: • Type: • Type:	DDNS function.
Enable After enable After enable Device info DDNS Type Type and a Host IP • Type: • Type:	ling DDNS function, the third-party might collect your
Enable After enab Device info DDNS Type Host IP Host IP Type: Type: Type:	ling DDNS function, the third-party might collect your
After enab Device info DDNS Type Type and a • Type: Host IP • Type: • Type: • Type: • Type:	
DDNS Type Type and a • Type: Host IP • Type: • Type: • Type: • Type: • Type:	ormation.
Host IP Type: Type:	
Host IP • Type: • Type: The doma	address of DDNS service provider.
• Type:	Dyndns DDNS; address: members.dyndns.org
The doma	NO-IP DDNS; address: dynupdate.no-ip.com
The doma	CN99 DDNS; address: members.3322.org
	in name for registering on the website of DDNS service
provider.	
User Name Enter the u	user name and password obtained from DDNS service
Password provider. Y	ou need to register (including user name and password)
on the web	osite of DDNS service provider.
Interval Enter the a	

Table 5-60

Quick DDNS type. See Table 5-61. •

Parameter	Description		
Enable	Enable the DDNS function.		
DDNS Type	Type of DDNS service provider.		
Host IP	Address of DDNS service provider. The default is		
TIOSUIF	www.quickddns.com which cannot be modified.		
	The domain name for registering on the website of DDNS service		
	provider.		
Domain Name	Select the domain mode as default domain or customized domain.		
Domain Marine	• The default domain format is "MAC address (without		
	".").quickddns.com"		
	The customized domain format is "name. quickddns.com."		
Email	In the Email box, enter the email address that is used to access		
	the DDNS service provider.		
	After configuration is completed, click Test to check if the domain		
Test	name is successfully registered. If yes, go to the next step; if not,		
	please check the network connection status.		

Table 5-61

<u>Step 3</u> Click **Apply** to complete the settings.

Enter the domain name in the browser on your PC, and then press Enter. If the web interface of the Device is displayed, the configuration is successful. If not, the configuration is failed.

5.16.1.7 Configuring EMAIL Settings

You can configure the email settings to enable the system to send the email as a notification when there is an alarm event occurs.

<u>Step 1</u> Select Main Menu > NETWORK > EMAIL.

The **EMAIL** interface is displayed. See Figure 5-194.

NETWORK				1 H H H H
above connection www. above above connection connection	Enable SMTP Server Part Duer Name Pastaeret Assergetty	MatServer 25		
CMAR UPHP USHAP MULTICAST RELEASTER ALARM CENTER F20	Mar Receiver Email Address Sandar Tate Addressert Autoentration Interval	Receiver1 none XVR ALERT NONE 120		
	Health Enable Internal	60	Min	Xayiy Back

Figure 5-194

<u>Step 2</u> Configure the settings for the email parameters. See Table 5-62.

Parameter	Description		
Enable	Enable the email function.		
SMTP Server	Enter the address of SMTP server of sender's email account.		
Port	Enter the port value of SMTP server. The default value setting is		
FUIL	25. You can enter the value according to your actual situation.		
User Name	Enter the user name and password of sender's email account.		
Password			
Anonymity	If enable the anonymity function, you can login as anonymity.		
	In the Mail Receiver list, select the number of receiver that you		
Mail Receiver	want to receive the notification. The Device supports up to three		
	mail receivers.		
Email Address	Enter the email address of mail receiver(s).		
Sender	Enter the sender's email address. It supports maximum three		
Sender	senders separated by comma.		
	Enter the email subject.		
Title	Supports Chinese, English and Arabic numerals. It supports		
	maximum 64 characters.		
Attachment	Enable the attachment function. When there is an alarm event, the		
Allachimetti	system can attach snapshots as an attachment to the email.		

Parameter	Description		
	Select the encryption type: NONE, SSL, or TLS.		
Authentication	D NOTE		
	For SMTP server, the default encryption type is TLS .		
	This is the interval that the system sends an email for the same		
	type of alarm event, which means, the system does not send an		
Intorval (See.)	email upon any alarm event.		
Interval (Sec.)	This setting helps to avoid the large amount of emails caused by		
	frequent alarm events.		
	The value ranges from 0 to 3600. 0 means that there is no interval.		
Health Enable	Enable the health test function. The system can send a test email		
	to check the connection.		
	This is the interval that the system sends a health test email.		
Interval (Min.)	The value ranges from 30 to 1440. 0 means that there is no		
	interval.		
	Click Test to test the email sending function. If the configuration is		
Test	correct, the receiver's email account will receive the email.		
Test	NOTE NOTE		
	Before testing, click Apply to save the settings.		
	Table 5.62		

Table 5-62

<u>Step 3</u> Click **Apply** to complete the settings.

5.16.1.8 Configuring UPnP Settings

You can map the relationship between the LAN and the WAN to access the Device on the LAN through the IP address on the WAN.

Preparation for Configuration

- Login the router to set the WAN port to enable the IP address to connect into the WAN.
- Enable the UPnP function at the router.
- Connect the Device with the LAN port on the router to connect into the LAN.
- Select **Main Menu > NETWORK > TCP/IP**, configure the IP address into the router IP address range, or enable the DHCP function to obtain an IP address automatically.

Configuration Steps

<u>Step 1</u> Select Main Menu > NETWORK > UPnP.

The **UPnP** interface is displayed. See Figure 5-195.

_4	CONVECTION CONVECTION WITH SOME	INT Sinter LAND WALL						1	(HAN
	DDHB EMAQ		Service Name	Protocol TCP.	int Part	Eat.Part	Edit.		
1	un-p		TCP Little	TCP UDP	327777 327728	31777 37778	4		
	IIVAN MULTICAST		ACTER ACTER SNMP	UDP TCH UDP	104 364 163	554 554	4		
	NEGUSTON ALARM CENTES POR		HTTPS			- 445	×.		
								Xeity 👘	llack

Figure 5-195

	ettings for the UPnP paramete	
Sten 2 Continuire the s	ettings for the LIPhP haramete	rs See lanie 5-63

Parameter	Description
PAT	Enable the UPnP function.
	Indicates the status of UPnP function.
Status	Offline: Failed.
	Online: Succeeded.
	Enter IP address of router on the LAN.
LANIP	R NOTE
	After mapping succeeded, the system obtains IP address
	automatically without performing any configurations.
	Enter IP address of router on the WAN.
WAN IP	R NOTE
	After mapping succeeded, the system obtains IP address
	automatically without performing any configurations.

Parameter	Description
PAT Table	 The settings in PAT table correspond to the UPnP PAT table on the router. Service Name: Name of network server. Protocol: Type of protocol. Int. Port: Internal port that is mapped on the Device. Ext. Port: External port that is mapped on the router. NOTE To avoid the conflict, when setting the external port, try to use the ports from 1024 through 5000 and avoid popular ports from 1 through 255 and system ports from 256 through 1023. When there are several devices in the LAN, please reasonably arrange the ports mapping to avoid mapping to the same external port. When establishing a mapping relationship, please ensure the mapping ports are not occupied or limited. The internal and external ports of TCP and UDP must be the same and cannot be modified. Click to modify the external port.
	Table 5-63

Table 5-63

Step 3 Click Apply to complete the settings.

In the browser, enter http://WAN IP: External IP port. You can visit the LAN Device.

5.16.1.9 Configuring SNMP Settings

D NOTE

Not all models support this function.

You can connect the Device with some software such as MIB Builder and MG-SOFT MIB Browser to manage and control the Device from the software.

Preparation for Configuration

- Install the software that can manage and control the SNMP, such as MIB Builder and MG-SOFT MIB Browser
- Obtain the MIB files that correspond to the current version from the technical support.

Configuration Steps

<u>Step 1</u> Select Main Menu > NETWORK > SNMP.

The **SNMP** interface is displayed. See Figure 5-196.

8	NETWORK				ine	1 9.8
CON CON	NECTION	Erroble Version	VL V2	🐨 VJ (Recommended)		
HEAL PPPA DDM ENA		Stable Pourt Read Community Write Community Frag Address	161			
UPut UPut > SNM		-Trap Part Read Only User Authentication Type	. 197 Public MDS	Teod/Write Doer	Private HDS	
RECO	TEAST STER	Authentication Pa Encryption Type	CBC DES	Authentication Pa • Encryption Type	CBC-DES	
N.D.P	WGNTEN	Encryption Passweet		Encryption Password		
					Apply	Back

Figure 5-196

<u> </u>			
Sten 2	Configure the settings for th	e SNMP narameters. See L	able <u>5-64</u>
$\frac{Olop Z}{2}$	ooringure the octaingo for th	c or an parameters. occ r	

Parameter	Description
Enable	Enable the SNMP function.
Version	Select the check box of SNMP version(s) that you are using.
	The default version is V3 . There is a risk of select V1 or V2.
SNMP Port	Indicates the monitoring port on the agent program.
Read Community	Indicates the read/write strings supported by the agent program
Write Community	Indicates the read/write strings supported by the agent program.
	Indicates the destination address for the agent program to send the
Trap Address	Trap information.
Trap Port	Indicates the destination port for the agent program to send the
Trap Fort	Trap information.
Read Only User	Enter the user name that is allowed to access the Device and has
Read Only User	the "Read Only" permission.
Read/Write User	Enter the user name that is allowed to access the Device and has
Reau/While User	the "Read and Write" permission.
Authentication Type	Includes MD5 and SHA. The system recognizes automatically.
Authentication	
Password	Enter the password for authentication type and encryption type.
Encryption	The password should be no less than eight characters.
Password	
Encryption Type	In the Encryption Type list, select an encryption type. The default setting is CBC-DES.

- Step 3 Compile the two MIB files by MIB Builder.
- <u>Step 4</u> Run MG-SOFT MIB Browser to load in the module from compilation.
- <u>Step 5</u> On the MG-SOFT MIB Browser, enter the Device IP that you want to manage, and then select the version number to query.
- <u>Step 6</u> On the MG-SOFT MIB Browser, unfold the tree-structured directory to obtain the configurations of the Device, such as the channels quantity and software version.

5.16.1.10 Configuring Multicast Settings

REGISTER

When you access the Device from the network to view the video, if the access is exceeded, the video will not display. You can use the multicast function to group the IP to solve the problem.

```
Step 1 Select Main Menu > NETWORK > MULTICAST.
```

S KETWORK			(100) £
	Diskle	10 M	
CONNECTION :		-	
	(PAddress)	230 255 42 42	
	Part	36666	
36/40			
99994K			
0046			
EMAG.			
DAMP.			

The MULTICAST interface is displayed. See Figure 5-197.

Figure 5-197

Step 2	Configure the settings for the multicast	parameters. See Table 5-65.
	eeningare and colarige for and manadade	

Parameter	Description					
Enable	Enable the multicast function.					
IP Address	Enter the IP address that you want to use as the multicast IP.					
IP Audress	The IP address ranges from 224.0.0.0 through 239.255.255.255.					
Dort	Enter the port for the multicast. The port ranges from 1025 through					
Port	65000.					

Table 5-65

Step 3 Click Apply to complete the settings.

You can use the multicast IP address to login the web. See Figure 5-198. On the web login dialog box, in the **Type** list, select **MULTICAST**. The web will automatically obtain the multicast IP address and join. Then you can view the video through multicast function.



Figure 5-198

5.16.1.11 Configuring Register Settings

You can register the Device into the specified proxy server which acts as the transit to make it easier for the client software to access the Device.

Step 1 Select Main Menu > NETWORK > REGISTER.

The **REGISTER** interface is displayed. See Figure 5-199.

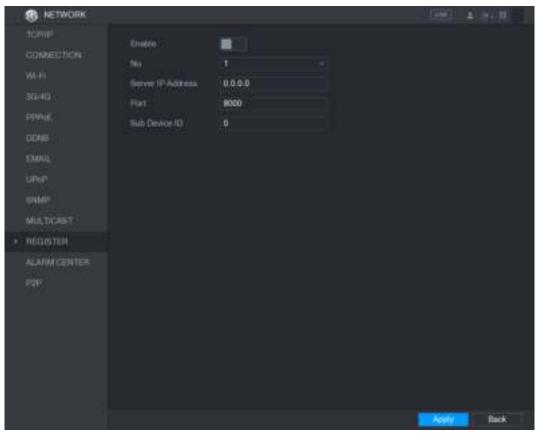


Figure 5-199

Step 2 Configure the settings for the register parameters. See Table 5-66.

Parameter	Description				
Enable	Enable the register function.				
Server IP Address	Enter the server IP address or the server domain that you want to				
Server IF Address	register to.				
Port	Enter the port of the server.				
Sub Service ID	This ID is allocated by the server and used for the Device.				
Table 5-66					

Step 3 Click Apply to complete the settings.

5.16.1.12 Configuring Alarm Center Settings

You can configure the alarm center server to receive the uploaded alarm information. To use this function, the **Alarm Upload** check box must be selected. For details about alarm event settings, see "5.10 Alarm Events Settings."

Step 1 Select Main Menu > NETWORK > ALARM CENTER.

The ALARM CENTER interface is displayed. See Figure 5-200.

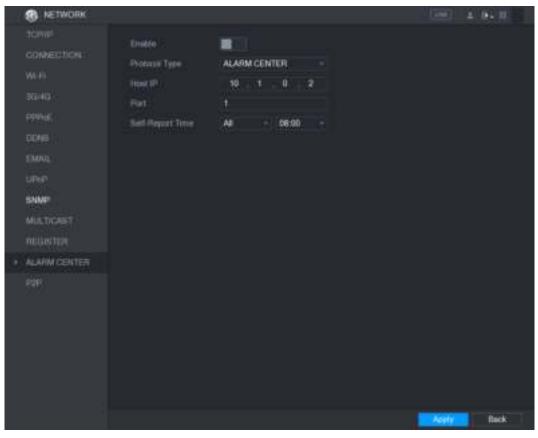


Figure 5-200

Step 2 Configure the settings for the alarm center parameters. See Table 5-67.

Parameter	Description					
Enable	Enable the alarm center function.					
Drotocol Tyroo	In the Protocol Type list, select protocol type. The default is					
Protocol Type	ALARM CENTER.					
Host IP	The IP address and communication port of the PC installed with					
Port	alarm client.					
Self-Report Time	In the Self-Report Time list, select time cycle and specific time for					
	uploading alarm.					

Table 5-67

Step 3 Click Apply to complete the settings.

5.16.1.13 Configuring P2P Settings

You can manage the devices by using P2P technology to download the application and register the devices. For details, see "5.1.4.5 Configuring P2P Settings."

5.16.2 Configuring Network Testing Settings

5.16.2.1 Testing the Network

You can test the network connection status between the Device and other devices.

<u>Step 1</u> Select Main Menu > INFO > NETWORK > Test.

The **Test** interface is displayed. See Figure 5-201.

B INFO						4.918			
VERSION	Online Units	Network Look	Network To						
600	Network Test								
	Destroyion 181								
NETWORK	Test Result								
CHARREL INFO	National Souther I	Nament firefile Parket Backap							
eirs :	Device Nome	Device Nome sdb5(USB.DISK) ·							
	Address					Browen			
	None			Sriffer Packet Size	Seetler Pack	rt Backup			
	LANT	192.10	68.20.13						



- <u>Step 2</u> In the **Destination IP** box, enter the IP address.
- Step 3 Click Test.

After testing is completed, the test result is displayed. You can check the evaluation for average delay, packet loss, and network status. See Figure 5-202.

	B INFO		<u></u>		1001 a 10+ 10
ġ	VERSICH	Cristie User	timent Lord Mitwisk	inter al la companya de la companya	
		Notwork Test			
	EVENT.	Destruction (P	192 166 20 13		
	NETWORK	Tiest thesait	Average Delay 1 Ilms Par	kel Leon Ride D'S. Network	Natura OK.
	HOD				
ß	CHANNEL INFO	National Souther P	uchet Backup		
		Device Name	sdb5(UB8 Df6K)		- Reheah
		Address		Browser	
		Plane	1	Snitter Packet Size	Seetler Packet Backup
		LANIT	192,368,20,33		

Figure 5-202

5.16.2.2 Capturing Packet and Backing up

Packet capture means the operations such as capturing, resending, and editing data that are sent and received during network transmission. When there is network abnormality, you can perform packet capturing and back up into the USB storage device. This date can be provided to the technical support for analyzing the network condition.

<u>Step 1</u> Select Main Menu > INFO > NETWORK > Network Test.

The Network Test interface is displayed. See Figure 5-203.

	B INFO				1000 a 0+ 0
	VERSION	Online Unite 1	interni Land	elitere i la constante de la co	
	100	Notwork Trigt			
		Destroying 81			
	NETWORK	Test Denalt			
	CHANNEL INFO	National Souther Pa	chet Darkup		
		Device Nome	sdb5(UBB DIBK)		- Refresh
		Address			Browse
		Nene	192 366 30 13	Srifter Packet Size	Setter Packet Backup

Figure 5-203

- <u>Step 2</u> Connect a USB storage device to the Device.
- Step 3 Click Refresh.

The Device starts detecting the USB storage device and displays its name in the **Device Name** box.

- <u>Step 4</u> Select the route of the data that you want to capture and back up.
 - 1) In the Network Sniffer Packet Backup, click **Browse**.

The **Browse** interface is displayed. See Figure 5-204.

Bro	wse					
	Device Name Total Space Free Space	sda6(USB DISK) 15.60 GB 15.60 GB	Refrei	h		
	Address	19				
	Name		Size	Туре	Delete	Play
	O P		0.84222	Folder		
		20171103141044.csv	464 8	TELLE TELLE		
	printf_20171108		451.3 KB File			
	iii km <u>ag_printf_20171105172340 tx</u>		14.9 KB	Füe	8	
	New Folder				OK:	Back

Figure 5-204

2) Select the route.

📖 NOTE

- If there are several USB storage devices are connected to the Device, you can select from the **Device Name** list.
- Click Refresh to total space, free space and the file list in the selected USB storage device.
- In the case of insufficient capacity, click is to delete the needless files.
- Click New Folder to create a new folder in the USB storage device.
- Click Apply to save the route selection settings. The Test interface is displayed again.

Step 5 Click with to start packet capturing and backing up.

D NOTE

- Only the data packet of one LAN can be captured at one time.
- After capturing starts, you can exit the **Test** interface to perform other operations such as web login and monitoring.

Step 6 Click

to stop capturing.

The backup data is saved in the selected route under the naming style "LAN name-time.pcap." See Figure 5-205. You can open it by using Wireshark software.

otal Space	sda5(USB DISK) 15.60 GB				
ree Space	15 60 QB				
admss					
Name		Size	Туре	Defete	Play
C IP			Folder		
I RemoteCon	lg_22171103141044.csv	464 B	File		
@ peintt_20171	105172349.txt	451.3 KB			
III kmsg_printt	20171105172349.txt	14.9 KB	File		
EAN1-20171	107135215.pcap	1,18 MB	File		

Figure 5-205

5.17 Configuring Account Settings

You can add, modify and delete user accounts, groups, and ONVIF users, and set security questions for admin account.

D NOTE

- The user name supports 31 characters and group name supports 15 characters. The user name can be consisted of letter, number, "_", "@", ".".
- You can set maximum 64 users and 20 groups. The group name by "User" and "Admin" cannot be deleted. You can set other groups and define the relevant permissions. However, the admin account cannot be set randomly.
- You can manage the account by user and group and the name cannot be repeated. Every user must belong to a group, and one user only belongs to one group.

5.17.1 Configuring User Account

5.17.1.1 Adding a User Account

<u>Step 1</u> Select Main Menu > ACCOUNT > USER. The USER interface is displayed. See Figure 5-206.

Local Configurations 235

	1. ACCOUNT									ini	4	84 M
Ĵ,			Unir Name	Group	Modify	Determ	Status	MACA	Mamu			
			edgin	-section 1			Loge Local		admin's e			
	Covor User	A401										

Figure 5-206

Step 2 Click Add User.

The **Add User** interface is displayed. See Figure 5-207.

Add Daar		
Use Sume Presword Nemn Group edmin Presod Set	-	Continue Peessworks
Automy Stoken Playback All Account StoRage	Mostor	RESTRICTED INFO
SECURITY	S BYCKIA	DEVICE MAINTERANCE

Figure 5-207

<u>Step 3</u> Configure the settings for the parameters of adding a user account. See Table 5-68.

Parameter	Description
User Name	Enter a user name and password for the account
Password	Enter a user name and password for the account.
Confirm Password	Re-enter the password.

Parameter	Description			
Memo	Optional.			
Wemo	Enter a description of the account.			
User MAC	Enter user MAC address			
	Select a group for the account.			
Group	NOTE NOTE			
	The user rights must be within the group permission.			
Devied	Click Set to display Set interface.			
	Define a period during which the new account can login the device.			
Period	The new account cannot login the device during the time beyond			
	the set period.			
	In the Authority area, select the check boxes in the System tab,			
	Playback tab, and Monitor tab.			
Authority	NOTE NOTE			
	To manage the user account easily, when defining the user			
	account authority, it is recommended not to give the authority to the			
	common user account higher that the advanced user account.			
	Table 5-68			

<u>Step 4</u> Click **OK** to complete the settings.

Setting Permitted Period

<u>Step 1</u> Next to **Period**, click **Setting**.

The Set interface is displayed. See Figure 5-208.

	2	4	0	10	12	:14	16	- 218 -	- 201	22	24
C Sunday											
a Montey			Ť.								
z Tuesday											
- Wednesday											
a thursday											
a: Friday											
a Sylveby											
Default										WK.	Birck



<u>Step 2</u> Define the permitted period. By default, it is active all the time.

- Define the period by drawing.
 - ◇ Define for a specified day of a week: On the timeline, click the half-hour blocks to select the active period.

switches to 🔤. On the timeline of any selected day, click the half-hour blocks

to select the active periods, all the days with 🔤 will take the same settings.

♦ Define for all days of a week: Click **All**, all the **switches to .** On the

timeline of any day, click the half-hour blocks to select the active periods, all the days will take the same settings.

- Define the period by editing. Take Sunday as an example.
- 1) Click 🛱.

The **Period** interface is displayed. See Figure 5-209.

Period						
Current Date:	fortiny,					
Period 1	00:00 - 24:0	0 🖂				
Period 2	00:00 - 24 0	4				
Period.3	00:00 - 24:0	9.: I C				
Percel 4	00:00 -24 1					
Permit 5	00:00 - 24:0	•				
Period 6	00:00 - 24:0	0				
Courr						
1.4						
Skinday	Monday	Turnday	Wednesday 20	walter Tilday	Saturday	
					OK .	Back

Figure 5-209

- 2) Enter the time frame for the period and select the check box to enable the settings.
 - \diamondsuit There are six periods for you to set for each day.
 - Under Copy, select All to apply the settings to all the days of a week, or select specific day(s) that you want to apply the settings to.
- 3) Click **OK** to save the settings.

Step 3 Click OK.

5.17.1.2 Modify a User Account

<u>Step 1</u> Select Main Menu > ACCOUNT > USER.

The **USER** interface is displayed. See Figure 5-210.

26 ACCOUNT			ini	1 1 1 1 1 1 1
· URER	User Name Group	Modily Delete Status	MACAMemo	
	edmin annon	. B Logellocal		
Genvel Ussell				

Figure 5-210

Step 2 Click for the user account that you want to modify.

The **Modify User** interface is displayed. See Figure 5-211.

Modify User			
User Nerre Madby Posseerd Old Present New Present New Present Contro Persent Prompt Guestion Authority	achristi T	Group Marria	2****@9qq.com
All Account stokkog Security		BYSTEM INFO HETWORK DEVICE MAINTENA	AND MARINA, CONTROL ANCE OK Beek

Figure 5-211

<u>Step 3</u> Change the settings for password, user name, user group, user MAC, memo, period, and authority.

D NOTE

The new password can be set from 8 digits through 32 digits and contains at least two types from number, letter and special characters (excluding"", """, ";", ":" and "&").

For the admin account, you can enter or modify email address, enable/disable the unlock pattern, modify the security questions.

- In the Email Address box, enter the email address, and the click Save to save the setting.
- To use the unlock pattern, enable **Unlock Pattern**, click **I**, draw a pattern in the **Unlock Pattern** interface, and then click **Save** to save the setting.
- Configuring security questions.
- 1) Click Security Questions.

The **Security Questions** interface is displayed. See Figure 5-212.

Security Questions	
Successfully set. Please delete it first if you want to reset security question is	igain.
Question 1 With I is your framework contribution is brack? Answer	
Question 2 (What was that first nonter of your Keat boar?) Answer	
Question 3 (Monthe Bulleter of Your Decision Traff) Answer	
Detter D	siete

Figure 5-212

- 2) In the **Question** list, select questions and enter the answers in the Answer box.
- Click Setting to save the settings. You can use the security questions and answers to reset the password for admin account.

To reset the security questions, on the **Security Questions**, enter the correct answers for each question, and then click **Delete**.

<u>Step 4</u> Click **OK** to complete the settings.

5.17.1.3 Deleting a User Account

<u>Step 1</u> Select Main Menu > ACCOUNT > USER.

The **USER** interface is displayed. See Figure 5-213.

Lo ACCOUNT								ine!	-	14. B
+ UDER	1 User Nam	e Grae	Man	Determ	titetus	MACA	Mana			
GROUP	1 admin	samin.	1		Loget Local		aint her			
CRIME LIBERT	Add Uwe									

Figure 5-213

Step 2 Click for the user account that you want to delete. A **Message** is displayed.

 $\underline{Step \ 3} \quad Click \ \textbf{OK} \ to \ delete \ a \ user \ account.$

5.17.2 Configuring Group Account

5.17.2.1 Adding a Group

<u>Step 1</u> Select Main Menu > ACCOUNT > GROUP. The GROUP interface is displayed. See Figure 5-214.

2. ACCOUNT				1040 a	194 B
UDER	2 Group Nome	Modily	Delete	Merco	
+ GROUP	1 admin	1		antivisitions group	
CRANT USED	Add Stove	<i></i>		Antipological general g	

Figure 5-214

Step 2 Click Add Group.

The Add Group interface is displayed. See Figure 5-215.

Aut Group			
Giola Name Meno Automy Status	Monitor		
AT ACCOUNT STORAGE SECURITY	EVENT EVENT NACKUP	 SYNTEM OFFO NETWORK DEVICE MAINTENANCE 	CAMERA
			CK Book

Figure 5-215

Step 3	Configure the settings	for the parameters	of adding a group.	See Table 5-69.
--------	------------------------	--------------------	--------------------	-----------------

Parameter	Description
Group Name	Enter a name for the group.
Memo	Optional.
	Enter a description of the account.

Parameter	Description
Authority	In the Authority area, select the check boxes in the System tab,
	Playback tab, and Monitor tab.

Table 5-69

<u>Step 4</u> Click **OK** to complete the settings.

5.17.2.2 Modifying a Group

<u>Step 1</u> Select Main Menu > ACCOUNT > GROUP.

The **GROUP** interface is displayed. See Figure 5-216.

2. ACCOUNT				1041 a 9+ 8
UDER				
+ GROUP	2 Group Name 1 admin	Modily	Delete	Marco administration group
CRANT LIBER		÷.	ä	Read Burndi
	Add Group			

Figure 5-216

<u>Step 2</u> Click for the group account that you want to modify.

Step 3 The Modify Group interface is displayed. See Figure 5-217.

Modify Group			
Group Group Nime Mano Authority	user -		
A ACCOUN STORAGE SECURIT	EVENT	E SYSTEM NIFO NETWORK DEVICE MAINTENANCE	CAMERA
			Beck

Figure 5-217

<u>Step 4</u> Change the settings for group name, memo, and authority. <u>Step 5</u> Click **OK** to complete the settings.

5.17.2.3 Deleting a Group

<u>Step 1</u> Select Main Menu > ACCOUNT > GROUP.

The **GROUP** interface is displayed. See Figure 5-218.

2. ACCOUNT				ini a I	84 M
Uber	2 Group Name	0000000	1969-100	Merco	
+ GROUP	2 Group Name 1 admin	Mostly	Delete	aveninistiaen grasp	
CRAF USER	2 com	÷.			

Figure 5-218

Step 2 Click for the user account that you want to delete.

A Message is displayed.

<u>Step 3</u> Click **OK** to delete a group.

5.17.3 Configuring Onvif Users

The device manufactured by other company can connect to the Device through Onvif protocol by an authorized Onvif account.

D NOTE

The admin account is created for Onvif users right after the Device has been initialized <u>Step 1</u> Select **Main Menu > ACCOUNT > ONVIF USER**.

The ONVIF USER interface is displayed. See Figure 5-219.

Utility 1 June Name Grap Name Modily Detrie * Onvir used 1	20 ACCOUNT				1146) <u>a</u>	
		1 Unit Name	Group Name	Modify	Delate	
	GROUP					
ANULNE	 CINVIF USER 					
And Uner						
Add Line:						
Add Lines						
And the						
And Units						
Add Line:						
Add Units						
And Units						
Add Liner						
Add Uner						
Add Liter						
Add Uner						
		Add Uwr				

Figure 5-219




The Add User interface is displayed. See Figure 5-220.

Add User		
User Password		123
Confirm Password Group	admin	
	J,	OK Back

Figure 5-220

<u>Step 3</u> Enter user name, password, and select the group that you want this account to belong to.



5.18 Audio Management

Audio management function manages audio files and configures the playing schedule. When there is an alarm event, the audio file can be activated.

5.18.1 Configuring Audio Files

You can add audio files, listen to audio files, rename and delete audio files, and configure the audio volume.

Step 1 Select Main Menu > AUDIO > FILE MANAGER.

The FILE MANAGER interface is displayed. See Figure 5-221.

ALDIO					1061 E	194 M
SCHEDULK	0 File Name	Sm:	Play	Rename	Defete	
 FILE MANAGER 	C. V TOC MANY	38,00	- Hall	TUTANTE	Local	
	VOIDE : HERO Mode		Volume		•	
					Add	

Figure 5-221

Step 2 Click Add.

The Add interface is displayed. See Figure 5-222.

Device Name	sdb5(USB DISK)	- Refresh			
Total Space	15.60 GB				
Free Space	15.59 GB				
Address					
Name		Size	Туре	Delete	
(TIP)			Folder		
FISU6016U			Folder	.8	
RemoteCon	fg_20171103141044.csv	464 B			
Ill printt_2017	1105172349.bit	451,3 KB	Frite		
🖩 hmag_printt	20171105172349.tut	14.9 KB	File		
EAN1-2017	1107135215.pcap	1.18 MB			
E LAN1-2017	100135008.pcop	0.16 MB	File		
n seimise 🗉	p3	.2.14 MB	File		
			OK	Back	

<u>Step 3</u> Select the audio files that you want to import.

<u>Step 4</u> Click **OK** to start importing audio files from the USB storage device.

If the importing is successful, the audio files will display in the **FILE MANAGER** interface. See Figure 5-223.

	SCHEDUCK				
VICT. HXX Met VILT •	+ FARMANADIN	File Name	Play		
		1 100 Mede	Velame		

Figure 5-223

The imported audio files are automatically saved into the HDD, so you do not need to connect to the USB storage device to get the file next time.

- Click to play the audio file.
- Click location to rename the audio file.
- Click to delete the audio file.
- To decrease or increase the playing volume, move the slider to the left or to the right.

5.18.2 Configuring Playing Schedule for Audio Files

You can configure the settings to play the audio files during the defined time period.

Step 1 Select Main Menu > AUDIO > SCHEDULE.

The **SCHEDULE** interface is displayed. See Figure 5-224.

ALDIO						iiii	61 (a)	94.8
+ SCHEDULE	Period		File Name	men		Persient	Ouput	
FILE MINAGER	00:00	- 24 .00	None	89	Min-	0	Mic	1.0
	00:00	- 24 : 00	None	60		D	Mc	
	00 : 00	- 24 :00	hone	60		0	Mic	
	00 00	- 24 : 60	None	80	Mai.	8	NIC	
	00:00	- 24 100	None	60	Mit	0	Mic	
	00:00	- 24:00	None	60	Mit	0	Mc	10
							_	
					- is	Apply		llack

Figure 5-224

<u>Step 2</u> Configure the settings for the schedule parameters. See Table 5-70.

Parameter	Description
	In the Period box, enter the time. Select the check box to enable
Period	the settings.
	You can configure up to six periods.
File Name	In the File Name list, select the audio file that you want to play for
File Maille	this configured period.
Interval	In the Interval box, enter the time in minutes for how often you
Interval	want to repeat the playing.
Repeat	Configure how many times you want to repeat the playing in the
Переаг	defined period.
	Includes two options: MIC and Audio. It is MIC by default. The MIC
Output	function shares the same port with talkback function and the latter
	has the priority.

Table 5-70

D NOTE

- The finish time for audio playing is decided by audio file size and the configured interval.
- Playing priority: Alarm event > Talkback > Trial listening > Audio file.

<u>Step 3</u> Click **Apply** to complete the settings.

5.19 Storage Management

Storage management function manages the stored resources such as recorded video files and storage space. The function aims at providing easier operation and improving the storage efficiency.

5.19.1 Configuring Basic Settings

Step 1 Select Main Menu > STORAGE > BASIC.

The **BASIC** interface is displayed. See Figure 5-225.

A BTORAGE				l la	16) L.	9+ II
> BASIC SCHEDULE	HDD Hull Their Mode	Overwrite Time Length	61 + 1160 1	460		
HED MANAGER HED DETECT REC ENTIMATE FTP	Auto Osiele Old Films	Nove	*1			
					841/	flack

Figure 5-225

Step 2 Con	igure the settings	s for the basic settings	parameters. Se	e Table 5-71.
------------	--------------------	--------------------------	----------------	---------------

Parameter	Description				
	Configure the settings for the situation all the read/write discs are				
	full, and there is no more free disc.				
HDD Full	Select Stop Record to stop recording				
	Select Overwrite to overwrite the recorded video files				
	always from the earliest time.				
Pack Mode	Configure the time length and file length for each recorded video.				
Auto-Delete Old Files	Configure whether to delete the old files and if yes, configure the				
	N days.				

Table 5-71

<u>Step 3</u> Click **Apply** to complete the settings.

5.19.2 Configuring the Recording and Snapshot Schedule

The system starts recording and taking snapshot according to the configured schedule. For details, see "5.1.4.9 Configuring Recorded Video Storage Schedule" and "5.1.4.10 Configuring Snapshot Storage Schedule."

5.19.3 Configuring HDD Manager

You can view the HDD information, format HDD, and configure the HDD type through HDD manager.

Step 1 Select Main Menu > STORAGE > HDD MANAGER.

The HDD MANAGER interface is displayed. See Figure 5-226.

In the table, you can view the information of current HDD, such as device name, HDD type, status, total space and free space, and serial number of the HDD port.

	A STORAGE					(100)	1 14 11	
	SCHEDULE	10	levice Name	Physical Position	Туре	Health souths	Fields 0.00	
1	HDO MANAGERE			mentioent-1	Read/Write -	Nemal	8.00	
-					CARGE TRUME IN			
	HDO DETECT							
	RECENTIMATE:							
	FTP							
		Retrol	Format			Aiti	flack	

Figure 5-226

Step 2 Configuring the settings for the HDD manager.

- HDD type setting: In the **Type** list, select **Read/Write**, **Read-Only** or **Redundant**, and then click **Apply** to save the settings.
- HDD format: Select the HDD that you want to format, click **Format**, in the pop-up message, click **OK** to start formatting, and then following the onscreen message to complete formatting.

5.19.4 Configuring HDD Detecting Settings

```
D NOTE
```

Not all models support this function.

HDD detecting function detects the current status of HDD to let you know the HDD performance and replace the defective HDD.

5.19.4.1 Detecting HDD

You can detect HDD by key area detect and global detect.

- Key area detect: Detect the files saved in HDD. The detected bad track can be repaired by formatting. If there are no files in HDD, the system cannot detect the bad track.
- Global detect: Detect the whole HDD through Windows, which takes time and might affect the HDD that is recording the video.

Step 1 Select Main Menu > STORAGE > HDD DETECT > Detect.

The **Detect** interface is displayed. See Figure 5-227.

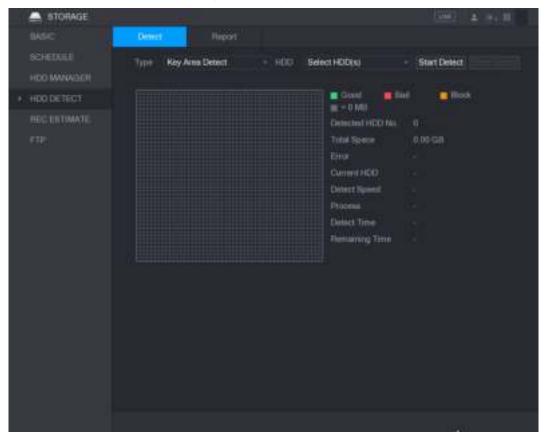


Figure 5-227

<u>Step 2</u> In the **Type** list, select **Key Area Detect** or **Global Detect**; and in the **HDD** list, select the HDD that you want to detect.

Step 3 Click Start Detect.

The system starts detecting the HDD. After detecting is completed, see Figure 5-228.

During detecting, click **Pause** to pause detecting, click **Continue** to restart detecting, and click **Stop Detect** to stop detecting.

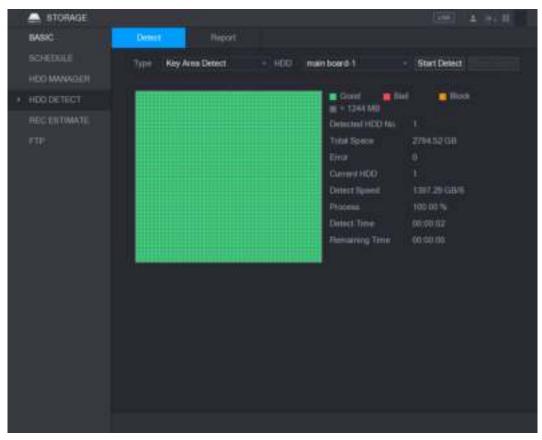


Figure 5-228

5.19.4.2 View Detecting Results

After the detecting is completed, you can view the detecting reports to find out the problem and replace the defective HDD to avoid data loss.

Step 1 Select Main Menu > STORAGE > HDD DETECT > Report.

The **Report** interface is displayed. See Figure 5-229.

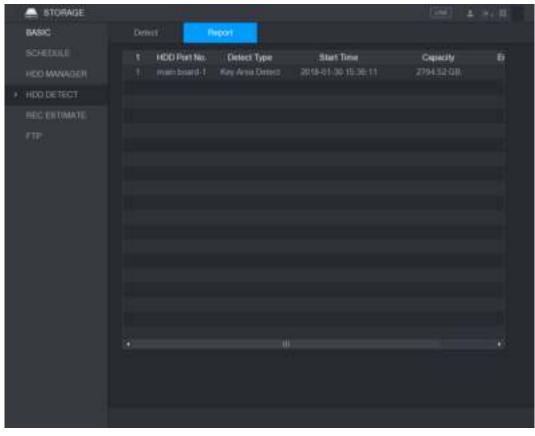


Figure 5-229

Step 2 Click

The **Details** interface is displayed. You can view detecting results and S.M.A.R.T reports. See Figure 5-230 and Figure 5-231.

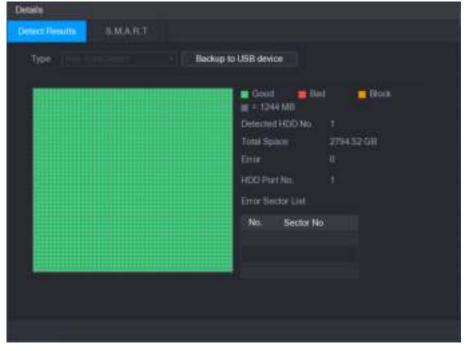


Figure 5-230

Port								
Model	WOCWD30ELIRokb3708	WOCWD30EURote370FYn						
360.5	WOWMC4N0428917	WOWMC4N0438937						
Sterue:	HDD state is good							
Describe:								
Smart ID	Amibute	Threshold	Value	Worst Value:	Current Value	te.		
	Read Error Rate			256				
	Spin Lip Time			170	3083			
	Start:Stop Count				- 5041			
	Finaltocated Sector Count	140	200	200				
	Sinek Einer Hate							
						- 1		

Figure 5-231

5.19.5 Configuring Record Estimate

Record estimate function can calculate how long you can record video according to the HDD capacity, and calculate the required HDD capacity according to the record period.

```
<u>Step 1</u> Select Main Menu > STORAGE > REC ESTIMATE.
```

The **REC ESTIMATE** interface is displayed. See Figure 5-232.


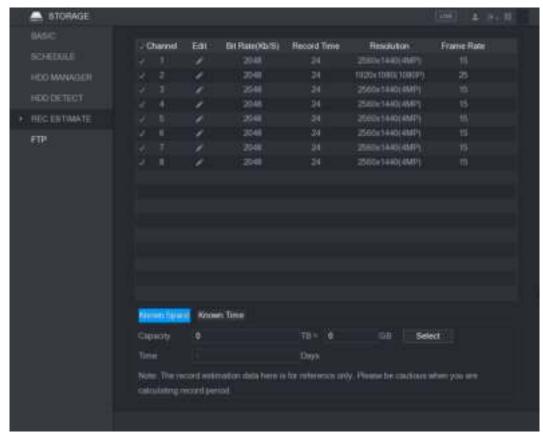


Figure 5-232





The Edit dialog box is displayed. See Figure 5-233.

You can configure the resolution, frame rate, bit rate and record time for the selected channel.

Edit			
Channel	1		
Resolution	2560*144	10(2560x1440) -	
Frame Rate	15		
Bit Rutin	4095	(32+6144)Kb/5	
Record Time	24		
Copy		OK	Back

Figure 5-233

Step 3 Click **OK** to save the settings.

Then the system will calculate the time period that can be used for storage according to the channels settings and HDD capacity.

NOTE NOTE

Click Copy to copy the settings to other channels.

Calculating Recording Time

Step 1 On the **REC ESTIMATE** interface, click the **Known Space** tab.

The Known Space interface is displayed. See Figure 5-234.



Figure 5-234

Step 2 Click Select.

The Select HDD(s) interface is displayed.

Step 3 Select the check box of the HDD that you want to calculate.

In the Known Space tab, in the Time box, the recording time is displayed. See Figure 5-235.

Capacity 7	TB=	7000	se 🗌	Select	
Time	Days				

Figure 5-235

Calculating HDD Capacity for Storage

<u>Step 1</u> On the **REC ESTIMATE** interface, click the **Known Time** tab. The **Known Time** interface is displayed. See Figure 5-236.



Figure 5-236

<u>Step 2</u> In the **Time** box, enter the time period that you want to record. In the **Capacity** box, the required HDD capacity is displayed. See Figure 5-237.

Known Space	Kingwin Tieme		
	22	Days	
Capacity		TBA (IIII)	GB
Note: The rec calculating re		tor returence only. Pie	asir be cautious when you are

Figure 5-237

5.19.6 Configuring FTP Storage Settings

You can store and view the recorded videos and snapshots on the FTP server.

Preparation for Configuration

Purchase or download a FTP server and install it on your PC.

D NOTE

For the created FTP user, you need to set the write permission; otherwise the upload of recorded videos and snapshots will be failed.

Configuration Steps

<u>Step 1</u> Select Main Menu > STORAGE > FTP.

The **FTP** interface is displayed. See Figure 5-238.

STORAGE						į,	nii 1	144 M
BASIC	Enable		2010	ETH ORM	tommienta	in the		
SCHEDULE		-						
HDD MANAGER	Histi₽	0.0						
ADVANCES	2001	22						
QUIDTA.	Aconymity							
HOD DETECT	Uper Name							
RECENTION	Pataword							
+ FTP	Remote Directory							
	FileLength(H)							
	Image Optical Intervals	<i>'a</i>						
	Channel	14						
	Week Day	Tue		Alatin			General	
	Period 1	00:00	124:00					
	Period 2	00±00	~24:00					
	Default					Anni	-	lack
	Default					éppi		lack

Figure 5-238

010	Configure the settings		1	O T.L. E 70
Ston 7	I ONTIDI ILA TNA SATTINAS	\mathbf{r} for the \mathbf{F} i \mathbf{D} softings	naramatare v	$\infty \Delta \Delta 1 \alpha n \Delta h_{-}/2$
			Darameters.	$J \subset C $ $I \subset J \subset I \subset J \subset I \subset J \subset I \subset J \subset I \subset J \subset J$

Parameter	Description			
Enable	Enable the FTP upload function.			
	Select FTP type.			
FTP type	FTP: Plaintext transmission.			
	SFTP: Encrypted transmission (recommended)			
Host IP	IP address of the PC that is installed with FTP server.			
Port	FTP: The default is 21.			
POIL	SFTP: The default is 22.			
Anonymity	Enter the user name and password to login the FTP server.			
User Name	Enable the anonymity function, and then you can login			
Password	anonymously without entering the user name and password.			
	Create folder on FTP server.			
	If you do not enter the name of remote directory, system			
	automatically creates the folders according to the IP and			
Domoto Directory	time.			
Remote Directory	• If you enter the name of remote directory, the system creates			
	the folder with the entered name under the FTP root			
	directory first, and then automatically creates the folders			
	according to the IP and time.			

Parameter	Description		
File Length(M)	 Enter the length of the uploaded recorded video. If the entered length is less than the recorded video length, only a section of the recorded video can be uploaded. If the entered length is more than the recorded video length, the whole recorded video can be uploaded. If the entered length is 0, the whole recorded video will be 		
Image Upload Interval (Sec.)	 uploaded. If this interval is longer than snapshot interval, the system takes the recent snapshot to upload. For example, the interval is 5 seconds, and snapshot interval is 2 seconds per snapshot, the system uploads the recent snapshot every 5 seconds. If this interval is shorter than snapshot interval, the system uploads the snapshot per the snapshot interval. For example, the interval is 5 seconds, and snapshot interval. For example, the interval is 5 seconds, and snapshot interval is 10 seconds per snapshot, the system uploads the snapshot. To configure the snapshot interval, select Main Menu > CAMERA > ENCODE > Snapshot. 		
Channel	Select the channel that you want to apply the FTP settings.		
Week Day	Select the week day and set the time period that you want to		
Period 1, Period 2	upload the recorded files. You can set two periods for each week day.		
Record type	Select the record type (Alarm, Intel, MD, and General) that you want to upload. The selected record type will be uploaded during the configured time period.		

Table 5-72

Step 3 Click Test.

The system pops up a message to indicate success or failure. If failed, please check the network connection or configurations.

<u>Step 4</u> Click **Apply** to complete the settings.

5.20 Configuring System Settings

5.20.1 Configuring General System Settings

You can configure the device basic settings, time settings, and holiday settings.

For details about basic and time settings, see "5.1.4.2 Configuring General Settings" and "5.1.4.3 Configuring Date and Time Settings."

To configure the holiday settings, do the following:

<u>Step 1</u> Select Main Menu > GENERAL > Holiday.

The Holiday interface is displayed. See Figure 5-239.

Oo SYSTEM					100 2 3	1
GENERAL	General	Date&Time	Holiday .			
NECUMITY SYNCTER MAANTAIN NATEROP DEPARTY UPGHADE	O State	. Nerv	Date	Period	Operation	
					Add a fittlidey	

Figure 5-239

Step 2 Click Add a Holiday.

The Add a Holiday interface is displayed. See Figure 5-240.

Add a Holiday	
Holiday Name	
Repeat Mode	Once Always
Holiday Range	Date O Week
Start Time	- 11 - 09
End Time	- 11 - 09
Add More	
	Add Cancel
	Cancel

Figure 5-240

<u>Step 3</u> Configure the holiday name, repeat mode, time range according to your actual situation.

Step 4 Click Add.

The added holiday information is displayed. See Figure 5-241.

D NOTE

Enable the Add More function, so you can continue adding holiday information.

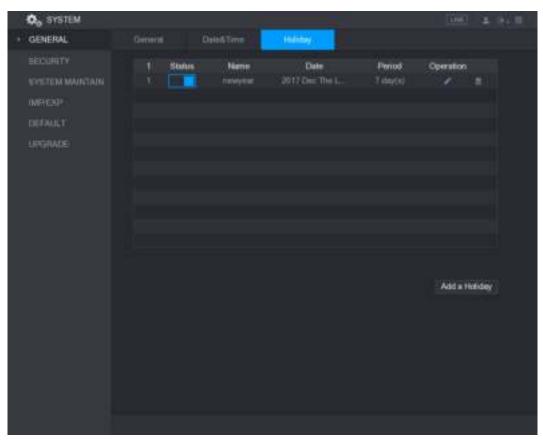


Figure 5-241

5.20.2 Configuring Security Settings

To ensure the network security and protect data, you can configure the access permission to the Device from host IP (host IP means the PC or server that has an IP).

- White list includes the host IP that are permitted to access the Device.
- Back list includes the host IP that are not permitted to access the Device.
- Updata time white list includes the host IP that are permitted to sync the Device time.

5.20.2.1 Configuring Access Right

<u>Step 1</u> Select **Main Menu > SYSTEM > SECURITY > Access Right**. The **Access Right** interface is displayed. See Figure 5-242.

	Co SYSTEM					1100 4	1 H + 10
	GENERAL	Access Right	Perswort Never				
1	SECURETY YYUTOM MAINTAIN MUYEXP DEFAULT	Type Erable Sourt Address End Address	Network Acce	aa Whitekat	Add IP Address Add IP Segment		
	UPGRADE:		Start Address	End A	dóresa	Edt	Delete
						Apply	flack

Figure 5-242

<u>Step 2</u> Configure the settings for the security parameters. See Table 5-73.

Parameter	Description			
Turno	In the Type list, you can select Limits of network-whitelist, Limits			
Туре	of network-blacklist, or Updata time-whitelist.			
Enable	Enable the security settings.			
Start Address	Enter a single IP address or a start IP address of a network			
Start Audress	segment.			
Add IP Address	Click Add IP Address to add a single IP address.			
End Address	Enter the end IP address of a network segment.			
	Click Add IP Segment to add the IP addresses from the start IP			
Add IP Segment	through the end IP.			
	NOTE NOTE			
	The system supports up to 64 IP addresses.			

Table 5-73

<u>Step 3</u> Click **Apply** to complete the settings.

5.20.2.2 Configuring System Service Settings

You can enable or disable the system internal services.

<u>Step 1</u> Select Main Menu > SYSTEM > SECURITY > System Service.

The **System Service** interface is displayed. See Figure 5-243.

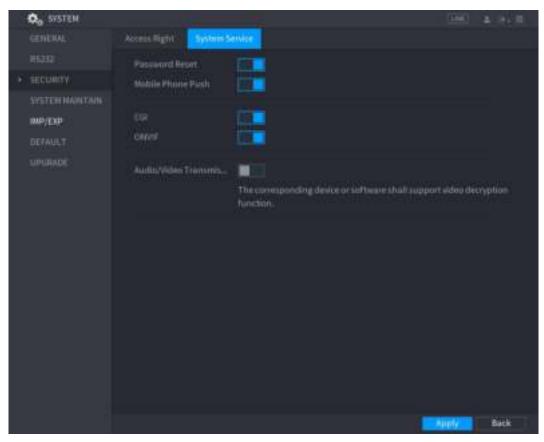


Figure 5-243

Stop 2	Configure the para	motors For details	see Table 5-74
<u>Step z</u>	Configure the para	meters. For details,	See Table 5-74.

Parameter	Description		
	Enable or disable the password reset function. It is enabled		
	by default.		
Password Reset	D NOTE		
	If the password reset function is disabled, you can find back		
	the password by the security questions. Make sure you have		
	configured the security questions.		
	If you enable this function, the snapshots that are activated		
Mobile Phone Push	by the alarm event on the Device can be sent to mobile		
	phone.		
	This function is enabled by default.		
CGI	The device can access through CGI protocol.		
ONVIF The device can access through ONVIF protocol.			
	Enable or disable the audio and video stream encryption. If		
Audio/Video Transmission	enabled, make sure the devices or software support		
	decryption.		

Table 5-74

5.20.3 Configuring System Maintenance Settings

When the Device has been running for a long time, you can configure the auto reboot when the Device is not working. You can also configure the case fan mode to reduce noise and extend the service life.

Step 1 Select Main Menu > SYSTEM > SYSTEM MAINTAIN.

The SYSTEM MAINTAIN interface is displayed. See Figure 5-244.

O, SYSTEM			
GENERAL	Note Helicen		
SECURITY	Never		
• SYNTEM MAINTAIN	Case Eas Made		
IMPLEXP			
DEFAULT	Awaysrun		
UPGEADE			
and a state of the			
		ANIT	Back

Figure 5-244

<u>Step 2</u> Configure the settings for the system maintenance parameters. See Table 5-75.

Parameter	Description			
Auto Reboot	In the Auto Reboot list, select the reboot time.			
Case Fan Mode	In the Case Fan Mode list, you can select Always run or Auto . If you select Auto , the case fan will stop or start according to the external conditions such as the Device temperature.			
	Not all models support this function, and it is only supported on the local configuration interface.			

Table 5-75

Step 3 Click Apply to complete the settings.

5.20.4 Exporting and Importing System Settings

You can export or import the Device system settings if there are several Devices that require the same setup.

D NOTE

- The **IMP/EXP** interface cannot be opened if the backup operation is ongoing on the other interfaces.
- When you open the **IMP/EXP** interface, the system refreshes the devices and sets the current directory as the first root directory.

• Click Format to format the USB storage device.

Exporting System Settings

```
<u>Step 1</u> Select Main Menu > SYSTEM > IMP/EXP.
```

The IMP/EXP interface is displayed. See Figure 5-245.

O, SYSTEM			100 1 H- 10
GENERAL SECURETY SYSTEM MAINTAIN MIRTERP	Device Name Total Renor Free Space	• Behmin Farmat	
DEFAULT	Address		
UPGRADE		(Size) Type	Delete :
	New Folder		Import Export

Figure 5-245

<u>Step 2</u> Insert a USB storage device into one of the USB ports on the Device.

Step 3 Click **Refresh** to refresh the interface.

The connected USB storage device is displayed. See Figure 5-246.

Device Nerro					
	MB5(USB DISK)	· Refresh	Format		
Total Space	15.60 GB				
These States	15.41.68				
	is an ore				
Address					
Name		5.00	Турн	Delete	
C IP					
 Fisuariau 			Folder		
IVES			Folder		
E RemateCord	HamileContg. 20171103141044.csz		.File		
E print 20171	1051172349.04	451310			
ill bring print?	20171105122340 (at	14.0 KM			
E 1441-20171	1071125215.print	1.16 MIE			
E LAN1-20171	109 135000 print	9.10 ME	Pile.		
		2.14 ME			
E lienomber m	p3	6.05 ME	File		
II/ VID_201711	05_135734.mp4	40.02 MS	ENE:		
E print_20171	113101548.64	30.29 505	File		
■ IP FT2 Camera 20171116100200 201711		307.2 KR	File		
B print, 20171	117110548.bt	10.91 583			
in kning preitt	2011111111048.64	54.8748			
	Free Space Address Dens D D D D D D D D D D D D D D D D D D D	Free: 15.41 GB Address: / Address: / Marrie / Marrie // M	Free: Space 15.41 GB Automa J Name Size IP Size IP Found State IP Found State	Free: Spece: 15.41 GB Address: / Name Size Type IP Falsor Falsor IP <thfalsor< th=""> Falsor</thfalsor<>	Free: Spece 15.41 GB Address / Name / Name Now Type Delete IP Fiscas # IP Fiscas #

Figure 5-246

Step 4 Click Export.

There is a folder under the name style of "Config_[YYYYMMDDhhmmss]". Double-click this folder to view the backup files.

Importing System Settings

- <u>Step 1</u> Insert a USB storage device containing the exported configuration files from another Device) into one of the USB ports on the Device.
- <u>Step 2</u> Select Main Menu > SYSTEM > IMP/EXP.
 - The **IMP/EXP** interface is displayed.
- <u>Step 3</u> Click **Refresh** to refresh the interface.

The connected USB storage device is displayed.

- <u>Step 4</u> Click on the configuration folder (under the name style of "Config_[YYYYMMDDhhmmss]") that you want to import.
- Step 5 Click Import.

The Device will reboot after the imported is succeeded.

5.20.5 Restoring Default Settings

📖 NOTE

Only Admin account supports this function.

You can select the settings that you want to restore to the factory default.

<u>Step 1</u> Select Main Menu > SYSTEM > DEFAULT.

The **DEFAULT** interface is displayed. See Figure 5-247.

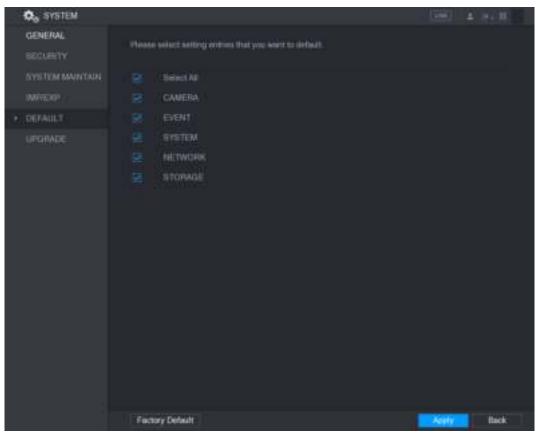


Figure 5-247

<u>Step 2</u> Restore the settings.

- Select the settings that you want to restore, and then click **Apply**. The system starts restoring the selected settings.
- Click **Factory Default**, and then click **OK**. The system starts restoring the whole settings.

5.20.6 Upgrading the Device

5.20.6.1 Upgrading File

- <u>Step 1</u> Insert a USB storage device containing the upgrade files into the USB port of the Device.
- <u>Step 2</u> Select Main Menu > SYSTEM > UPGRADE. The UPGRADE interface is displayed. See Figure 5-248.

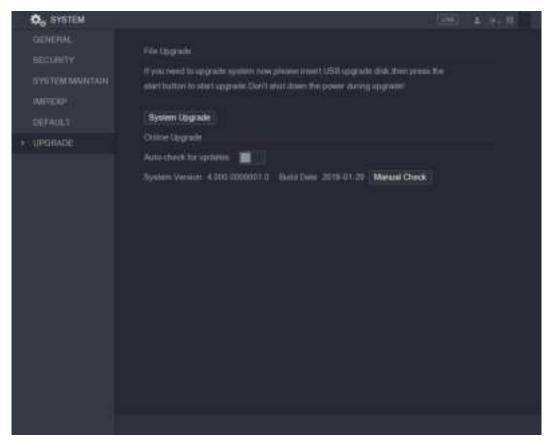


Figure 5-248

Step 3 Click System Upgrade.

The System Upgrade interface is displayed. See Figure 5-249.

Nexus Name	water (USIII DISK)	- Refresh		
utor Tipocar	15.60 G8			
tere Space	15.00 GB			
Without				
Norm		5k2n	Type:	Delete
- 1			Faline	
I RatroleCon	ig_20171103141044.cm/	454 8	F#e	
10 prost 20171	105172548 64	451.3 KB		4
i imig preit	20111103173340 58	14.0108		
# LANJ-20171107138245 post				
Andrew Piler				

Figure 5-249

<u>Step 4</u> Click the file that you want to upgrade.

The selected file is displayed in the Update File box.

Step 5 Click Start.

5.20.6.2 Performing Online Upgrade

When the Device is connected to Internet, you can use online upgrade function to upgrade the system.

Before using this function, you need to check if there is any new version by auto check or manual check.

- Auto check: The Device checks if there is any new version available at intervals.
- Manual check: Perform real-time check if there is any new version available.



Ensure the correct power supply and network connection during upgrading; otherwise the upgrading might be failed.

Step 1 Select Main Menu > SYSTEM > UPGRADE.

The UPGRADE interface is displayed. See Figure 5-250.

O. SYSTEM	1200	A ++ 11
CENERAL GENERAL SECURITY SYNTYM MAINTAIN MAYEAP CEFAULT * UPGRADE	File Upgrade. If you result to apprade system now please insert USU opgrade disk, then press the start builton to start opgrade. Don't shull down the power during opgrade! System Upgrade Come Upgrade Auto theck for options	
	System Version 100020000010 Ibits Duris 2018-01-20 Meriad Chick	

Figure 5-250

<u>Step 2</u> Check if there is any new version available.

- Auto check: Enable Auto-check for updates.
- Manual check: Click Manual Check.

The system starts checking the new versions. After checking is completed, the check result is displayed.

- If the "It is the latest version" text is displayed, you do not need to upgrade.
- If the text indicating there is a new version, please go the step 3. See Figure 5-251.


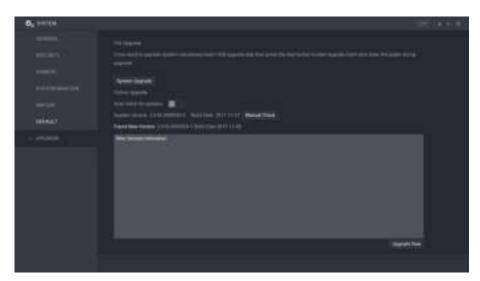


Figure 5-251



5.20.6.3 Uboot Upgrading



- Under the root directory in the USB storage device, there must be "u-boot.bin.img" file and "update.img" file saved, and the USB storage device must be in FAT32 format.
- Make sure the USB storage device is inserted; otherwise the upgrading cannot be performed.

When starting the Device, the system automatically check if there is a USB storage device connected and if there is any upgrade file, and if yes and the check result of the upgrade file is correct, the system will upgrade automatically. The Uboot upgrade can avoid the situation that you have to upgrade through +TFTP when the Device is halted.

5.21 Viewing Information

You can view the information such as log information, HDD information, and version details

5.21.1 Viewing Version Details

You can view the version details such as device model, system version, and build date. Select **Main Menu > INFO > VERSION**, the **VERSION** interface is displayed. See Figure 5-252.

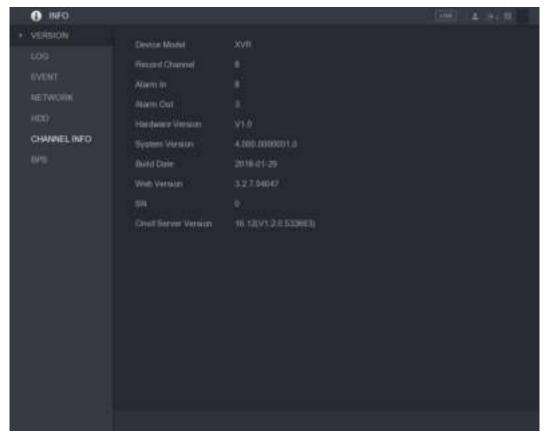


Figure 5-252

5.21.2 Viewing Log Information

You can view and search the log information.

D NOTE

- If there is no HDD installed, the system can save up to 10,000 logs.
- If there is HDD installed and has been formatted, the system can save up to 500,000 logs.
- If there is HDD installed, the logs about system operations are saved in the memory of the Device and other types of logs are saved into the HDD. If there is no HDD installed, the other types of logs are also saved in the memory of the Device.
- When formatting the HDD, the logs will not be lost. However, if you take out the HDD from the Device, the logs might be lost.

<u>Step 1</u> Select Main Menu > INFO > LOG.

The **LOG** interface is displayed. See Figure 5-253.

	O INFO					(100)	1 H. H.
		Type	WE				
(TB	LOG	Sligt Time	2010-01-29	00:00:00			
	EMORT RETWORK HDD CHANNELINED BRU	End Time	2018 - 01 - 29 Event	60 :00 :00			Beach
			÷.	(60 -))	annaith a - th		Details Clear

Figure 5-253

- <u>Step 2</u> In the **Type** list, select the log type that you want to view (**System**, **Config**, **Storage**, **Record**, **Account**, **Clear**, **Playback**, and **Connection**) or select **All** to view all logs.
- <u>Step 3</u> In the **Start Time** box and **End Time** box, enter the time period to search, and then click **Search**.

The search results are displayed. See Figure 5-254.

O INFO	8			(100) & (4+)	U.
		AE			
+ 200	Тура				
	Start Time	2018-01-30 00	00 00		
	End Time	2018-01-31 00	¢0:00	Search	
NETWORK	30 Log Time	Event			
HDO	25 2010-01-30	1451.11 Base HETW	ORDOR scattling!		
CHANNEL:INFO:	28 2018-01-30	145121 HDD Anount	1>, Current Working HDD.		
	27 2018-01-38	1451:22 Save -P2P+ c	collig!		
095	28: 2018-01-00	1451.22 Save +P2P> 0	ovigi		
	25 2018-01-30	1451(3) Save 498, Ma	enter constigi		
	30: 2019-01-30	MALTIN BMARTIN			
	31. 2010-01-00	HATTHE SMARTH			
	32 2018-01-30	1452.31 Add Group-or	mee		
	33 2018-61-30	1452-31 Add Group-up			
	34. 2010-01-30	145231 Add UnervOn	et adminis		
	35 2018-01-30	145231 User logged in			
	38 2010-01-30	14.52.31 -Save -GENE	WL= contig!		
		HANDON Bave - HETWO			
	38 2015-01-30	145239 Save <gdnd< td=""><td>AL> control</td><td></td><td></td></gdnd<>	AL> control		
		HEALTH AND DESCRIPTION OF THE OWNER OWN			
				Backup Details Clear	

Figure 5-254

D NOTE

- Click **Details** or double-click the log that you want to view, the **Detailed Information** interface is displayed. Click **Next** or **Previous** to view more log information.
- Click **Backup** to back up the logs into the USB storage device.
- Click Clear to remove all logs.

5.21.3 Viewing Event Information

You can view the event information of the Device and channel.

Select Main Menu > INFO > EVENT, the EVENT interface is displayed. See Figure 5-255.

	0 MEO				1000	4	A. 18	4
		Alarm Type Video Loss	1345078	Alam Status				
10	6VENT							
	RETWORK							
	HDD/							
	CHANNEL INFO							
	00%							
		Retruti						

Figure 5-255

5.21.4 Viewing Network Information

You can view the online users, network data transmission details, and test network. For details about testing network, see "5.16.2.1 Testing the Network."

5.21.4.1 Viewing Online Users

You can view the online user information and block any user for a period of time.

Select **Main Menu > INFO > NETWORK > Online users**, the **Online users** interface is displayed. See Figure 5-256.

	0 INFO				1000 a 10+ 10
	VERSION .	Didne Usie	and Network 1	el (
		Uner Norter	pi 10214612100	Uwr Logn Time	Ukosk.
(#)	NETWORK				
	HDO				
	CHANNEL INFO:				
		lines 00			
_					

Figure 5-256

To block an online user, click and then enter the time that you want to block this user. The maximum value you can set is 65535.

The system detects every 5 seconds to check if there is any user added or deleted, and update the user list timely.

5.21.4.2 Viewing the Network Load

Network load means the data flow which measures the transmission capability. You can view the information such as data receiving speed and sending speed.

<u>Step 1</u> Select Main Menu > INFO > NETWORK > Network Load.

The Network Load interface is displayed. See Figure 5-257.

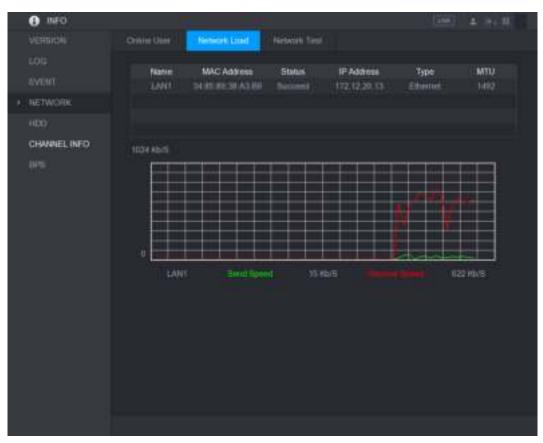


Figure 5-257

Step 2 Click the LAN name that you want to view, for example, LAN1.

The system displays the information of data sending speed and receiving speed.

- The default display is LAN1 load.
- Only one LAN load can be displayed at one time.

5.21.5 Viewing HDD Information

You can view the HDD quantity, HDD type, total space, free space, status, and S.M.A.R.T information.

Select Main Menu > INFO > HDD, the HDD interface is displayed. See Figure 5-258.

INFO						
		Device Name	Physical Position	Туре	Total Spice	Free Space
					17230	1 - Ug
	1.1	348	main bound 1	Read/Write	2,712 TH	: 0.00 MII
RETWORK						
► H00;						
CHANNEL INFO:						
0.95						

Figure 5-258

Parameter	Description
Nie	Indicates the number of the currently connected HDD. The asterisk (*)
No.	means the current working HDD.
Device Name	Indicates name of HDD.
Physical Position	Indicates installation position of HDD.
Туре	Indicates HDD type.
Total Space	Indicates the total capacity of HDD.
Free Space	Indicates the usable capacity of HDD.
Status	Indicates the status of the HDD to show if it is working normally.
S.M.A.R.T	View the S.M.A.R.T reports from HDD detecting.

Table 5-76

5.21.6 Viewing Channel Information

You can view the camera information connected to each channel.

Select **Main Menu > INFO > CHANNEL INFO**, the **CHANNEL INFO** interface is displayed. See Figure 5-259.

8 880		
VERSION		
	Charvet	Format
		10000
RETWORK		
HDD/		
CHANNEL INFO.		
00% .		

Figure 5-259

5.21.7 Viewing Data Stream Information

You can view the real-time data stream rate and resolution of each channel. Select **Main Menu > INFO > BPS**, the **BPS** interface is displayed. See Figure 5-260.

Figure 5-260

5.21.8 Viewing PoC Information

D NOTE

Not all models support this function.

You can view the information about PoC camera, such as quantity, mode, and power consumption.

Select **Main Menu > INFO > PoC INFO**, the **PoC INFO** interface is displayed. See Figure 5-261.

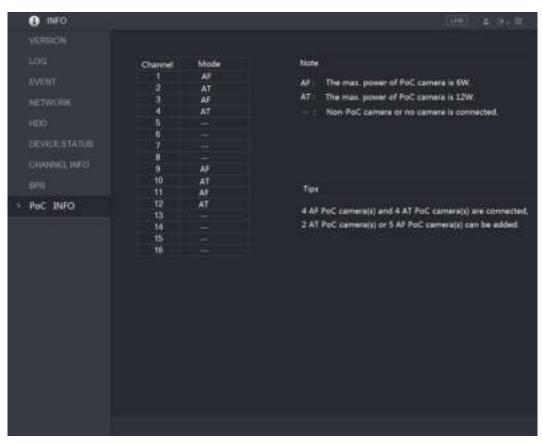


Figure 5-261

Parameter	Description
AF	The maximum power of PoC camera is 6 W.
AT	The maximum power of PoC camera is 12 W.
	Non PoC camera or no camera is connected.

Table 5-77

5.22 Logout the Device

On the top right of the Main Menu interface or on any interface after you have entered the Main

Menu, click

- Select Logout, you will log out the device.
- Select **Reboot**, the Device will be rebooted.
- Select **Shutdown**, the Device will be turned off.

6

🛄 NOTE

- The interfaces in the Manual are used for introducing the operations and only for reference. The actual interface might be different dependent on the model you purchased. If there is inconsistency between the Manual and the actual product, the actual product shall govern.
- The Manual is a general document for introducing the product, so there might be some functions described for the Device in the Manual not apply to the model you purchased.
- Besides Web, you can use our Smart PSS to login the device. For detailed information, please refer to Smart PSS user's manual.

6.1 Connecting to Network

📖 NOTE

- The factory default IP of the Device is 192.168.1.108.
- The Device supports monitoring on different browsers such as Safari, fire fox, Google on Apple PC to perform the functions such as multi-channel monitoring, PTZ control, and device parameters configurations.
- <u>Step 1</u> Check to make sure the Device has connected to the network.
- <u>Step 2</u> Configure the IP address, subnet mask and gateway for the PC and the Device. For details about network configuration of the Device, see "5.1.4.4 Configuring Network Settings."
- <u>Step 3</u> On your PC, check the network connection of the Device by using "ping ***.***.***". Usually the return value of TTL is 255.

6.2 Logging in the Web

<u>Step 1</u> Open the IE browser, enter the IP address of the Device, and then press Enter. The Login in dialog box is displayed. See Figure 6-1.

(a)hu	la Login in
admin	
٥	
TCP	
	Forgot Password?
Lo	gin

Figure 6-1

<u>Step 2</u> Enter the user name and password.

D NOTE

- The default administrator account is **admin**. The password is the one that was configured during initial settings. To security your account, it is recommended to keep the password properly and change it regularly.
- Click end to display the password.
- If you forgot the password, click **Forgot Password?** to reset the password. For details about resetting the password, see "6.3 Resetting Password."

Step 3 Click Login.

6.3 Resetting Password

You can reset the password by the following methods when you forgot the password for admin account.

- If the password reset function is enabled, you can use mobile phone to scan the QR code on the local interface or web interface to reset the password.
- If the password reset function is disabled, please enable this function on the local interface first. For details, see "5.20.2.2 Configuring System Service Settings."

<u>Step 1</u> Login the Web of the Device.

The Login in dialog box is displayed. See Figure 6-2.

@Jhu	a Loginin
admin	
0	
TOP	
	Forgot Password?
Log	in

Figure 6-2

Step 2 Click Forgot Password?

The Reset Password interface is displayed. See Figure 6-4.


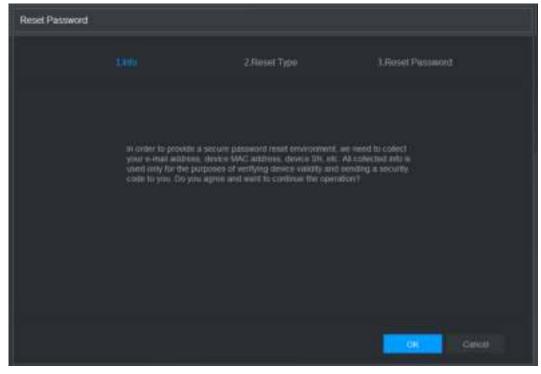


Figure 6-3



The reset type interface is displayed. See Figure 6-4.



Figure 6-4

<u>Step 4</u> Follow the onscreen instructions to scan the QR code and get the security code.



- You can get the security code twice by scanning the same QR code. If you need to
 get the security code once again, please refresh the interface.
- Please use the security code received in your email box to reset the password within 24 hours; otherwise the security code becomes invalid.
- Wrong security code entrance up to five times will cause the security code locked for five minutes. After five minutes, you can continue to use this security code.
- <u>Step 5</u> In the **Security code** box, enter the security code received in your reserved email box.
- Step 6 Click Next.

The new password resetting interface is displayed. See Figure 6-5

Reset Password		
	алын түрс 💈 🦊 алын төрө	
	Due Tame admin	
	Parment	
	Conton Parsault	
		Careff Same

Figure 6-5

Step 7 In the **Password** box, enter the new password and enter it again in the **Confirm Password** box.

D NOTE

The new password can be set from 8 characters through 32 characters and contains at least two types from number, letter and special characters (excluding"", """, ";", ":" and "&").

<u>Step 8</u> Click **Save**. The password resetting is started.

After resetting is completed, a pop-up message is displayed to indicate the result and you will see the login interface is displayed. Then you can use the new password to login the web.

6.4 Introducing Web Main Menu

After you have logged in the Web, the main menu is displayed. See Figure 6-6. For detailed operations, you can refer to "5 Local Configurations."



Figure 6-6

No.	lcon	Description
1		Includes configuration menu through which you can configure camera settings, network settings, storage settings, system settings, account settings, and view information.
2	None	Displays system date and time.
3	•	When you point to . the current user account is displayed.
4	•	Click elect Logout, Reboot, or Shutdown according to your actual situation.
5	948 9	 Displays Cell Phone Client and Device SN QR Code. Cell Phone Client: Use your mobile phone to scan the QR code to add the device into the Cell Phone Client, and then you can start accessing the Device from your cell phone. Device SN: Obtain the Device SN by scanning the QR code. Go to the P2P management platform and add the Device SN into the platform. Then you can access and manage the device in the WAN. For details, please refer to the P2P operation manual. You can also configure P2P function in the local configurations. See "5.1.4.5 Configuring P2P Settings."
6		Displays the web main menu.

No.	lcon	Description
7	None	 Includes eight function tiles: LIVE, VIDEO, ALARM, IVS, IoT, BACKUP, DISPLAY, and AUDIO. Click each tile to open the configuration interface of the tile. LIVE: You can perform the operations such as viewing real-time video, configuring channel layout, setting PTZ controls, and using smart talk and instant record functions if needed. VIDEO: Search for and play back the recorded video saved on the Device. ALARM: Search for alarm information and configure alarm event actions. IVS: Configure the behavior detections by drawing rules for detecting tripwire, intrusion, abandoned objects, and missing objects. IoT: You can view, search and export the temperature and humidity data of camera and configure the alarm event settings. BACKUP: Search and back up the video files to the local PC or external storage device such as USB storage device. DISPLAY: Configure the display effect such as displaying content, image transparency, and resolution, and enable the zero-channel function. AUDIO: Manage audio files and configure the playing schedule. The audio file can be played in response to an alarm event if the voice prompts function is enabled.

Table 6-1

7 FAQ

1. DVR cannot boot up properly.

- There are following possibilities:
- Input power is not correct.
- Power connection is not correct.
- Power switch button is damaged.
- Program upgrade is wrong.
- HDD malfunction or something wrong with HDD jumper configuration.
- Seagate DB35.1, DB35.2, SV35 or Maxtor 17-g has compatibility problem. Please upgrade to the latest version to solve this problem.
- Front panel error.
- Main board is damaged.

2. DVR frequently shuts down or stops running.

There are following possibilities:

- Input voltage is not stable or it is too low.
- HDD malfunction or something wrong with jumper configuration.
- Button power is not enough.
- Front video signal is not stable.
- Working environment is too harsh, too much dust.
- Hardware malfunction.

3. Hard disk cannot be detected.

There are following possibilities:

- HDD is broken.
- HDD jumper is damaged.
- HDD cable connection is loose.
- Main board SATA port is broken.

4. There is no video output whether it is one-channel, multiple-channel or all-channel output.

There are following possibilities:

- Program is not compatible. Please upgrade to the latest version.
- Brightness is 0. Please restore factory default setup.
- There is no video input signal or it is too weak.
- Check privacy mask setup or your screen saver.
- DVR hardware malfunctions.

5. Real-time video color is distorted.

There are following possibilities:

- When using BNC output, NTSC and PAL setup is not correct. The real-time video becomes black and white.
- DVR and monitor resistance is not compatible.
- Video transmission is too long or degrading is too huge.
- DVR color or brightness setup is not correct.

6. Cannot search local records.

There are following possibilities:

- HDD jumper is damaged.
- HDD is broken.
- Upgraded program is not compatible.
- The recorded file has been overwritten.
- Record function has been disabled.

7. Video is distorted when searching local records.

There are following possibilities:

- Video quality setup is too low.
- Program read error, bit data is too small. There is mosaic in the full screen. Please restart the DVR to solve this problem.
- HDD data jumper error.
- HDD malfunction.
- DVR hardware malfunctions.

8. No audio under monitor state.

There are following possibilities:

- It is not a power picker.
- It is not a power acoustics.
- Audio cable is damaged.
- DVR hardware malfunctions.

9. There is audio under monitor state but no audio under playback state.

There are following possibilities:

- Setup is not correct. Please enable audio function.
- Corresponding channel has no video input. Playback is not continuous when the screen is blue.

10. System time is not correct.

There are following possibilities:

- Setup is not correct.
- Battery contact is not correct or voltage is too low.
- Crystal oscillator is broken.

11. Cannot control PTZ on DVR.

There are following possibilities:

- Front panel PTZ error.
- PTZ decoder setup, connection or installation is not correct.
- Cable connection is not correct.
- PTZ setup is not correct.
- PTZ decoder and DVR protocol is not compatible.
- PTZ decoder and DVR address is not compatible.
- When there are several decoders, please add 120 Ohm between the PTZ decoder A/B cables furthest end to delete the reverberation or impedance matching. Otherwise the PTZ control is not stable.
- The distance is too far.

12. Motion detection function does not work.

There are following possibilities:

- Period setup is not correct.
- Motion detection zone setup is not correct.

- Sensitivity is too low.
- For some versions, there is hardware limit.

13. Cannot log in client-end or web.

There are following possibilities:

- For Windows 98 or Windows ME user, please update your system to Windows 2000 sp4. Or you can install client-end software of lower version. Please note right now, our DVR is not compatible with Windows VISTA control.
- ActiveX control has been disabled.
- No dx8.1 or higher. Please upgrade display card driver.
- Network connection error.
- Network setup error.
- Password or user name is invalid.
- Client-end is not compatible with DVR program.

14. There is only mosaic no video when preview or playback video file remotely.

There are following possibilities:

- Network fluency is not good.
- Client-end resources are limit.
- There is multiple-cast group setup in DVR. This mode can result in mosaic. Usually we do not recommend this mode.
- There is privacy mask or channel protection setup.
- Current user has no right to monitor.
- DVR local video output quality is not good.

15. Network connection is not stable.

There are following possibilities:

- Network is not stable.
- IP address conflict.
- MAC address conflict.
- PC or DVR network card is not good.

16. Burn error /USB back error.

There are following possibilities:

- Burner and DVR are in the same data cable.
- System uses too much CPU resources. Please stop record first and then begin backup.
- Data amount exceeds backup device capacity. It may result in burner error.
- Backup device is not compatible.
- Backup device is damaged.

17. Keyboard cannot control DVR

There are following possibilities:

- DVR serial port setup is not correct.
- Address is not correct.
- When there are several switchers, power supply is not enough.
- Transmission distance is too far.

18. Alarm signal cannot be disarmed.

There are following possibilities:

- Alarm setup is not correct.
- Alarm output has been open manually.
- Input device error or connection is not correct.

• Some program versions may have this problem. Please upgrade your system.

19. Alarm function is null.

There are following possibilities:

- Alarm setup is not correct.
- Alarm cable connection is not correct.
- Alarm input signal is not correct.
- There are two loops connect to one alarm device.

20. Remote control does not work.

There are following possibilities:

- Remote control address is not correct.
- Distance is too far or control angle is too small.
- Remote control battery power is low.
- Remote control is damaged or DVR front panel is damaged.

21. Record storage period is not enough.

There are following possibilities:

- Camera quality is too low. Lens is dirty. Camera is installed against the light. Camera aperture setup is not correct.
- HDD capacity is not enough.
- HDD is damaged.

22. Cannot playback the downloaded file.

There are following possibilities:

- There is no media player.
- No DXB8.1 or higher graphic acceleration software.
- There is no DivX503Bundle.exe control when you play the file transformed to AVI via media player.
- No DivX503Bundle.exe or ffdshow-2004 1012 .exe in Windows XP OS.

23. Forgot local menu operation password or network password

Please contact your local service engineer or our sales person for help. We can guide you to solve this problem.

24. When I login via HTTPS, a dialogue says the certificate for this website is for other address.

Please create server certificate again.

25. When I login via HTTPS, a dialogue says the certificate is not trusted.

Please download root certificate again.

26. When I login via HTTPS, a dialogue says the certificate has expired or is not valid yet.

Please make sure your PC time is the same as the device time.

27. I connect the general analog camera to the device, there is no video output.

There are following possibilities:

- Check camera power supplying, data cable connection and other items.
- This series device does not support the analog camera of all brands. Please make sure the device supports general standard definition analog camera.

28. I connect the standard definition analog camera or the coaxial camera to the device, there is no video output.

There are following possibilities:

• Check camera power supplying, or camera data cable connection.

 For the product supports analog standard definition camera/HD camera, you need to go to the Main Menu > CAMERA > CHANNEL TYPE to select corresponding channel type and then restart the DVR.

29. I cannot connect to the IP channel.

There are following possibilities:

- Check the camera is online or not.
- Check IP channel setup is right or not (such as IP address, user name, password, connection protocol, and port number).
- The camera has set the whitelist (Only the specified devices can connect to the camera).

30. After I connected to the IP channel, the one-window output is OK, but there is no

multiple-window output.

There are following possibilities:

- Check the sub stream of the camera has been enabled or not.
- Check the sub stream type of the camera is H.264 or not.
- Check the device supports camera sub stream resolution or not (such as 960H, D1, and HD1).

31. After I connected to the IP channel, the multiple-window output is OK, but there is no one-window output.

There are following possibilities:

- Check there is video from the IP channel or not. Please go to the Main Menu > INFO > BPS to view bit stream real-time information.
- Check the main stream of the camera has been enabled or not.
- Check the main stream type of the camera is H.264 or not.
- Check the device supports camera main stream resolution or not (such as 960H, D1, and HD1).
- Check camera network transmission has reached the threshold or not. Please check the online user of the camera.

32. After I connected to the IP channel, there is no video output in the one-window or the multiple-window mode. But I can see there is bit stream.

There are following possibilities:

- Check the main stream/sub stream type of the camera is H.264 or not.
- Check the device supports camera main stream/sub stream resolution or not (such as 1080P, 720P, 960H, D1, and HD1).
- Check the camera setup. Please make sure It supports the products of other manufacturers.

33. DDNS registration failed or cannot access the device domain name.

There are following possibilities:

- Check the device is connected to the WAN. Please check the device has got the IP address if the PPPoE can dial. If there is a router, please check the router to make sure the device IP is online.
- Check the corresponding protocol of the DDNS is enabled. Check the DDNS function is OK or not.
- Check DNS setup is right or not. Default Google DNS server is 8.8.8.8, 8.8.5.5. You can use different DNS provided by your ISP.

34. I cannot use the P2P function on my cell phone or the WEB.

There are following possibilities:

- Check the device P2P function is enabled or not. (Main menu->Setting->Network->P2P)
- Check the device is in the WAN or not.
- Check cell phone P2P login mode is right or not.
- It is the specified device P2P login port or not when you are using P2P client.
- Check user name or password is right or not.
- Check P2P SN is right or not. You can use the cell phone to scan the QR code on the device P2P interface (Main Menu > Network > P2P), or you can use the version information of the WEB to confirm. (For some previous series products, the device SN is the main board SN, it may result in error.)

35. I connect the standard definition camera to the device, there is no video output.

There are following possibilities:

- Check the DVR supports standard definition signal or not. Only some series product supports analog standard definition signal, coaxial signal input.
- Check channel type is right or not. For the product supports analog standard definition camera/HD camera, you need to go to the Main Menu > CAMERA > CHANNEL TYPE to select corresponding channel type (such as analog) and then restart the DVR. In this way, the DVR can recognize the analog standard definition.
- Check camera power supplying, or camera data cable connection.

36. I cannot connect to the IP camera.

There are following possibilities:

- Check DVR supports IP channel or not. Only some series products support A/D switch function, it can switch analog channel to the IP channel to connect to the IP camera. From Main Menu > CAMERA > CHANNEL TYPE, select the last channel to switch to the IP channel. Some series product products support IP channel extension, it supports N+N mode.
- Check the IPC and the DVR is connected or not. Please go to the Main Menu > CAMERA > REGISTRATION to search to view the IP camera is online or not. Or you can go to the Main Menu > INFO > NETWORK > Network Test, you can input IP camera IP address and then click the Test button to check you can connect to the IP camera or not.
- Check IP channel setup is right or not (such as IP address, manufacturer, port, user name, password, and remote channel number).

Daily Maintenance

- Please use the brush to clean the board, socket connector and the chassis regularly.
- The device shall be soundly earthed in case there is audio/video disturbance. Keep the device away from the static voltage or induced voltage.
- Please unplug the power cable before you remove the audio/video signal cable, RS232 or RS485 cable.
- Do not connect the TV to the local video output port (VOUT). It may result in video output circuit.
- Always shut down the device properly. Please use the shutdown function in the menu, or you can press the power button in the front panel for at least three seconds to shut down the device. Otherwise it may result in HDD malfunction.
- Please make sure the device is away from the direct sunlight or other heating sources. Please keep the sound ventilation.
- Please check and maintain the device regularly.

The abbreviations in this glossary are related to the Manual.

Abbreviations	Full term
BNC	Bayonet Nut Connector
CBR	Constant Bit Rate
CIF	Common Intermediate Format
DDNS	Dynamic Domain Name Service
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name System
DST	Daylight Saving Time
DVR	Digital Video Recorder
FTP	File Transfer Protocol
HDD	Hard Disk Drive
HDMI	High Definition Multimedia Interface
HTTP	Hyper Text Transfer Protocol
IoT	Internet of Things
IP	Internet Protocol
IVS	Intelligent Video System
LAN	Local Area Network
MAC	Media Access Control
MTU	Maximum Transmission Unit
NTP	Network Time Protocol
NTSC	National Television Standards Committee
ONVIF	Open Network Video Interface Forum
PAL	Phase Alteration Line
PAT	Port Address Translation
POS	Point of Sale
PPPoE	Point-to-Point Protocol over Ethernet
PSS	Professional Surveillance Software
PTZ	Pan Tilt Zoom
RCA	Radio Corporation of American
RTSP	Real Time Streaming Protocol
S.M.A.R.T	Self-Monitoring-Analysis and Reporting Technology
SATA	Serial Advanced Technology Attachment
SMTP	Simple Mail Transfer Protocol
SNMP	Simple Network Management Protocol
ТСР	Transmission Control Protocol
TFTP	Trivial File Transfer Protocol
UDP	User Datagram Protocol
UPnP	Universal Plug and Play
VBR	Variable Bit Rate

Abbreviations	Full term	
VGA	Video Graphics Array	
WAN	Wide Area Network	

Calculate total capacity needed by each DVR according to video recording (video recording type and video file storage time).

<u>Step 1</u> According to Formula (1) to calculate storage capacity q_i that is the capacity of each channel needed for each hour, unit MB.

Formula (1):
$$q_i = d_i \div 8 \times 3600 \div 1024$$

In the formula: d_i means the bit rate, unit Kbit/s

<u>Step 2</u> After video time requirement is confirmed, according to Formula (2) to calculate the storage capacity m_i , which is storage of each channel needed unit MB.

Formula (2):
$$m_i = q_i \times h_i \times D_i$$

In the formula:

- *h_i* means the recording time for each day (hour)
- D_i means number of days for which the video shall be kept
- <u>Step 3</u> According to Formula (3) to calculate total capacity (accumulation) q_T that is needed for all channels in the DVR during **scheduled video recording**.

Formula (3):
$$q_T = \sum_{i=1}^{c} m_i$$

In the formula: c means total number of channels in one DVR

<u>Step 4</u> According to Formula (4) to calculate total capacity (accumulation) q_T that is needed for all channels in DVR during **alarm video recording (including motion detection)**.

Formula (4):
$$q_T = \sum_{i=1}^c m_i imes a\%$$

In the formula: a% means alarm occurrence rate

You can refer to the following table for the file size in one hour per channel. (All the data listed below are for reference only.)

Bit stream size (max)	File size	Bit stream size (max)	File size
96Kbps	42MB	128Kbps	56MB
160Kbps	70MB	192Kbps	84MB
224Kbps	98MB	256Kbps	112MB
320Kbps	140MB	384Kbps	168MB
448Kbps	196MB	512Kbps	225MB

Bit stream size (max)	File size	Bit stream size (max)	File size
640Kbps	281MB	768Kbps	337MB
896Kbps	393MB	1024Kbps	450MB
1280Kbps	562MB	1536Kbps	675MB
1792Kbps	787MB	2048Kbps	900MB

Appendix 3.1 Compatible USB list

Manufacturer	Model	Capacity
Sandisk	Cruzer Micro	512MB
Sandisk	Cruzer Micro	1GB
Sandisk	Cruzer Micro	2GB
Sandisk	Cruzer Freedom	256MB
Sandisk	Cruzer Freedom	512MB
Sandisk	Cruzer Freedom	1GB
Sandisk	Cruzer Freedom	2GB
Kingston	DataTraveler II	1GB
Kingston	DataTraveler II	2GB
Kingston	DataTraveler	1GB
Kingston	DataTraveler	2GB
Maxell	USB Flash Stick	128MB
Maxell	USB Flash Stick	256MB
Maxell	USB Flash Stick	512MB
Maxell	USB Flash Stick	1GB
Maxell	USB Flash Stick	2GB
Kingax	Super Stick	128MB
Kingax	Super Stick	256MB
Kingax	Super Stick	512MB
Kingax	Super Stick	1GB
Kingax	Super Stick	2GB
Netac	U210	128MB
Netac	U210	256MB
Netac	U210	512MB
Netac	U210	1GB
Netac	U210	2GB
Netac	U208	4GB
Teclast	Ti Cool	128MB
Teclast	Ti Cool	256MB
Teclast	Ti Cool	512MB
Teclast	Ti Cool	1GB
Sandisk	Cruzer Micro	2GB
Sandisk	Cruzer Micro	8GB
Sandisk	Ti Cool	2GB
Sandisk	Hongjiao 4GB	
Lexar	Lexar	256MB

Manufacturer Model		Capacity
Kingston	Data Traveler	1GB
Kingston	Data Traveler	16GB
Kingston	Data Traveler	32GB
Aigo	L8315	16GB
Sandisk	250	16GB
Kingston	Data Traveler Locker+	32GB
Netac	U228	8GB

Appendix 3.2 Compatible SD Card list

Manufacturer	Standard	Capacity	Card type
Transcend	SDHC6	16GB	Big
Kingston	SDHC4	4GB	Big
Kingston	SD	2GB	Big
Kingston	SD	1GB	Big
Sandisk	SDHC2	8GB	Small
Sandisk	SD	1GB	Small

Appendix 3.3 Compatible Portable HDD list

Manufacturer	Model	Capacity
YDStar	YDstar HDD box	40GB
Netac	Netac	80GB
Iomega	lomega RPHD-CG" RNAJ50U287	250GB
WD Elements	WCAVY1205901	1.5TB
Newsmy	Liangjian	320GB
WD Elements	WDBAAR5000ABK-00	500GB
WD Elements	WDBAAU0015HBK-00	1.5TB
Seagate	FreeAgent Go(ST905003F)	500GB
Aigo	H8169	500GB

Appendix 3.4 Compatible USB DVD List

Manufacturer	Model
Samsung	SE-S084
BenQ	LD2000-2K4

Appendix 3.5 Compatible SATA DVD List

Manufacturer	Model
LG	GH22NS30

Manufacturer	Model
Samsung	TS-H653 Ver.A
Samsung	TS-H653 Ver.F
Samsung	SH-224BB/CHXH
SONY	DRU-V200S
SONY	DRU-845S
SONY	AW-G170S
Pioneer	DVR-217CH

Appendix 3.6 Compatible SATA HDD List

D NOTE

Please upgrade the DVR firmware to latest version to ensure the accuracy of the table below. Here we recommend HDD of 500GB to 4TB capacity.

Manufacturer	Series	Model	Capacity	Port Mode
Seagate	Video 3.5	ST1000VM002	1TB	SATA
Seagate	Video 3.5	ST2000VM003	2TB	SATA
Seagate	Video 3.5	ST3000VM002	3TB	SATA
Seagate	Video 3.5	ST4000VM000	4TB	SATA
Seagate	SV35	ST1000VX000	1TB	SATA
Seagate	SV35	ST2000VX000	2TB	SATA
Seagate	SV35	ST3000VX000	3TB	SATA
Seagate	SV35 (Support HDD	ST1000VX002	1TB	SATA
	data recovery offered by			
	Seagate)			
Seagate	SV35 (Support HDD	ST2000VX004	2TB	SATA
	data recovery offered by			
	Seagate)			
Seagate	SV35 (Support HDD	ST3000VX004	3TB	SATA
	data recovery offered by			
	Seagate)			
Seagate	SkyHawk HDD	ST1000VX001	1TB	SATA
Seagate	SkyHawk HDD	ST1000VX005	1TB	SATA
Seagate	SkyHawk HDD	ST2000VX003	2TB	SATA
Seagate	SkyHawk HDD	ST2000VX008	2TB	SATA
Seagate	SkyHawk HDD	ST3000VX006	3TB	SATA
Seagate	SkyHawk HDD	ST3000VX010	3TB	SATA
Seagate	SkyHawk HDD	ST4000VX000	4TB	SATA
Seagate	SkyHawk HDD	ST4000VX007	4TB	SATA
Seagate	SkyHawk HDD	ST5000VX0001	5TB	SATA
Seagate	SkyHawk HDD	ST6000VX0001	6TB	SATA
Seagate	SkyHawk HDD	ST6000VX0023	6TB	SATA
Seagate	SkyHawk HDD	ST6000VX0003	6TB	SATA
Seagate	SkyHawk HDD	ST8000VX0002	8TB	SATA
Seagate	SkyHawk HDD	ST8000VX0022	8TB	SATA

Manufacturer	Series	Model	Capacity	Port Mode
Seagate	SkyHawk HDD	ST100000VX0004	10TB	SATA
Seagate	SkyHawk HDD	ST1000VX003	1TB	SATA
	(Support HDD data			
	recovery offered by			
	Seagate)			
Seagate	(Support HDD data	ST2000VX005	2TB	SATA
	recovery offered by			
	Seagate)			
Seagate	(Support HDD data	ST3000VX005	3TB	SATA
	recovery offered by			
	Seagate)			
Seagate	(Support HDD data	ST4000VX002	4TB	SATA
	recovery offered by			
	Seagate)			
Seagate	(Support HDD data	ST5000VX0011	5TB	SATA
	recovery offered by			
	Seagate)			
Seagate	(Support HDD data	ST6000VX0011	6TB	SATA
	recovery offered by			
	Seagate)			
Seagate	(Support HDD data	ST8000VX0012	8TB	SATA
	recovery offered by			
	Seagate)			
WD	WD Green	WD10EURX (EOL)	1TB	SATA
WD	WD Green	WD20EURX (EOL)	2TB	SATA
WD	WD Green	WD30EURX (EOL)	3TB	SATA
WD	WD Green	WD40EURX (EOL)	4TB	SATA
WD	WD Purple	WD10PURX	1TB	SATA
WD	WD Purple	WD20PURX	2TB	SATA
WD	WD Purple	WD30PURX	3TB	SATA
WD	WD Purple	WD40PURX	4TB	SATA
WD	WD Purple	WD50PURX	5TB	SATA
WD	WD Purple	WD60PURX	6TB	SATA
WD	WD Purple	WD80PUZX	8TB	SATA
WD	WD Purple	WD10PURZ	1TB	SATA
WD	WD Purple	WD20PURZ	2TB	SATA
WD	WD Purple	WD30PURZ	3TB	SATA
WD	WD Purple	WD40PURZ	4TB	SATA
WD	WD Purple	WD50PURZ	5TB	SATA
WD	WD Purple	WD60PURZ	6TB	SATA
WD	WD Purple	WD80PURZ	8TB	SATA
WD	WD Purple	WD4NPURX	4TB	SATA
WD	WD Purple	WD6NPURX	6TB	SATA
TOSHIBA	Mars	DT01ABA100V	1TB	SATA
TOSHIBA	Mars	DT01ABA200V	2TB	SATA

Manufacturer	Series	Model	Capacity	Port Mode
TOSHIBA	Mars	DT01ABA300V	3TB	SATA
TOSHIBA	Sonance	MD03ACA200V	2TB	SATA
TOSHIBA	Sonance	MD03ACA300V	3TB	SATA
TOSHIBA	Sonance	MD03ACA400V	4TB	SATA
TOSHIBA	Sonance	MD04ABA400V	4TB	SATA
TOSHIBA	Sonance	MD04ABA500V	5TB	SATA
Seagate	Constellation ES series	ST1000NM0033	1TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST2000NM0033	2TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST3000NM0033	3TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST4000NM0033	4TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST1000NM0055	1TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST2000NM0055	2TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST3000NM0005	3TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST4000NM0035	4TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST6000NM0115	6TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST8000NM0055	8TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST10000NM0016	10TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST4000NM0024	4TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST6000NM0024	6TB	SATA
	(SATA interface)			
Seagate	Constellation ES series	ST1000NM0023	1TB	SATA
Orașela	(SAS interface)		OTD	0.070
Seagate	Constellation ES series	ST2000NM0023	2TB	SATA
Ocerete	(SAS interface)	0700001040000		0.474
Seagate	Constellation ES series	ST3000NM0023	3TB	SATA
Soggeta	(SAS interface)	ST4000NIN40000		CATA
Seagate	Constellation ES series	ST4000NM0023	4TB	SATA
Seagato	(SAS interface) Constellation ES series	ST6000NM0014	6TB	SATA
Seagate	(SAS interface)			SAIA
Seagate	Constellation ES series	ST1000NM0045	1TB	SATA
Juagale	(SAS interface)			

Manufacturer	Series	Model	Capacity	Port Mode
Seagate	Constellation ES series (SAS interface)	ST2000NM0045	2TB	SATA
Seagate	Constellation ES series (SAS interface)	ST3000NM0025	3TB	SATA
Seagate	Constellation ES series (SAS interface)	ST4000NM0025	4TB	SATA
Seagate	Constellation ES series (SAS interface)	ST6000NM0095	6TB	SATA
Seagate	Constellation ES series (SAS interface)	ST6000NM0034	6TB	SATA
Seagate	Constellation ES series (SAS interface)	ST8000NM0075	8TB	SATA
WD	WD RE series (SATA interface)	WD1003FBYZ	1TB	SATA
WD	WD RE series (SATA interface)	WD1004FBYZ (replace WD1003FBYZ)	1TB	SATA
WD	WD RE series (SATA interface)	WD2000FYYZ	2TB	SATA
WD	WD RE series (SATA interface)	WD2004FBYZ (replace WD2000FYYZ)	2TB	SATA
WD	WD RE series (SATA interface)	WD3000FYYZ	3TB	SATA
WD	WD RE series (SATA interface)	WD4000FYYZ	4TB	SATA
WD	WD (SATA interface)	WD2000F9YZ	2TB	SATA
WD	WD (SATA interface)	WD3000F9YZ	3TB	SATA
WD	WD (SATA interface)	WD4000F9YZ	4TB	SATA
WD	WD (SATA interface)	WD4002FYYZ	4TB	SATA
WD	WD (SATA interface)	WD6001FSYZ	6TB	SATA
WD	WD (SATA interface)	WD6002FRYZ	6TB	SATA
WD	WD (SATA interface)	WD8002FRYZ	8TB	SATA
HITACHI	Ultrastar series (SATA interface)	HUS724030ALA640	3TB	SATA
HITACHI	Ultrastar series (SATA interface)	HUS726060ALE610	6TB	SATA
HITACHI	Ultrastar series (SATA interface)	HUH728060ALE600	6TB	SATA
HITACHI	Ultrastar series (SATA interface)	HUH728080ALE600	8TB	SATA
HITACHI	Ultrastar series (SAS interface)	HUS726020AL5210	2TB	SATA
HITACHI	Ultrastar series (SAS interface)	HUS726040AL5210	4TB	SATA

Manufacturer	Series	Model	Capacity	Port Mode
HITACHI	Ultrastar series (SAS	HUS726060AL5210	6TB	SATA
	interface)			
Seagate	Pipeline HD Mini	ST320VT000	320GB	SATA
Seagate	Pipeline HD Mini	ST500VT000	500GB	SATA
Seagate	Pipeline HD Mini	ST2000LM003 (EOL)	2TB	SATA
TOSHIBA	2.5-inch PC series	MQ01ABD050V	500GB	SATA
TOSHIBA	2.5-inch PC series	MQ01ABD100V	1TB	SATA
SAMSUNG	HN-M101MBB	HN-M101MBB (EOL)	1TB	SATA
Seagate	2.5-inch enterprise	ST1000NX0313	1TB	SATA
	series			
Seagate	2.5-inch enterprise	ST2000NX0253	2TB	SATA
	series			

Appendix 4 Compatible CD/DVD Burner List

D NOTE

Please upgrade the DVR firmware to latest version to ensure the accuracy of the table below. And you can use the USB cable with the model recommended to set USB burner.

Manufacturer	Model	Port Type	Туре
Sony	DRX-S50U	USB	DVD-RW
Sony	DRX-S70U	USB	DVD-RW
Sony	AW-G170S	SATA	DVD-RW
Samsung	TS-H653A	SATA	DVD-RW
Panasonic	SW-9588-C	SATA	DVD-RW
Sony	DRX-S50U	USB	DVD-RW
BenQ	5232WI	USB	DVD-RW

Appendix 5 Compatible Displayer List

Please refer to	the fellowin	a tabla form	compotible	diaplay	or list
		y lable ioiiii	companne	uispia	/ 1151.

Brand	Model	Dimension (Unit: inch)
BENQ (LCD)	ET-0007-TA	19-inch (wide screen)
DELL (LCD)	E178FPc	17-inch
BENQ (LCD)	Q7T4	17-inch
BENQ (LCD)	Q7T3	17-inch
HFNOVO (LCD)	LXB-L17C	17-inch
SANGSUNG (LCD)	225BW	22-inch (wide screen)
HFNOVO (CRT)	LXB-FD17069HB	17-inch
HFNOVO (CRT)	LXB-HF769A	17-inch
HFNOVO(CRT)	LX-GJ556D	17-inch
Samsung (LCD)	2494HS	24-inch
Samsung (LCD)	P2350	23-inch
Samsung (LCD)	P2250	22-inch
Samsung (LCD)	P2370G	23-inch
Samsung (LCD)	2043	20-inch
Samsung (LCD)	2243EW	22-inch
Samsung (LCD)	SMT-1922P	19-inch
Samsung (LCD)	T190	19-inch
Samsung (LCD)	T240	24-inch
LG (LCD)	W1942SP	19-inch
LG (LCD)	W2243S	22-inch
LG (LCD)	W2343T	23-inch
BENQ (LCD)	G900HD	18.5-inch
BENQ (LCD)	G2220HD	22-inch
PHILIPS (LCD)	230E	23-inch
PHILIPS (LCD)	220CW9	23-inch
PHILIPS (LCD)	220BW9	24-inch
PHILIPS (LCD)	220EW9	25-inch

Appendix 6 Compatible Switcher

Brand	Model	network working mode	
D-LinK	DES-1016D	10/100M self-adaptive	
D-LinK	DES-1008D	10/100M self-adaptive	
		Five network modes:	
		AUTO	
Ruijie	RG-S1926S	HALF-10M	
Ruijie	KG-319203	• FULL-10M	
		HALF-100M	
		FULL-100M	
H3C	H3C-S1024	10/100M self-adaptive	
TP-LINK	TL-SF1016	10/100M self-adaptive	
TP-LINK	TL-SF1008+	10/100M self-adaptive	

Appendix 7.1 What Is the Surge

Surge is a short current or voltage change during a very short time. In the circuit, it lasts for microsecond. In a 220V circuit, the 5KV or 10KV voltage change during a very short time (about microseconds) can be called a surge. The surge comes from two ways: external surge and internal surge.

- The external surge: The external surge mainly comes from the thunder lightning. Or it comes from the voltage change during the on/off operation in the electric power cable.
- The internal surge: The research finds 88% of the surge from the low voltage comes from the internal of the building such as the air conditioning, elevator, electric welding, air compressor, water pump, power button, duplicating machine and other device of inductive load.

The lightning surge is far above the load level the PC or the micro devices can support. In most cases, the surge can result in electric device chip damage, PC error code, accelerating the part aging, data loss and etc. Even when a small 20 horsepower inductive engine boots up or stops, the surge can reach 3000V to 5000V, which can adversely affect the electronic devices that use the same distribution box.

To protect the device, you need to evaluate its environment, the lighting affection degree objectively. Because surge has close relationship with the voltage amplitude, frequency, network structure, device voltage-resistance, protection level, ground and etc. The thunder proof work shall be a systematic project, emphasizing the all-round protection (including building, transmission cable, device, ground and etc.). There shall be comprehensive management and the measures shall be scientific, reliable, practical and economic. Considering the high voltage during the inductive thundering, the International Electrotechnical Commission (IEC) standard on the energy absorbing step by step theory and magnitude classification in the protection zone, you need to prepare multiple precaution levels.

You can use the lightning rod, lightning strap or the lightning net to reduce the damage to the building, personal injury or the property.

The lightning protection device can be divided into three types:

- Power lightning arrester: There are 220V single-phrase lightning arrester and 380V three-phrase lightening arrester (mainly in parallel connection, sometimes use series connection) You can parallel connect the power lightning arrester in the electric cable to reduce the short-time voltage change and release the surge current. From the BUS to the device, there are usually three levels so that system can reduce the voltage and release the current step by step to remove the thunderstorm energy and guarantee the device safety. You can select the replaceable module type, the terminal connection type and portable socket according to your requirement.
- Signal lightning arrester: This device is mainly used in the PC network, communication system. The connection type is serial connection. Once you connected the signal lightning

arrestor with the signal port, it can cut the channel of the thunderstorm to the device, and on the other hand, it can discharge the current to the ground to guarantee the device proper work. The signal lightning arrester has many specifications, and widely used in many devices such as telephone, network, analog communication, digital communication, cable TV and satellite antenna. For all the input port, especially those from the outdoor, you need to install the signal lightning arrester.

• Antenna feed cable lightning arrester: It is suitable for antenna system of the transmitter or the device system to receive the wireless signal. It uses the serial connection too.


Please note, when you select the lighting arrester, please pay attention to the port type and the earthing reliability. In some important environment, you need to use special shielded cable. Do not parallel connect the thunder proof ground cable with the ground cable of the lightning rod. Please make sure they are far enough and grounded respectively.

Appendix 7.2 The Earthing Modes


We all know the earthing is the most complicated technology in the electromagnetism compatibility design since there is no systematic theory or module. The earthing has many modes, but the selection depends on the system structure and performance.

The following are some successfully experience from our past work.


• **One-point ground:** In the following figure you can see there is a one-point ground. This connection provides common point to allow signal to be transmitted in many circuits. If there is no common point, the error signal transmission occurred. In the one-point ground mode, each circuit is just grounded only and they are connected at the same point. Since there is only one common point, there is no circuit and so, there is no interference.

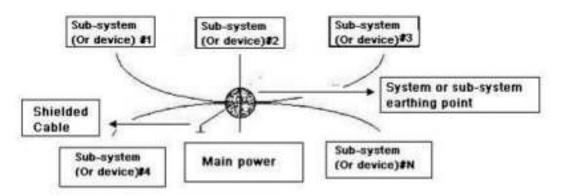

• **Multiple-point ground:** In the following figure, you can see the internal circuit uses the chassis as the common point. While at the same time, all devices chassis use the earthing as the common point. In this connection, the ground structure can provide the lower ground resistance because when there are multiple-point grounds; each ground cable is as short as possible. And the parallel cable connection can reduce the total conductance of the ground conductor. In the high-frequency circuit, you need to use the multiple-point ground mode and each cable needs to connect to the ground. The length shall be less than the 1/20 of the signal wavelength.

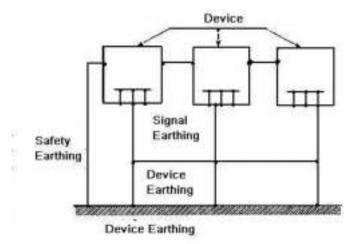

 Mixed ground: The mix ground consists of the feature of the one-point ground and multiple-point ground. For example, the power in the system needs to use the one-point ground mode while the radio frequency signal requires the multiple-point ground. So, you can use the following figure to earth. For the direct current (DC), the capacitance is open circuit and the circuit is one-point ground. For the radio frequency signal, the capacitance is conducive and the circuit adopts multiple-point ground.



When connecting devices of huge size (the device physical dimension and connection cable is big comparing with the wave path of existed interference), then there are possibility of interference when the current goes through the chassis and cable. In this situation, the interference circuit path usually lies in the system ground circuit.

When considering the earthing, you need to think about two aspects: One is the system compatibility, and the other is the external interference coupling into the earth circuit, which results in system error. For the external interference is not regular, it is not easy to resolve.

Appendix 7.3 Thunder Proof Ground Method in the Monitor System


- The monitor system shall have sound thunder proof earthing to guarantee personnel safety and device safety.
- The monitor system working ground resistance shall be less than 1Ω .
- The thunder proof ground shall adopt the special ground cable from the monitor control room to the ground object. The ground cable adopts copper insulation cable or wire and its ground section shall be more than 20mm².
- The ground cable of the monitor system can not short circuit or mixed connected with the strong alternative current cable.
- For all the ground cables from the control room to the monitor system or ground cable of other monitor devices, please use the copper resistance soft cable and its section shall be

more than 4mm².

- The monitor system usually can adopt the one-point ground.
- Please connect the ground end of 3-pin socket in the monitor system to the ground port of the system (protection ground cable)

Appendix 7.4 The Shortcut Way to Check the Electric System by Digital Multimeter

For 220V AC socket, from the top to the bottom, E (ground cable), N (neutral cable), L(live cable). Please refer to the following figure.

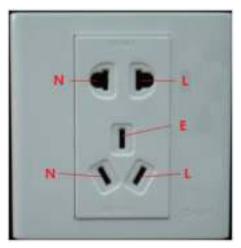

There is a shortcut way to check these thee cables connection are standard or not (not the accurate check).



In the following operations, the multimeter range shall be at 750V.

For E (earth cable)

Turn the digital multimeter to 750V AC, use your one hand to hold the metal end, and then the other hand insert the pen to the E port of the socket. See the following figure. If the multimeter shows 0, then you can see current earth cable connection is standard. If the value is more than 10, then you can know there is inductive current and the earth cable connection is not proper.



For L (live cable)

Turn the digital multimeter to 750V AC, use your one hand to hold the metal end, and then the other hand insert the pen to the L port of the socket. See the following figure. If the multimeter shows 125, then you can see current live cable connection is standard. If the value is less than 60, then you can know current live cable connection is not proper or it is not the live cable at all.





For N (Neutral cable)

Turn the digital multimeter to 750V AC, use your one hand to hold the metal end, and then the other hand insert the pen to the N port of the socket. See the following figure. If the multimeter shows 0, then you can see current N cable connection is standard. If the value is more than 10, then you can see there is inductive current and the neutral cable connection is not proper. If the value is 120, then you can know that you have misconnected the neutral cable to the live cable.




Here we are going to make standard RS232 port and standard RJ45 (T568B). Please refer to the following figure for RJ45 cable definition.



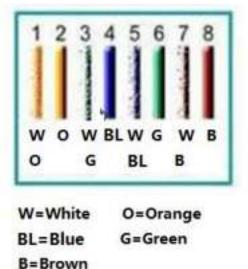


D-DIOWIN

Please refer to the following figure for RS232 pin definition.

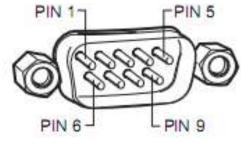

Cross Connection

Please refer to the following figure for connection information.

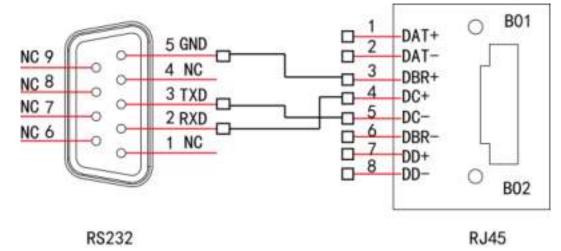

Please refer to the following table for detailed crossover cable connection information.

RJ45 (T568B)	RJ45 (Network cable)	RS232	Signal Description
4	Blue	2	RXD
5	White and blue	3	TXD
3	White and green	5	GND

Straight Connection

Please refer to the following figure for straight cable connection information.



RS232

RJ45

Please refer to the following table for straight connection information.

RJ45 (T568B)	RJ45 (Network cable)	RS232	Signal Description
4	Blue	3	RXD
5	White and blue	2	TXD
3	White and green	5	GND

ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

Address: No.1199, Bin'an Road, Binjiang District, Hangzhou, P.R. China Postcode: 310053 Tel: +86-571-87688883 Fax: +86-571-87688815 Email: overseas@dahuatech.com Website: www.dahuasecurity.com