
WEJOIN www.wejoin.com.cn

让我们一起努力

Quick Installation Guide

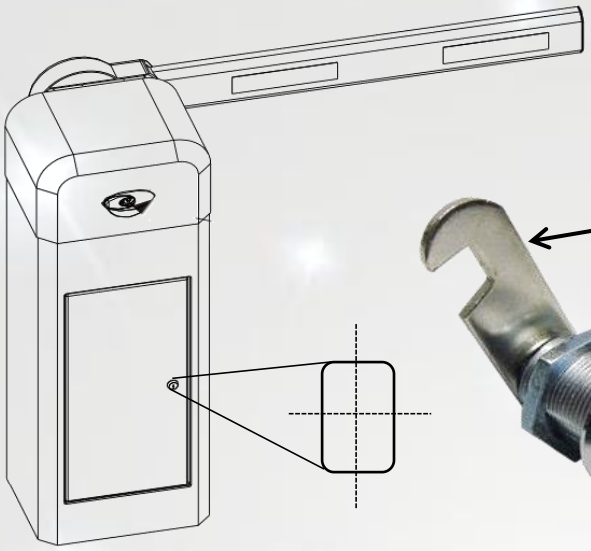

Please read this manual before using this product.

Model: **WEJOIN WJBLK01**



Installation Instructions

- Separate the cylinder from the hook/cam.
- Remove the lock nut.
- Pass the lock body through the hole in the cabinet door.
- Attach the hexagonal lock nut to secure the lock in place.
- Position the hook or latch in the correct direction and tighten the screw.
- The key rotation to open and close is 90°.
- Most cabinet locks are designed for 19 mm thickness and require a 16.5 mm drilling hole.

Below are illustrative images of the installation of the vehicle barrier lock.



