

Magnetic Lock (500kg)







Specification


Model	Size(unit:mm)	Voltage	Current	Holding Force	Signal Output	Door
YM-500	265Lx67Wx39H	12/24VDC	12V/420mA 24V/210mA	500kg(1200Lbs)	No	Single Door
YM-500D	530Lx67Wx39H	12/24VDC	12V/420mAx2 24V/210mAx2	500kgx2(1200Lbsx2)	No	Double Door
YM-500(LED)	265Lx67Wx39H	12/24VDC	12V/420mA 24V/210mA	500kg(1200Lbs)	Yes	Single Door
YM-500D(LED)	530Lx67Wx39H	12/24VDC	12V/420mAx2 24V/210mAx2	500kgx2(1200Lbsx2)	Yes	Double Door
YM-500T(LED)	265Lx67Wx39H	12/24VDC	12V/420mA 24V/210mA	500kg(1200Lbs)	Yes	Single Door
YM-500TD(LED)	530Lx67Wx39H	12/24VDC	12V/420mAx2 24V/210mAx2	500kgx2(1200Lbsx2)	Yes	Double Door
YM-500BZ	265Lx67Wx39H	12/24VDC	12V/420mA 24V/210mA	500kg(1200Lbs)	Yes	Single Door
YM-500DBZ	530Lx67Wx39H	12/24VDC	12V/480mAx2 24V/240mAx2	500kgx2(1200Lbsx2)	Yes	Double Door

Diagram(unit:mm)

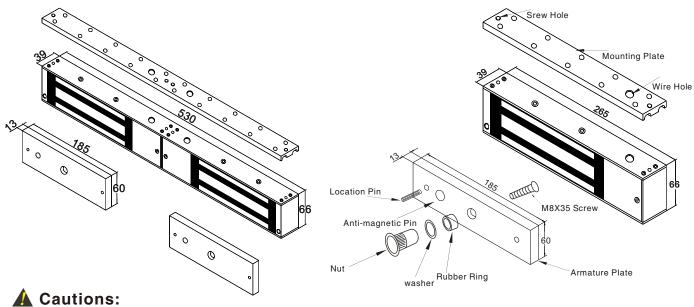


- A. The screw of armature plate should not be fixed too tight. Proper elasticity should be guaranteed for the rubber ring so that the armature plate can adjust itself to the appropriate position.
- B. Check the jumper's position before connecting. Figure out it represents 12VDC or 24VDC.

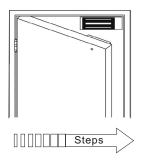


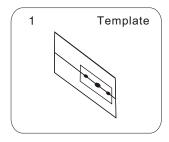


Fold the plate to 90°.

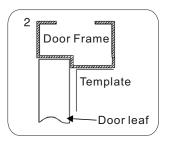


Close the door first, then place the upper side of template on door frame, while adjust the left side next to the door leaf.

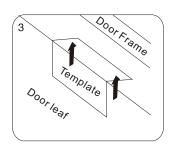

Mark screw positions of armature plate and magnetic lock on door leaf and door frame respectively.

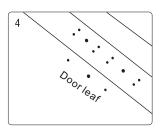

Drill holes based on the marked positions.

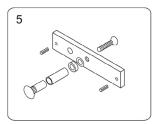

Make a combination based on the picture.




Drill a hole Inside: Diameter is 8mm Outside: Diameter is 16mm Outside: Diameter is 12.7mm the plastic straight pin




Drill a hole Inside: Diameter is 8mm




Inside:Drill a hole diameter is 8mm folding

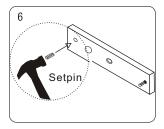


Strike the pin into the armature plate slightly (to avoid movement).

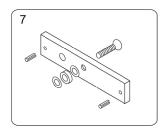


Make a combination based on the picture(add washer accordingly). The rubber ring must be added.

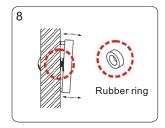


Place the rubber ring between armature plate and door leaf.

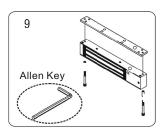


Use Allen key to remove the mounting plate from lock body.

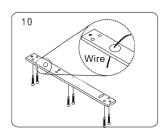


Fix the mounting plate on the door frame according to the holes drilled earlier.

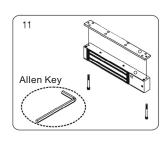

Use Allen key to screw the lock body on the mounting plate.

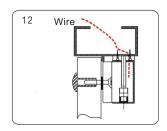

Close the door to test holding force. The angle between armature plate and magnetic lock can be adjusted by adding or reducing washers.

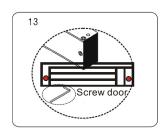


After all the appropriate procedures, the holding force can be maximized. Finally, fix the tamper screw.


Different brackets are available according to different types of doors. For example, narrow door, frameless glass door and inward opening door.

L Bracket-For outward opening door

When the door frame thickness is less than 42mm, L bracket is needed.

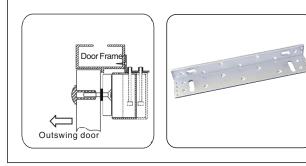


ZL Bracket-For inward opening door For inward opening door, ZL bracket is needed.

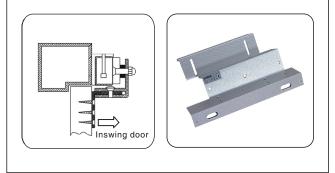

U Bracket


For the frameless glass door. U bracket is needed.

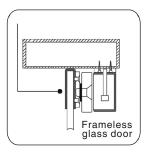




I Bracket for armature plate

When the door frame is too thick, I bracket is needed.

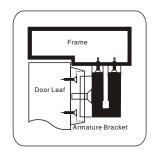





Installation Instruction

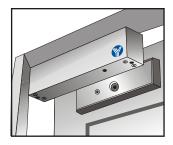


Installation

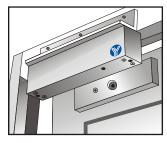

Installation

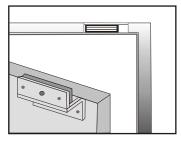

Demonstration of I Bracket Demonstration of L Bracket Demonstration of ZL Bracket Installation

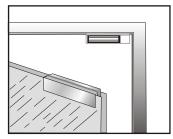

Demonstration of UL Bracket Installation

Circuit Board Diagram

A.12VDC Input:

Required power 0.42Amp(Minimunm).

Connect the positive(+)lead from a 12VDC power source to V +.

Connect the ground(-)lead from a 12VDC power source to V -.

Check jumper for 12 VDC operation.


B.24VDC Input:

Required power 0.21Amp(Minimunm).

Connect the positive(+)lead from a 24VDC power source to V +.

Connect the ground(-)lead from a 24VDC power source to V -.

Check jumper for 24 VDC operation.

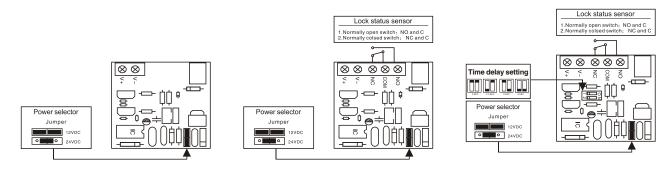

YM-500, YM-500D

YM-500(LED), YM-500D(LED)

YM-500T(LED), YM-500TD(LED)

Wire Connection

